

IMPORTANT

READ CAREFULLY BEFORE USE

KEEP SAFE TO CONSULT AT A LATER DATE



HERCULES



BOSCH

Translation of original operating instructions for
HERCULES Pedelects with BOSCH Intuvia on-board
computer



E-Imperial 180 S 10 | E-Imperial 180 S F5 | E-Imperial 180 S R5 F5 | E-Imperial I-10 F5
E-Imperial I-F5 F5 | E-Imperial I-R5 F5 | Futura Comp I-11 F5 | Futura Comp I-12 F5
Futura Comp I-F5 F5 | Futura Compact 10 F5 | Futura Compact F5 F5
Futura Compact F8 F5 | Futura Compact R5 F5 | Futura Compact R8 F5 | Futura Fold I-10 F5
Futura Fold I-F5 Belt F5 | Futura Fold I-F8 F5 | Futura Fold I-F8 Belt F5 | Futura Fold I-R5 Belt F5
Futura Fold I-R8 F5 | Futura Fold I-R8 Belt | Futura HD I-12 F5 | Futura HD I-F360 F5 | Futura Pro I-F14
Futura Pro I-F360+ F5 | Futura Sport I-10 F5 | Montfoort F7 F5 | Montfoort F7 Belt F5 | Montfoort I-F8 F5
Rob Fold 10 F5 | Rob Fold F5 F5 | Rob Fold F8 | Rob Fold R5 F5 | Rob Fold R8 F5
Robert/a Deluxe I-F8 | Robert/a Deluxe I-R8 F5 | Robert/a F7 Active Plus F5 | Robert/a I-R8 F5 |
Robert/a I-R8 Belt | Robert/a Pro I-F8 F5 | Robert/a Pro I-R5 F5 | Robert/a Pro I-R8 F5 |
Robert/a R7 Active Plus

21-Y-0005, 21-Y-0006, 22-P-0001...22-P-0017, 22-Q-0001...22-Q-0004, 22-Q-0010, 22-Q-0011,
22-Q-0015, 22-Q-0016, 22-Q-0023...22-Q-0033, 22-Q-0074...22-Q-0089, 22-Q-0093...22-Q-0096,
22-Q-0104...22-Q-0108, 22-Y-0002...22-Y-0010, 22-Y-0014

Contents

1	About these operating instructions	
1.1	Manufacturer	11
1.2	Laws, standards and directives	11
1.3	Language	11
1.4	For your information	11
1.4.1	Warnings	11
1.4.2	Markups	11
1.5	Type number and model	12
1.6	Frame number	13
1.7	Identifying the operating instructions	13
1.8	Aim of the operating instructions	14
2	Safety	
2.1	Residual risks	15
2.1.1	Risk of fire and explosion	15
2.1.1.1	Rechargeable battery	15
2.1.1.2	Overheated charger	15
2.1.1.3	Hot components	15
2.1.2	Electric shock	16
2.1.2.1	Damage	16
2.1.2.2	Water penetration	16
2.1.2.3	Condensation	16
2.1.3	Risk of a crash	16
2.1.3.1	Incorrect quick release setting	16
2.1.3.2	Incorrect tightening torque	16
2.1.3.3	Incorrect component	16
2.1.4	Risk of amputation	16
2.1.5	Key breaking off	16
2.2	Toxic substances	17
2.2.1	Brake fluid	17
2.2.2	Suspension oil	17
2.2.3	Lubrication oil	17
2.2.4	Defective battery	17
2.3	Requirements for riders	17
2.4	Vulnerable groups	17
2.5	Personal protective equipment	17
2.6	Safety guards	17
2.7	Safety markings and safety instructions	18
2.8	What to do in an emergency	18
2.8.1	Dangerous situation in road traffic	18
2.8.2	Leaked brake fluid	18
2.8.3	Battery vapours emitted	19
2.8.4	Battery fire	19
2.8.5	Oil and lubricant leaks from the rear frame damper	19
2.8.6	Oil and lubricant leaks from the fork	19
3	Description	
3.1	Proper use	20
3.1.1	Improper use	21
3.1.2	Permitted total weight (PTW)	22
3.1.3	Environmental requirements	24
3.2	Nameplate	26
3.3	Components	27
3.3.1	Overview	27
3.3.2	Chassis	28

3.3.2.1	Frame	28
3.3.2.2	Steering system	28
3.3.2.3	Steering headset	28
3.3.2.4	Stem	28
3.3.2.5	Handlebars	28
3.3.2.6	Fork	28
3.3.3	Suspension	29
3.3.3.1	Rigid fork	29
3.3.3.2	Suspension fork	29
3.3.4	Wheel	33
3.3.4.1	Tyres	33
3.3.4.2	Rim	33
3.3.4.3	Valve	33
3.3.4.4	Spoke	34
3.3.4.5	Spoke nipples	34
3.3.4.6	Hub	34
3.3.5	Braking system	35
3.3.5.1	Mechanical brake	35
3.3.5.2	Hydraulic brake	35
3.3.5.3	Rim brake	36
3.3.5.4	Disc brake	37
3.3.5.5	Back-pedal brake	38
3.3.6	Seat post	39
3.3.6.1	Patent seat post	39
3.3.6.2	Suspension seat post	39
3.3.7	Mechanical drive system	40
3.3.7.1	Chain drive layout	40
3.3.7.2	Belt drive layout	40
3.3.8	Electric drive system	41
3.3.8.1	Motor	41
3.3.8.2	Rechargeable battery	41
3.3.8.3	Frame battery	42
3.3.8.4	Pannier rack battery	42
3.3.8.5	Integrated battery	43
3.3.8.6	Charger	43
3.3.9	Lighting	43
3.3.10	On-board computer	44
3.3.10.1	USB port	44
3.3.11	Control panel	44
3.4	Description of controls and screens	45
3.4.1	Handlebars	45
3.4.2	On-board computer	46
3.4.2.1	Riding light indicator	46
3.4.2.2	Level of assistance indicator	46
3.4.2.3	Charge level indicator (on-board computer)	47
3.4.2.4	Indicator for motor power used	47
3.4.2.5	Gear recommendation indicator	47
3.4.2.6	Tachometer indicator	48
3.4.2.7	Function display	48
3.4.2.8	Journey information	48
3.4.2.9	Additional journey information	48
3.4.2.10	System settings and data	49
3.4.2.11	Additional system settings	50
3.4.2.12	System message	51
3.4.3	Control panel	52
3.4.4	Gear shift	53
3.4.4.1	SHIMANO hub gear	53
3.4.4.2	ENVILOLO hub gear	54
3.4.4.3	ROHLOFF E-14 hub gear	55

3.4.5	Hand brake	56
3.4.6	Fork lock	57
3.4.6.1	SR Suntour	57
3.4.7	Battery level indicator (battery)	58
3.4.7.1	Battery level indicator (battery)	58
3.5	Technical data	59
3.5.1	Pedelec	59
3.5.2	Emissions	59
3.5.3	Tightening torque	59
3.5.4	Bicycle lighting	59
3.5.5	Intuvia on-board computer	59
3.5.5.1	USB port	59
3.5.6	Motor	60
3.5.6.1	Active Line	60
3.5.6.2	Active Line Plus	60
3.5.6.3	Performance Line	60
3.5.6.4	Performance Line CX	60
3.5.7	Rechargeable battery	60
3.5.7.1	PowerPack 300	60
3.5.7.2	PowerPack 400	60
3.5.7.3	PowerPack 500	60
3.5.7.4	PowerTube 400	61
3.5.7.5	PowerTube 500 battery	61
3.5.7.6	PowerTube 625 battery	61
3.5.8	BOSCH Pedelec ABS BAS100	61
4	Transporting and storing	
4.1	Weight and dimensions for transportation	62
4.2	Designated handles, lifting points	64
4.3	Transportation	65
4.3.1	Using the brake transport securing system	65
4.3.2	Transporting the pedelec	65
4.3.3	Shipping a pedelec	65
4.3.4	Transporting the battery	65
4.3.5	Shipping the battery	65
4.4	Storing	66
4.4.1	Break in operation	66
4.4.1.1	Preparing a break in operation	66
4.4.1.2	Carrying out a break in operation	66
5	Assembly	
5.1	Unpacking	67
5.2	Required tools	67
5.3	Commissioning	68
5.3.1	Checking the battery	68
5.3.2	Preparing the battery	69
5.3.2.1	Retrofitting the PowerTube adapter	69
5.3.2.2	Fit battery cover onto Bosch PowerTube 625 battery (horizontal)	71
5.3.2.3	Fit battery cover onto Bosch PowerTube 500 battery (horizontal)	72
5.3.3	Preparing the wheel	73
5.3.4	Installing the wheel in the SUNTOUR fork	74
5.3.4.1	Screw-on axle (12AH2 and 15AH2)	74
5.3.4.2	20 mm cross axle	75
5.3.4.3	Q-LOC quick release	77
5.3.5	Preparing the LIMOTEC seat post	78
5.3.6	Fitting the pedals	79
5.3.7	Checking the stem and handlebars	80
5.3.7.1	Checking the connections	80
5.3.7.2	Checking stem is firmly in position	80

5.3.7.3	Checking the headset backlash	80
5.4	Pedelec sale	80
6	Operation	
6.1	Risks and hazards	81
6.2	Tips for a greater range	83
6.3	Error message	84
6.3.1	On-board computer	84
6.3.2	Rechargeable battery	87
6.4	Instruction and customer service	88
6.5	Adjusting the pedelec	88
6.5.1	Preparing	88
6.5.2	Pedelec adjustment procedure	89
6.5.3	Determining the sitting position	90
6.5.4	Adjusting the saddle	92
6.5.4.1	Straightening the saddle	92
6.5.4.2	Eightpins suspension seat post	92
6.5.4.3	Adjusting the saddle height	92
6.5.4.4	Setting the saddle height with the remote control	93
6.5.4.5	Adjusting the saddle position	94
6.5.4.6	Adjusting the saddle tilt	94
6.5.4.7	Checking saddle stability	94
6.5.4.8	Adjusting the BY.SCHULZ saddle spring	95
6.5.5	Handlebars	97
6.5.5.1	Handlebar width	97
6.5.5.2	Hand position	97
6.5.5.3	Adjusting the handlebars	97
6.5.6	Stem	98
6.5.6.1	Adjusting the handlebar height with quick release	98
6.5.6.2	Setting the quill stem	99
6.5.6.3	Adjusting the Ahead stem	99
6.5.6.4	Adjusting the angle-adjustable stem	100
6.5.7	Ergonomic handles	101
6.5.7.1	Checking handlebar stability	101
6.5.8	Tyres	102
6.5.9	Brake	103
6.5.9.1	Brake handle position	103
6.5.9.2	Brake handle tilt angle	103
6.5.9.3	Determining the grip distance	104
6.5.9.4	Grip distance on a MAGURA disc brake lever	105
6.5.9.5	Grip distance on a MAGURA HS22 brake lever	106
6.5.9.6	Grip distance on a MAGURA HS33 brake lever	107
6.5.9.7	Grip distance on a SHIMANO ST-EF41 brake lever	108
6.5.9.8	Grip distance on a SHIMANO ST-EF41 brake lever	109
6.5.9.9	Pressure point on a MAGURA brake lever	110
6.5.9.10	Retracting the brake linings	111
6.5.10	Suspension	112
6.5.11	Fork sag	112
6.5.11.1	Adjusting the Suntour fork steel suspension	113
6.5.11.2	Adjusting the Suntour fork air suspension	114
6.5.12	Fork rebound damping	115
6.5.12.1	Adjusting the Suntour fork rebound damping	116
6.5.13	Lighting	117
6.5.13.1	Adjusting the lights	117
6.6	Accessories	119
6.6.1	Child seat	119
6.6.2	Trailer	120
6.6.3	Pannier rack	120
6.7	Personal protective equipment and accessories for road safety	121

6.8	Before each ride	121
6.9	Raising the kickstand	122
6.10	Using the pannier rack	122
6.11	Using the saddle	122
6.11.1	Using the leather saddle	122
6.12	Using the pedals	123
6.13	Using the multifunctional handlebars or bar ends	123
6.14	Using leather handles	123
6.15	Using the bell	123
6.16	Using the battery	124
6.16.1	Frame battery	124
6.16.1.1	Removing the frame battery	124
6.16.1.2	Inserting the frame battery	124
6.16.2	Pannier rack battery	124
6.16.2.1	Removing the pannier rack battery	124
6.16.2.2	Inserting the pannier rack battery	124
6.16.3	Integrated battery	125
6.16.3.1	Removing the integrated battery	125
6.16.3.2	Inserting the integrated battery	125
6.16.4	Charging the battery	126
6.16.5	Charging the dual battery	126
6.16.5.1	Charging process when two batteries are used	126
6.16.5.2	Charging process when one battery is used	126
6.16.6	Using double battery model with a single battery only	127
6.16.7	Waking the battery	127
6.17	Using pedelec with the electric drive system	128
6.17.1	Switching on the electric drive system	128
6.17.2	Switching off the electric drive system	128
6.18	Using the on-board computer	129
6.18.1	Attaching the on-board computer	129
6.18.1.1	Removing the on-board computer	129
6.18.1.2	Attaching the on-board computer	129
6.18.2	Securing the on-board computer against removal	130
6.18.3	Charging the on-board computer battery	130
6.18.3.1	Charging on the pedelec	130
6.18.3.2	Charging using the USB port	130
6.18.4	Using the USB port	131
6.18.5	Switching on the on-board computer	131
6.18.6	Switching off the on-board computer	131
6.18.7	Using the push assist system	131
6.18.8	Using the riding light	132
6.18.9	Selecting the level of assistance	132
6.18.10	Journey information	132
6.18.10.1	Switching the displayed journey information	132
6.18.10.2	Resetting the journey information	132
6.18.11	Changing the system settings	132
6.19	Brake	133
6.19.1	Using the brake lever	133
6.19.2	Using the back-pedal brake	133
6.20	Suspension and damping	134
6.20.1	Adjusting the Suntour compression adjuster	135
6.21	Gear shift	136
6.21.1	Using the derailleur gears	136
6.21.2	Using a SHIMANO hub gear	137
6.21.3	Using eShift	138
6.21.3.1	eShift with SHIMANO DI2 automatic hub gears	138
6.21.3.2	eShift with manual SHIMANO DI2 hub gears	138
6.21.3.3	eShift with SHIMANO DI2 automatic hub gears	138
6.21.4	Using an ENVIOLLO gear shift gear	139

6.21.4.1	Selecting automatic or manual shift	139
6.21.5	Switching gear in automatic mode	139
6.21.5.1	Switching gear manually	140
6.21.6	Using a ROHLOFF gear shift	141
6.21.6.1	Switching gears individually	141
6.21.6.2	Switching through several gears at the same time	141
6.21.6.3	Adjusting the start gear	142
6.22	Folding	143
6.22.1	Folding the pedelec	143
6.22.1.1	Folding up the pedal	143
6.22.1.2	Folding up the stem, version I	143
6.22.1.3	Folding up the stem, version II	144
6.22.1.4	Pushing in the seat post	144
6.22.1.5	Folding up the frame	144
6.22.2	Preparing the bicycle so that it is ready to ride again	145
6.22.2.1	Folding out the frame	145
6.22.2.2	Folding out the pedal	145
6.23	Parking	146
7	Cleaning, servicing and maintenance	
7.1	Before each ride	151
7.1.1	Checking the guards	151
7.1.2	Checking the frame	151
7.1.3	Checking the fork	151
7.1.4	Checking the rear frame damper	151
7.1.5	Checking the pannier rack	151
7.1.6	Checking the guards	151
7.1.7	Checking wheel concentricity	151
7.1.8	Checking the quick releases	151
7.1.9	Checking the suspension seat post	151
7.1.10	Checking the bell	152
7.1.11	Checking the handles	152
7.1.12	Checking the USB cover	152
7.1.13	Checking the lighting	152
7.1.14	Checking the brake	152
7.2	After each ride	153
7.2.1	Cleaning the lights and reflectors	153
7.2.2	Cleaning the suspension fork	153
7.2.3	Caring for the suspension fork	153
7.2.4	Cleaning the pedals	153
7.2.5	Cleaning the brake	153
7.2.6	Cleaning the suspension seat post	153
7.2.7	Cleaning the rear frame damper	153
7.3	Basic cleaning	154
7.3.1	On-board computer and control panel	154
7.3.2	Rechargeable battery	154
7.3.3	Motor	154
7.3.4	Frame, fork, pannier rack, guards and kickstand	155
7.3.5	Stem	155
7.3.6	Handlebars	155
7.3.7	Handles	155
7.3.7.1	Leather handles	155
7.3.8	Seat post	155
7.3.9	Saddle	155
7.3.9.1	Leather saddle	156
7.3.10	Tyres	156
7.3.11	Spokes and spoke nipples	156
7.3.12	Hub	156
7.3.13	Switching elements	156

7.3.13.1	Shifter	156
7.3.14	Cassette, chain wheels and front derailleur	156
7.3.15	Brake	157
7.3.15.1	Brake lever	157
7.3.16	Brake disc	157
7.3.17	Belt	157
7.3.18	Chain	157
7.3.18.1	Chain with all-round chain guard	157
7.4	Servicing	158
7.4.1	Frame	158
7.4.2	Fork	158
7.4.3	Pannier rack	159
7.4.4	Mudguard	159
7.4.5	Servicing the kickstand	159
7.4.6	Stem	159
7.4.7	Handlebars	159
7.4.8	Handle	159
7.4.8.1	Rubber handles	159
7.4.8.2	Leather handle	160
7.4.9	Seat post	160
7.4.9.1	Suspension seat post	160
7.4.9.2	Carbon seat post	160
7.4.10	Leather saddle	160
7.4.11	Hub	160
7.4.12	Spoke nipples	160
7.4.13	Rim	160
7.4.14	Gear shift	161
7.4.14.1	Rear derailleur articulated shafts and jockey wheels	161
7.4.14.2	Shifter	161
7.4.15	Pedal	161
7.4.16	Caring for the chain	161
7.4.16.1	Caring for the chain and all-round chain guard	161
7.4.17	Caring for the brake	162
7.4.17.1	Caring for the brake	162
7.4.18	Lubricating the Eightpins seat post tube	162
7.5	Maintenance	163
7.5.1	Wheel	163
7.5.1.1	Checking the tyre pressure	163
7.5.1.3	Checking the rims	166
7.5.1.4	Checking the nipple holes	166
7.5.1.5	Checking the nipple well	166
7.5.1.6	Checking the rim hooks	166
7.5.1.7	Checking the spokes	166
7.5.2	Checking the brake system	167
7.5.2.1	Checking the hand brake	167
7.5.2.2	Checking the hydraulic system	167
7.5.2.3	Checking the Bowden cables	167
7.5.2.4	Checking the disc brake	168
7.5.2.5	Checking the back-pedal brake	169
7.5.2.6	Checking the rim brake	170
7.5.3	Checking the lighting	171
7.5.4	Checking the stem	172
7.5.5	Check the handlebars	172
7.5.6	Checking the saddle	172
7.5.7	Checking the seat post	172
7.5.8	Checking the chain	172
7.5.9	Checking the chain and belt tension	172
7.5.9.1	Checking the derailleur gears	173
7.5.9.2	Checking the hub gear	173

7.5.10	Checking the gear shift	173
7.5.10.1	Electric gear shift	173
7.5.10.2	Mechanical gear shift	173
7.5.10.3	Checking the derailleur gears	173
7.5.11	Adjusting gear shift	174
7.5.11.1	ROHLOFF hub	174
7.5.12	Bowden-cable-operated gear shift, single-cable	174
7.5.13	Bowden-cable-operated gear shift, dual-cable	174
7.5.14	Bowden-cable-operated twist grip, dual-cable	175
7.5.15	Checking kickstand stability	175
8	Maintenance	
8.1	Initial inspection	176
8.2	Maintenance	176
8.3	Component-specific maintenance tasks	176
8.4	Carry out initial inspection	179
8.5	Maintenance instructions	180
8.5.1	Servicing the frame	187
8.5.1.1	Servicing the carbon frame	187
8.5.2	Checking the pannier rack	187
8.5.3	Servicing axle with quick release	187
8.5.4	Maintaining the stem	188
8.5.5	Servicing the gear hub	188
8.5.5.1	Adjusting the hub with cone bearing	188
8.5.6	Servicing the steering headset	189
8.5.7	Servicing the fork	189
8.5.7.1	Servicing the carbon suspension fork	190
8.5.7.2	Servicing the suspension fork	190
8.5.8	Servicing seat post	191
8.5.8.1	Servicing the carbon seat post	191
8.5.8.2	by.schulz suspension seat post	192
8.5.8.3	Suntour suspension seat post	192
8.5.8.4	Eightpins NGS2 seat post	193
8.5.8.5	Eightpins H01 seat post	199
8.5.9	Rear frame damper	203
8.5.9.1	FOX component-specific maintenance	204
9	Troubleshooting, fault clearance and repair	
9.1	Troubleshooting and fault clearance	205
9.1.1	Drive system or on-board computer does not start up	205
9.1.2	Error message	205
9.1.3	Assistance function errors	206
9.1.4	Battery error	207
9.1.5	On-board computer error	208
9.1.6	Lighting does not work	208
9.1.7	Other drive system errors	209
9.1.8	Suntour suspension fork	210
9.1.8.1	Rebound too fast	210
9.1.8.2	Rebounding too slowly	211
9.1.8.3	Suspension too soft on inclines	212
9.1.8.4	Excessively hard damping on bumps	213
9.2	Repair	214
9.2.1	Original parts and lubricants	214
9.2.2	Replacing the lighting	214
9.2.3	Setting the front light	214
9.2.4	Checking tyre clearance	214
10	Recycling and disposal	

10.1	Removal of waste guidelines	215
11.1	Assembly report	217
11.2	Maintenance instructions	219
11.3	Parts list	223
11.3.1	E-Imperial I-10	223
11.3.2	E-Imperial I-F5	224
11.3.3	E-Imperial I-R5	225
11.3.4	E-Imperial 180 S F5	226
11.3.5	E-Imperial 180 S R5	227
11.3.6	E-Imperial 180 S 10	228
11.3.7	Futura Comp I-F5	229
11.3.8	Futura Comp I-11	230
11.3.9	Futura Comp I-12	231
11.3.10	Futura Compact F5	232
11.3.11	Futura Compact F8	233
11.3.12	Futura Compact R5	234
11.3.13	Futura Compact R8	235
11.3.14	Futura Compact 10	236
11.3.15	Futura Fold Carbon I-10	237
11.3.16	Futura Fold I-F5 Belt	238
11.3.17	Futura Fold I-F8	239
11.3.18	Futura Fold I-F8 Belt	240
11.3.19	Futura Fold I-R8	241
11.3.20	Futura Fold I-R8 Belt	242
11.3.21	Futura HD I-F360	243
11.3.22	Futura Pro I-F14	244
11.3.23	Futura Pro I-F360+	245
11.3.24	Futura Sport I-10	246
11.3.25	Montfoort F7	247
11.3.26	Montfoort F7 Belt	248
11.3.27	Pasero Comp I-12	249
11.3.28	Rob Fold F5	250
11.3.29	Rob Fold F8	251
11.3.30	Rob Fold R5	252
11.3.31	Rob Fold R8	253
11.3.32	Rob Fold 10	254
11.3.33	Robert/a deLuxe I-F8	255
11.3.34	Robert/a deLuxe I-R8	256
11.3.35	Robert/a F7 Active Plus	257
11.3.36	Robert/a I-R8	258
11.3.37	Robert/a I-R8 Belt	259
11.3.38	Robert/a Pro I-R5	260
11.3.39	Robert/a Pro I-R8	261
11.4	Charger operating instructions	262
12	Glossary	
12.1	Abbreviations	274
12.2	Simplified terms	274
13	Appendix	
I.	Translation of the original EC/EU Declaration of Conformity	275
II.	Declaration of conformity for incomplete machine	278
14	Keyword index	

Thank you for your trust!

HERCULES pedelecs are premium quality bicycles. You have made an excellent choice. Your specialist dealer will provide you with guidance and instruction and assemble your product. Your specialist dealer will also be happy to assist you in the future, whether you require maintenance, conversion or repair.

You are receiving these operating instructions with your new pedelec. Please take time to become familiar with your new pedelec. Use the tips and suggestions in the operating instructions. They will help you to enjoy your pedelec for a long time to come. We hope you have fun and wish you well on all of your rides!

Download the operating instructions onto your phone at the following link, so that you can use them when you are out riding:



<https://www.hercules-bikes.de/de/de/index/downloads.html>.

Copyright

© HERCULES GmbH

Distribution or reproduction of these operating instructions and utilisation or communication of their content is prohibited unless expressly approved. Any infringement will render the offender liable for compensation. All rights reserved in the event that a patent, utility model or industrial design is registered.

Subject to internal changes

The information contained in these *operating instructions* are the approved technical specifications at the time of printing. In addition to the functions described here, software changes may be introduced to rectify errors and extend functions at any time.

Any significant changes are included in a new published version of the operating instructions. All changes to the operating instructions are published on the following website:

<https://www.hercules-bikes.de/de/de/index/downloads.html>

Editing

Text and images:
ZEG Zweirad-Einkaufs-Genossenschaft eG
Longericher Strasse 2
50739 Köln, Germany

Translation

RKT Übersetzungs- und Dokumentations-GmbH
Bahnhofstrasse 27
78713 Schramberg, Germany

In case of any questions or problems regarding these operating instructions, please contact:

tecdoc@hercules-bike.de

1 About these operating instructions

1.1 Manufacturer

HERCULES GMBH
Longericher Straße 2
50739 Köln, Germany

Tel.: +49 4473 92617 0
Fax: +49 4473 92617 29
Email: info@hercules-bikes.de

1.2 Laws, standards and directives

The *operating instructions* comply with the essential requirements specified in:

- Machinery Directive 2006/42/EC
- Electromagnetic Compatibility Directive 2014/30/EU
- ISO 20607:2018 Safety of machinery– Operating instructions– General drafting principles
- EN 15194:2018 Cycles – Electrically power assisted cycles – pedelec bicycles
- EN 11243:2016, Cycles – Luggage carriers for bicycles – Requirements and test methods
- ISO 17100:2016-05 Translation Services – Requirements for translation services.

1.3 Language

The *original operating instructions* are written in German. A translation is invalid without the *original operating instructions*.

1.4 For your information

Different markings are used in the operating instructions to make them easier to read.

1.4.1 Warnings

Warnings indicate hazardous situations and actions. You will find three warnings in the operating instructions:



WARNING

May lead to serious or even fatal injuries if ignored. Medium-risk hazard.



CAUTION

May lead to minor or moderate injuries if ignored. Low-risk hazard.

Notice

May lead to material damage if ignored.

1.4.2 Markups

You will find ten text markups in the operating instructions:

Stylised form	Use
<i>Italics</i>	Glossary term, first mention in section
<u>Underlined in blue</u>	Link
<u>Underlined in grey</u>	Cross references
✓	Requirements
▶	Instructions for actions without specific order
1	Instructions for actions in specified order
⇒	Result of action step
BLOCKED	On-board computer indicators
•	Bulleted lists
<u>Only applies to pedelecs with this equipment</u>	Each type has a different kind of equipment. A note beneath the heading indicates components which can be used as an alternative.

Table 1: Markups

1.5 Type number and model

These operating instructions are an integral part of pedelecs with the type numbers:

Type no.	Model	Pedelec type
21-Y-0005	Futura Fold I-R8 Belt	Folding bicycle
21-Y-0006	Futura Fold I-F8 Belt	Folding bicycle
22-P-0001	Futura HD I-F360	City and trekking bicycle
22-P-0002	Futura HD I-F360	City and trekking bicycle
22-P-0003	Futura HD I-12	City and trekking bicycle
22-P-0004	Futura HD I-12	City and trekking bicycle
22-P-0005	Futura HD I-12	City and trekking bicycle
22-P-0006	E-Imperial I-R5	City and trekking bicycle
22-P-0007	E-Imperial I-R5	City and trekking bicycle
22-P-0008	E-Imperial I-F5	City and trekking bicycle
22-P-0009	E-Imperial I-F5	City and trekking bicycle
22-P-0010	E-Imperial I-10	City and trekking bicycle
22-P-0011	E-Imperial I-10	City and trekking bicycle
22-P-0012	E-Imperial 180 S R5	City and trekking bicycle
22-P-0013	E-Imperial 180 S R5	City and trekking bicycle
22-P-0014	E-Imperial 180 S F5	City and trekking bicycle
22-P-0015	E-Imperial 180 S F5	City and trekking bicycle
22-P-0016	E-Imperial 180 S 10	City and trekking bicycle
22-P-0017	E-Imperial 180 S 10	City and trekking bicycle
22-Q-0001	Robert/a R7 Active Plus	City and trekking bicycle
22-Q-0002	Robert/a R7 Active Plus	City and trekking bicycle

Table 2: Type number, model and pedelec type

Type no.	Model	Pedelec type
22-Q-0003	Robert/a F7 Active Plus	City and trekking bicycle
22-Q-0004	Robert/a F7 Active Plus	City and trekking bicycle
22-Q-0010	Futura Pro I-F14	City and trekking bicycle
22-Q-0011	Futura Pro I-F14	City and trekking bicycle
22-Q-0015	Futura Pro I-F360+	City and trekking bicycle
22-Q-0016	Futura Pro I-F360+	City and trekking bicycle
22-Q-0023	Futura Comp I-12	City and trekking bicycle
22-Q-0024	Futura Comp I-12	City and trekking bicycle
22-Q-0025	Futura Comp I-12	City and trekking bicycle
22-Q-0026	Futura Comp I-F5	City and trekking bicycle
22-Q-0027	Futura Comp I-F5	City and trekking bicycle
22-Q-0028	Futura Comp I-11	City and trekking bicycle
22-Q-0029	Futura Comp I-11	City and trekking bicycle
22-Q-0030	Futura Comp I-11	City and trekking bicycle
22-Q-0031	Futura Sport I-10	City and trekking bicycle
22-Q-0032	Futura Sport I-10	City and trekking bicycle
22-Q-0033	Futura Sport I-10	City and trekking bicycle
22-Q-0074	Robert/a Pro I-R5	City and trekking bicycle
22-Q-0075	Robert/a Pro I-R5	City and trekking bicycle
22-Q-0076	Robert/a Pro I-R8	City and trekking bicycle
22-Q-0077	Robert/a Pro I-R8	City and trekking bicycle
22-Q-0078	Robert/a Pro I-F8	City and trekking bicycle

Table 2: Type number, model and pedelec type

Type no.	Model	Pedelec type
22-Q-0079	Robert/a deLuxe I-R8	City and trekking bicycle
22-Q-0080	Robert/a deLuxe I-R8	City and trekking bicycle
22-Q-0081	Robert/a deLuxe I-F8	City and trekking bicycle
22-Q-0082	Robert/a deLuxe I-F8	City and trekking bicycle
22-Q-0083	Robert/a I-R8 Belt	City and trekking bicycle
22-Q-0084	Robert/a I-R8 Belt	City and trekking bicycle
22-Q-0085	Robert/a I-R8	City and trekking bicycle
22-Q-0086	Robert/a I-R8	City and trekking bicycle
22-Q-0087	Montfoort I-F8	City and trekking bicycle
22-Q-0088	Montfoort F7 Belt	City and trekking bicycle
22-Q-0089	Montfoort F7	City and trekking bicycle
22-Q-0093	Futura Compact R5	City and trekking bicycle
22-Q-0094	Futura Compact F5	City and trekking bicycle
22-Q-0095	Futura Compact F8	City and trekking bicycle
22-Q-0096	Futura Compact 10	City and trekking bicycle
22-Q-0104	Futura Compact R5	City and trekking bicycle
22-Q-0105	Futura Compact F5	City and trekking bicycle
22-Q-0106	Futura Compact R8	City and trekking bicycle
22-Q-0107	Futura Compact R8	City and trekking bicycle
22-Q-0108	Futura Compact F8	City and trekking bicycle
22-Y-0002	Futura Fold I-10	Folding bicycle
22-Y-0003	Futura Fold I-R5 Belt	Folding bicycle
22-Y-0004	Futura Fold I-F5 Belt	Folding bicycle
22-Y-0005	Futura Fold I-R8	Folding bicycle

Table 2: Type number, model and pedelec type

Type no.	Model	Pedelec type
22-Y-0006	Futura Fold I-F8	Folding bicycle
22-Y-0007	Rob Fold R5	Folding bicycle
22-Y-0008	Rob Fold F5	Folding bicycle
22-Y-0009	Rob Fold R8	Folding bicycle
22-Y-0010	Rob Fold F8	Folding bicycle
22-Y-0014	Rob Fold 10	Folding bicycle

Table 2: Type number, model and pedelec type

1.6 Frame number

Each frame has an individual frame number stamped on it (see Figure 2). The frame number can be used to associate the pedelec with the owner. The frame number is the most important identifier for verifying ownership.

1.7 Identifying the operating instructions

The operating instructions identification number is located in bottom left-hand corner of each page.

The identification number is composed of the document number, the version number and the release date.

Identification number	MY22H01 - 12_1.0_28.07.2021
------------------------------	-----------------------------

1.8 Aim of the operating instructions

These operating instructions are not a substitute for personal instruction by the specialist dealer supplying the bike. These operating instructions are an integral part of the pedelec. Therefore, if it is re-sold at a later time, they must be handed over to the subsequent owner.

These operating instructions are mainly designed for riders and operators of the pedelec.

Paragraphs with a white background are intended to enable non-professionals to make safe settings on the pedelec, use it, clean it and identify and eliminate any faults.



Sections intended for technical staff are highlighted in blue and marked with a spanner symbol.

These paragraphs aim to allow trained technical staff (bicycle mechatronics engineers, bicycle mechanics or similar) to carry out initial assembly, adjustment, maintenance and repair safely.

Technical staff also need to read all sections for riders and operators to ensure they can provide a better customer service.

All documents in Section 11 need to be filled out whenever any work is performed on the vehicle (assembly report, maintenance report).

Section		Rider	Specialist dealer
1	About these instructions	<input type="checkbox"/>	<input type="checkbox"/>
2	Safety	<input type="checkbox"/>	<input type="checkbox"/>
3	Description	<input type="checkbox"/>	<input type="checkbox"/>
4	Transportation and storage	<input type="checkbox"/>	<input type="checkbox"/>
5	Assembly and installation		<input type="checkbox"/>
6	Operation	<input type="checkbox"/>	<input type="checkbox"/>
7	Cleaning and servicing	<input type="checkbox"/>	<input type="checkbox"/>
8	Maintenance	<input type="checkbox"/>	<input type="checkbox"/>
9.1	Troubleshooting and fault clearance	<input type="checkbox"/>	<input type="checkbox"/>
9.2	Repair		<input type="checkbox"/>
10	Disassembly and disposal	<input type="checkbox"/>	<input type="checkbox"/>
11	Documents		<input type="checkbox"/>
12	Glossary	<input type="checkbox"/>	<input type="checkbox"/>
13	Appendix		<input type="checkbox"/>
14	Keyword index	<input type="checkbox"/>	<input type="checkbox"/>

Table 3: Target groups-section matrix

2 Safety

2.1 Residual risks

2.1.1 Risk of fire and explosion

2.1.1.1 Rechargeable battery

The safety electronics may fail if the batteries are damaged or faulty. The residual voltage can cause a short circuit. The battery may self-ignite and explode.

- ▶ Only use and charge the battery and accessories if they are in perfect condition.
- ▶ Never open or repair the battery.
- ▶ Batteries with external damage must be removed from service immediately.
- ▶ If a battery is dropped or struck, remove it from service and keep it under observation for at least 24 hours.

Faulty batteries are hazardous goods.

- ▶ Dispose of faulty batteries in the correct manner.
- ▶ Store battery in a dry place until disposal.
- ▶ Never store near flammable substances.

The battery is only protected from spray water. Penetration by water can cause a short circuit. The battery may self-ignite and explode.

- ▶ Never immerse battery in water.
- ▶ Put battery out of service if you suspect water has penetrated it.

Temperatures over 60 °C can also cause liquid to leak from the battery and the battery will become damaged. The battery may self-ignite and explode.

- ▶ Protect the battery against heat.
- ▶ Never store next to hot objects.
- ▶ Never expose battery to continuous direct sunlight.
- ▶ Avoid wide temperature fluctuations.

Chargers with excessive voltage damage batteries. This may cause a fire or an explosion.

- ▶ Only use approved batteries to charge.

Metal objects may interconnect the battery's electrical terminals. The battery may self-ignite and explode.

- ▶ Never insert paper clips, screws, coins, keys and other small parts into the battery.

2.1.1.2 Overheated charger

The charger heats up when charging the battery. If it is not allowed to cool down sufficiently, it can cause a fire or burns to the hands.

- ▶ Never use charger on a highly flammable surface.
- ▶ Never cover the charger during charging.
- ▶ Never leave battery unattended during charging.

2.1.1.3 Hot components

The brakes and the motor may become very hot during operation. There is a risk of burns or fire in case of contact.

- ▶ Never touch the brakes or the motor immediately after a ride.
- ▶ Never place the pedelec on a flammable surface, such as grass or wood, directly after use.

2.1.2 Electric shock

2.1.2.1 Damage

Damaged chargers, cables and plug connectors increase the risk of electric shock.

- ▶ Check the charger, cable and plug connector before each use. Never use a damaged charger.

2.1.2.2 Water penetration

If water penetrates into the charger, there is a risk of electric shock.

- ▶ Never charge the battery outdoors.

2.1.2.3 Condensation

Condensation may form in the charger and battery when the temperature changes from cold to hot, possibly causing a short circuit.

- ▶ Wait until both the charger and battery have warmed up to room temperature before connecting them.

2.1.3 Risk of a crash

2.1.3.1 Incorrect quick release setting

Excessively high clamping force will damage the quick release and cause it to lose its function. Insufficient clamping force will result in unfavourable transmission of force. This can cause components to break. This will cause a crash with injuries.

- ▶ Never fasten a quick release using a tool (e.g. hammer or pliers).
- ▶ Only use the clamping lever with the specified set clamping force.

2.1.3.2 Incorrect tightening torque

If a screw is fastened too tightly, it may break. If a screw is not fastened enough, it may loosen. This will cause a crash with injuries.

- ▶ Always observe the indicated tightening torque on the screw or in the *operating instructions*.

2.1.3.3 Incorrect component

The wheels are designed exclusively for use with rim brakes or disc brakes. The wheel may break if an incorrect brake is used. This will cause a crash with injuries.

- ▶ Never use the wheel with a different brake.

2.1.4 Risk of amputation

The brake disc in disc brakes is so sharp that it can cause serious injuries to fingers if they are inserted into the brake disc openings.

- ▶ Always keep fingers well away from the rotating brake discs.

2.1.5 Key breaking off

If you leave a key inserted when riding or transporting the pedelec, it may break off or the locking system may open accidentally.

- ▶ Remove the key from the battery lock.

2.2 Toxic substances

2.2.1 Brake fluid

Brake fluid may leak out after an accident or due to material fatigue. Brake fluid can be fatal if swallowed or inhaled.

- ▶ Never dismantle the brake system.
- ▶ Avoid contact with skin.
- ▶ Do not inhale vapours.

2.2.2 Suspension oil

Suspension oil in the fork and the rear frame damper is toxic to the touch, irritates respiratory tracts and can cause cancer, sterility and changes to the genetic make-up of germ cells.

- ▶ Never dismantle the rear frame damper or the suspension fork.
- ▶ Avoid skin coming into contact with suspension oil.

2.2.3 Lubrication oil

Eightpins seat post lubrication oil is toxic if inhaled and can be fatal if swallowed.

- ▶ Never remove the Eightpins seat post from the frame.
- ▶ Lubricate seat post in the open air or in a well-ventilated room only.
- ▶ Avoid skin coming into contact with lubrication oil. Wear nitrile gloves when lubricating, cleaning and servicing the vehicle.

2.2.4 Defective battery

Liquids and vapours may leak from damaged or faulty batteries. Excessively high temperatures may also cause liquids and vapours to leak from the battery. Such liquids and vapours can irritate the airways and cause burns.

- ▶ Never dismantle the battery.
- ▶ Avoid contact with skin.
- ▶ Do not inhale vapours.

2.3 Requirements for riders

The rider must have the required mental capacity and physical and motor skills to ride on public roads. A minimum age of 14 years is recommended.

2.4 Vulnerable groups

Keep batteries and the charger away from children and people with reduced physical, sensory or mental capacities or lacking in experience and knowledge.

If minors use the pedelec, a legal guardian must should provide them with comprehensive instructions.

2.5 Personal protective equipment

Wear a suitable helmet for your protection. The helmet must have a reflective strip or a light in a clearly visible colour.

Wear sturdy shoes.

Clothing should be retroreflective or as light as possible. Fluorescent materials are also suitable. High-visibility jackets and straps on your upper body ensure even greater safety. Never wear a skirt. Always wear trousers which reach down to your ankles instead.

2.6 Safety guards

Three safety guards protect riders against heat or moving parts:

- Chain or belt guards prevent clothing from being pulled into the drive train
- Mudguards protect against dirt and water splashing up from the road.
- Motor covers on the motor casing protect against heat.

- ▶ Never remove the guards.
- ▶ Check the guards on a regular basis.
- ▶ Take pedelec out of service if a guard is damaged or missing. Contact specialist dealer.

2.7 Safety markings and safety instructions

The pedelec and battery nameplates contain these safety markings and safety instructions:



Symbol	Explanation
	General warning
	Adhere to the instructions for use

Table 4: Meaning of safety markings












Symbol	Explanation
	Read the instructions
	Separate collection of electrical and electronic devices
	Separate collection of ordinary and rechargeable batteries
	Must not be thrown into fire (burning prohibited)
	It is forbidden to open any batteries
	Device of protection class II
	Only suitable for use indoors
	Fuse (device fuse)
	EU conformity
	Recyclable material
	Protect from temperatures above 50 °C and direct sunlight

Table 5: Safety instructions

2.8 What to do in an emergency

2.8.1 Dangerous situation in road traffic

- ▶ In the event of any hazards or dangers in road traffic, apply the brakes on the pedelec until it comes to a halt. The brake acts as an emergency stop system in such cases.

2.8.2 Leaked brake fluid

- ▶ Remove those affected from the danger area to fresh air.
- ▶ Never leave those affected unattended.
- ▶ Remove any clothing contaminated with brake fluid immediately.
- ▶ Never inhale vapours. Ensure sufficient ventilation.
- ▶ Wear gloves and safety glasses as protective equipment.
- ▶ Keep unprotected persons away.
- ▶ Take care with leaked brake fluid as it poses a slip hazard.
- ▶ Keep leaking brake fluid away from naked flames, hot surfaces and sources of ignition.
- ▶ Avoid contact with skin and eyes.

After inhalation

- ▶ Take in fresh air. Immediately consult a doctor in case of any discomfort.

After skin contact

- ▶ Wash affected skin with soap and water and rinse well. Remove contaminated clothing. Consult doctor in the event of pain or discomfort.

After contact with eyes

- ▶ Rinse eyes under flowing water for at least ten minutes with the lids open; also rinse under lids. Immediately consult a doctor in case of any pain or discomfort.

After swallowing

- ▶ Rinse out mouth with water. Never induce vomiting. Risk of aspiration.
- ▶ If a person is lying on their back and vomiting, place them in the recovery position. Seek medical advice immediately.

Environmental protection measures

- ▶ Never allow brake fluid to flow into the sewage system, water courses or groundwater.
- ▶ Notify the relevant authorities if fluid penetrates the ground, water courses or the sewage system.
- ▶ Dispose of leaked brake fluid in an environmentally responsible way in accordance with statutory regulations (see [Section 10.1](#)).
- ▶ The brake system must be repaired immediately if brake fluid leaks out. Contact specialist dealer.

2.8.3 Battery vapours emitted

Vapours may be emitted if the battery is damaged or used improperly. The vapours may cause respiratory tract irritation.

- ▶ Get into fresh air.
- ▶ Consult doctor in the event of pain or discomfort.

After contact with eyes

- ▶ Carefully rinse eyes with plenty of water for at least 15 minutes. Protect unaffected eye. Seek medical advice immediately.

After skin contact

- ▶ Remove any solid particles immediately.
- ▶ Rinse the affected area with plenty of water for at least 15 minutes. Then dab the affected skin gently. Do not rub dry.
- ▶ Remove contaminated clothing immediately.
- ▶ Immediately consult a doctor if there is any redness, pain or discomfort.

2.8.4 Battery fire

The safety electronics may fail if the battery is damaged or faulty. The residual voltage can cause a short circuit. The battery may self-ignite and explode.

- 1 Keep your distance if the battery becomes deformed or starts to emit smoke.
 - 2 If charging, remove the plug connector from the socket.
 - 3 Contact the fire service immediately.
- ▶ Use Class fire extinguishers to put out the fire.
 - ▶ Never extinguish damaged batteries with water or allow them to come into contact with water.

Inhaling vapours can cause intoxication.

- ▶ Stand on the side of the fire where the wind is blowing from.
- ▶ Use breathing apparatus if possible.

2.8.5 Oil and lubricant leaks from the rear frame damper

- ▶ Dispose of leaked oils and lubricants in an environmentally responsible way in accordance with statutory regulations (see [Section 10.1](#)).
- ▶ Contact specialist dealer.

2.8.6 Oil and lubricant leaks from the fork

- ▶ Dispose of leaked oils and lubricants in an environmentally responsible way in accordance with statutory regulations (see [Section 10.1](#)).

3 Description

3.1 Proper use

All check lists and instructions for actions in these operating instructions must be met. Approved accessories can be installed by specialist staff.

Use the pedelec when it is in perfect, proper working order only. National requirements may apply to the pedelec which the standard equipment may not meet. Different regulations apply across the country to the riding light, reflectors and other components when riding on public roads. The general laws and the

regulations for the prevention of accidents and environmental protection in the respective country of use must be adhered to.

The rechargeable batteries are designed to supply power to the pedelec motor only. Never use the batteries for other purposes.

Each pedelec is assigned a pedelec type, which determines its proper use, function and area of use.







City and trekking bicycles	Child's bicycles/ bicycles for young adults	Mountain bikes	Racing bicycle	Cargo bike	Folding bicycle
					
<p>City and trekking bicycles are designed for comfortable, daily use and are suitable for riding on public roads.</p>	<p>Cycles for children and young adults are suitable for riding on public roads.</p> <p>Legal guardians must read the operating instructions before putting the bike into use. Tell children and young people what the operating instructions contain in a way appropriate to their age.</p> <p>Check the size of the pedelec every 3 months for orthopaedic reasons.</p> <p>Check compliance with the maximum permitted total weight (PTW) every 3 months.</p>	<p>Mountain bikes are designed for sports use. The design characteristics include a short wheelbase, a sitting position with the rider inclined towards the front, and a brake requiring low actuation force.</p> <p>Mountain bikes are sports bikes and not a means of transport. They require an adaptation period in addition to physical fitness. Learning how to ride a mountain bike takes practice, especially braking and riding around bends.</p> <p>The strain on hands, wrists, arms, shoulders, the neck and back is considerable. Inexperienced riders tend to brake too hard and lose control as a result.</p>	<p>Racing bikes are designed for fast rides on roads and paths with a good, undamaged road surface.</p> <p>Racing bikes are sports bikes and not a means of transport. Racing bikes are characterised by their lightweight structure and a design which is stripped to the minimum parts required for riding.</p> <p>The frame geometry and the layout of the operating elements are designed to allow the bike to be ridden at high speeds. Learning how to ride slowly, apply the brakes and get on and off the bike safely takes practice due to the frame design.</p> <p>The sitting position is athletic. The physical strain on hands, wrists, arms, shoulders, the neck and back is considerable. The sitting position requires a high level of physical fitness.</p>	<p>Cargo bikes are suitable for transporting loads on public roads on a daily basis.</p> <p>The transportation of loads requires skill and physical fitness in order to balance the additional weight. The very varied loading conditions and weight distributions require special practice and skill when braking and riding in bends.</p> <p>A longer period is required to adaptation to the length, width and turning circle. You need to be cautious when riding a cargo bike. You must pay attention to traffic on public roads and the condition of the route.</p>	<p>Folding bicycles are suitable for riding on public roads.</p> <p>Folding bikes can be folded together and thus save space when they are transported, e.g. in cars or on local transport.</p> <p>The folding function of the folding bicycle makes it necessary to use smaller wheels and longer brake cables and Bowden cables. Therefore, in case of an increased load, a reduction in riding stability and braking power, diminished comfort and reduced durability are to be expected.</p>

Table 6: Proper use for each pedelec type

3.1.1 Improper use

Failure to adhere to the proper use poses a risk of personal injury and material damage. It is prohibited to use the pedelec in the following ways:

- when the electrical drive system has been manipulated
- riding with a damaged or incomplete pedelec
- riding over steps
- riding through deep water
- charging with an incorrect charger
- lending the pedelec to untrained riders
- carrying other people
- riding with excessive baggage
- riding with no hands
- riding on ice and snow
- improper servicing
- improper repair
- tough areas of use, such as professional competitions
- stunt riding or acrobatics.







City and trekking bicycles	Child's bicycles/ bicycles for young adults	Mountain bikes	Racing bicycle	Cargo bike	Folding bicycle
					
City and trekking bicycles are not sports bicycles. If used for sports, the rider can expect reduced riding stability and diminished comfort.	Cycles for children and young adults are not toys.	Mountain bikes must be retrofitted with lighting, a bell and other fittings as specified by national laws and regulations before they are used on public roads.	Racing bikes must be retrofitted with lights, a bell and other fittings as specified by national laws and regulations before they are used on public roads.	Cargo bikes are not a touring or sports bicycle.	A folding bicycle is not a touring or sports bicycle.

Table 7: Information on improper use

3.1.2 Permitted total weight (PTW)

The pedelec may only be loaded to its maximum permitted total weight (PTW).

The maximum permitted total weight is

- the weight of the fully assembled pedelec
- plus rider
- plus baggage

Type no.	Model	PTW [kg]
21-Y-0005	Futura Fold I-R8 Belt	135
21-Y-0006	Futura Fold I-F8 Belt	135
22-P-0001	Futura HD I-F360	170
22-P-0002	Futura HD I-F360	170
22-P-0003	Futura HD I-12	170
22-P-0004	Futura HD I-12	170
22-P-0005	Futura HD I-12	170
22-P-0006	E-Imperial I-R5	170
22-P-0007	E-Imperial I-R5	170
22-P-0008	E-Imperial I-F5	170
22-P-0009	E-Imperial I-F5	170
22-P-0010	E-Imperial I-10	170
22-P-0011	E-Imperial I-10	170
22-P-0012	E-Imperial 180 S R5	180
22-P-0013	E-Imperial 180 S R5	180
22-P-0014	E-Imperial 180 S F5	180
22-P-0015	E-Imperial 180 S F5	180
22-P-0016	E-Imperial 180 S 10	180
22-P-0017	E-Imperial 180 S 10	180
22-Q-0001	Robert/a R7 Active Plus	135
22-Q-0002	Robert/a R7 Active Plus	135
22-Q-0003	Robert/a F7 Active Plus	135
22-Q-0004	Robert/a F7 Active Plus	135
22-Q-0010	Futura Pro I-F14	135
22-Q-0011	Futura Pro I-F14	135
22-Q-0015	Futura Pro I-F360+	135
22-Q-0016	Futura Pro I-F360+	135
22-Q-0023	Futura Comp I-12	135
22-Q-0024	Futura Comp I-12	135
22-Q-0025	Futura Comp I-12	135

Table 8: Type number, model and PTW

Type no.	Model	PTW [kg]
22-Q-0026	Futura Comp I-F5	135
22-Q-0027	Futura Comp I-F5	135
22-Q-0028	Futura Comp I-11	135
22-Q-0029	Futura Comp I-11	135
22-Q-0030	Futura Comp I-11	135
22-Q-0031	Futura Sport I-10	135
22-Q-0032	Futura Sport I-10	135
22-Q-0033	Futura Sport I-10	135
22-Q-0074	Robert/a Pro I-R5	150
22-Q-0075	Robert/a Pro I-R5	150
22-Q-0076	Robert/a Pro I-R8	150
22-Q-0077	Robert/a Pro I-R8	150
22-Q-0078	Robert/a Pro I-F8	150
22-Q-0079	Robert/a deLuxe I-R8	150
22-Q-0080	Robert/a deLuxe I-R8	150
22-Q-0081	Robert/a deLuxe I-F8	150
22-Q-0082	Robert/a deLuxe I-F8	150
22-Q-0083	Robert/a I-R8 Belt	135
22-Q-0084	Robert/a I-R8 Belt	135
22-Q-0085	Robert/a I-R8	135
22-Q-0086	Robert/a I-R8	135
22-Q-0087	Montfoort I-F8	135
22-Q-0088	Montfoort F7 Belt	135
22-Q-0089	Montfoort F7	135
22-Q-0089	Montfoort F7	135
22-Q-0093	Futura Compact R5	135
22-Q-0094	Futura Compact F5	135
22-Q-0095	Futura Compact F8	135
22-Q-0096	Futura Compact 10	135
22-Q-0104	Futura Compact R5	135
22-Q-0105	Futura Compact F5	135
22-Q-0106	Futura Compact R8	135
22-Q-0107	Futura Compact R8	135
22-Q-0108	Futura Compact F8	135
22-X-0001	Cargo 1000	250
22-X-0002	Rob Family F360	200

Table 8: Type number, model and PTW

Type no.	Model	PTW [kg]
22-X-0003	Rob Cargo F5	180
22-Y-0002	Futura Fold I-10	135
22-Y-0003	Futura Fold I-R5 Belt	135
22-Y-0004	Futura Fold I-F5 Belt	135
22-Y-0005	Futura Fold I-R8	135
22-Y-0006	Futura Fold I-F8	135
22-Y-0007	Rob Fold R5	135
22-Y-0008	Rob Fold F5	135
22-Y-0009	Rob Fold R8	135
22-Y-0010	Rob Fold F8	135
22-Y-0014	Rob Fold 10	135

Table 8: Type number, model and PTW

3.1.3 Environmental requirements

You can be ride the pedelec within a temperature range between -5 °C and +40 °C. The electric drive system is limited in its performance outside this temperature range.

Operating temperature	-5... +40 °C
-----------------------	--------------

During winter use, especially at temperatures below 0 °C, we recommend that you don't insert a battery charged and stored at room temperature into the pedelec until just before setting off. We recommend using thermal protection sleeves when riding longer distances in the cold.

Temperatures under -5 °C and over +40 °C must be avoided.

You must also keep within the following temperature ranges:

Transportation temperature	+10... +40 °C
Storage temperature	+10... +40 °C
Work environment temperature	+15... +25 °C
Charging temperature	+10... +40 °C

The nameplate contains symbols for the pedelec's area of use.

- Check what tracks and roads you may ride on before setting off for the first time.











Area of use	City and trekking bicycles	Child's bicycles/ bicycles for young adults	Mountain bikes	Racing bicycle	Cargo bike	Folding bicycle
						
 1	Suitable for tarmacked and paved roads.	Suitable for tarmacked and paved roads.		Suitable for tarmacked and paved roads.	Suitable for tarmacked and paved roads.	Suitable for tarmacked and paved roads.
 2	Suitable for tarmacked roads, cycle paths and firm gravel paths and roads, and longer sections with moderate slopes and jumps up to 15 cm.	Suitable for tarmacked roads, cycle paths and firm gravel paths and roads, and longer sections with moderate slopes and jumps up to 15 cm.	Suitable for tarmacked roads, cycle paths and firm gravel paths and roads, and longer sections with moderate slopes and jumps up to 15 cm.	Suitable for tarmacked roads, cycle paths and firm gravel paths and roads, and longer sections with moderate slopes and jumps up to 15 cm.		
 3		Suitable for tarmacked roads, cycle paths and easy to demanding off-road riding, sections with moderate slopes and jumps up to 61 cm.	Suitable for tarmacked roads, cycle paths and easy to demanding off-road riding, sections with moderate slopes and jumps up to 61 cm.			
 4			Suitable for tarmacked roads, cycle paths and easy to demanding off-road riding, limited downhill use and jumps up to 122 cm.			

Table 9: Area of use

The pedelec is unsuitable for the following areas of use:











Area of use	City and trekking bicycles	Child's bicycles/ bicycles for young adults	Mountain bikes	Racing bicycle	Cargo bike	Folding bicycle
						
 1	Never drive off-road or perform jumps.	Never drive off-road or perform jumps.		Never drive off-road or perform jumps.	Never drive off-road or perform jumps.	Never drive off-road or perform jumps.
 2	Never drive off-road or perform jumps over 15 cm.	Never drive off-road or perform jumps over 15 cm.	Never drive off-road or perform jumps over 15 cm.	Never drive off-road or perform jumps over 15 cm.		
 3		Never ride downhill or perform jumps over 61 cm.	Never ride downhill or perform jumps over 61 cm.			
 4			Never traverse extremely difficult off-road terrain or perform jumps over 122 cm.			

Table 10: Unsuitable terrain

3.2 Nameplate

The nameplate is situated on the frame. Use of the hub gear is described in [Figure 1](#). The nameplate

contains thirteen pieces of information.

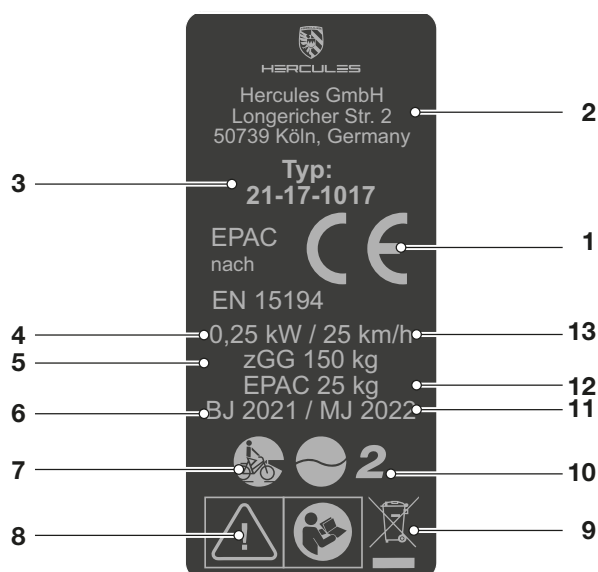


Figure 1: Nameplate, example

No.	Designation	Description	More information
1	CE marking	The manufacturer uses the CE marking to declare that the pedelec complies with applicable requirements.	
2	Manufacturer's contact details	You can contact the manufacturer at the address indicated.	Section 1.1
3	Type number	All pedelec models have an eight-digit type number, which is used to specify the design model year, the type of pedelec and the version.	Section 1.5
4	Maximum continuous power	The maximum continuous power is the greatest possible power for the electric motor output shaft over 30 minutes.	
5	Maximum permitted total weight	The maximum permitted total weight is the weight of the fully assembled pedelec with the rider plus baggage.	
6	Year of manufacture	The year of manufacture is the year in which the pedelec was manufactured. The production period is between June 2021 and June 2022.	
7	Pedelec type	Each pedelec is assigned a pedelec type, which determines its proper use, function and area of use.	Section 3.2
8	Safety markings	Safety markings warn of hazards.	Section 2.6
9	Disposal instructions	These instructions must be followed when disposing of the pedelec.	Section 10
10	Area of use	The pedelec may only be ridden in authorised locations.	Section 3.6
11	Model year	The model year refers to the first production year that the series-manufactured pedelec was produced in the version concerned. The year of manufacture is different to the model year in some cases.	
12	Weight of the ready-to-ride pedelec	The weight of the ready-to-ride pedelec is specified as a weight of 25 kg or above and refers to its weight at the time of purchase. Extra accessories need to be added to the weight.	Section 4.1
13	Shut-off speed	The speed that the pedelec reaches at the moment when the current has dropped to zero or to the no-load current value.	

Table 11: Explanation of information on the nameplate

3.3 Components

3.3.1 Overview



Figure 2: Pedelec viewed from right: HERCULES E-Imperial I-R5 used as example

1	Front wheel	11	Rear light
2	Fork	12	Rear guard
3	Front mudguard	13	Kickstand
4	Front light	14	Rear wheel
5	Handlebars	15	Belt
6	Stem	16	Belt guard
7	Frame	17	Motor (behind motor cover)
8	Seat post	18	Pedal
9	Saddle	19	Frame number
10	Pannier rack	20	Battery and nameplate (in the frame)

3.3.2 Chassis

The chassis comprises two components:

- Frame and
- steering system

3.3.2.1 Frame

The frame absorbs all forces which act on the pedelec from body weight, pedalling and the ground. The frame also acts as a carrier for most components.

The frame geometry determines the pedelec's ride performance.

3.3.2.2 Steering system

The steering system components are:

- Steering headset
- Stem
- Handlebars
- Fork

3.3.2.3 Steering headset

The steering headset (also known as a bike headset or simply a headset) is the fork bearing system in the frame. A distinction is made between two different types:

- Conventional steering headsets for fork steerers with thread and
- Steering headsets for threadless fork steerers, what are known as headsets.

3.3.2.4 Stem

The stem is the connecting component between the handlebars and the fork steerer tube. The stem is used to adjust the handlebars to the rider. The stem is used to adjust the handlebar height and the gap between the handlebars and saddle (see Section 6.5.6).

3.3.2.5 Handlebars

The pedelec is steered using the handlebars. The handlebars are used to support the upper body and is the mount for most controls and displays (see Section 3.4.1).

3.3.2.6 Fork

The stem and handlebars are attached to the top end of the fork steerer. The axle is fastened to the fork ends. The wheel is fastened to the axle.

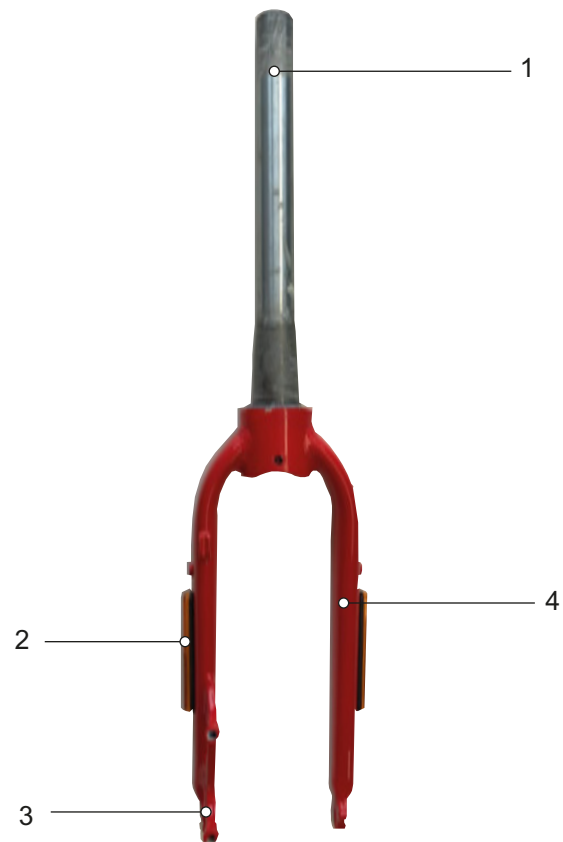


Figure 3: Overview of fork

- | | |
|---|----------------------------|
| 1 | Fork steerer |
| 2 | Side reflectors (optional) |
| 3 | Fork end |
| 4 | Fork leg |

3.3.3 Suspension

Both forks and suspension forks are fitted in this model series.

3.3.3.1 Rigid fork

Rigid forks do not feature suspension. They transfer the used muscle and motor power to the road to optimum effect. Pedelecs with rigid forks consume less energy on steep roads and have a greater range than pedelecs with suspension.

3.3.3.2 Suspension fork

A fork deflects when a steel spring, air suspension, or both suspension types act on it.

Unlike rigid forks, suspension forks improve contact with the ground and thus enhance comfort using two functions: suspension and damping. The suspension in a pedelec prevents an impact, such as one caused by a stone lying in the pedelec's path, from being channelled directly into the body via the fork. The impact is absorbed by the suspension system instead. This causes the suspension fork to compress.

After compressing, the suspension fork returns to its original position. If the bike has a damper, the damper will slow this movement down. It thus prevents the suspension system from springing back in an uncontrolled manner and the fork from oscillating up and down. Dampers which dampen compressive deflection movements, i.e. a compression load, are called compression dampers or compression dashpots.



Figure 4: Without suspension (1) and with suspension (2)

Dampers which dampen rebound deflection movements, i.e. a rebound load, are called rebound dampers or dashpots.

The compression can be disabled in any suspension fork. A suspension fork will then behave like a rigid fork.

The stem and the handlebars are fastened to the fork steerer. The wheel is fastened to the axle.

Negative deflection (sag)

The negative deflection (sag) is the percentage of total deflection that is compressed by body weight, including equipment (such as a backpack), the seating position and frame geometry. Sag is not caused by riding. The pedelec rebounds at a controlled speed if it is

optimally adjusted. The wheel stays in contact with the ground when passing over bumps (blue line). The fork head, handlebars and body follow terrain (green line) when riding over bumps. The suspension motion is predictable and controlled.

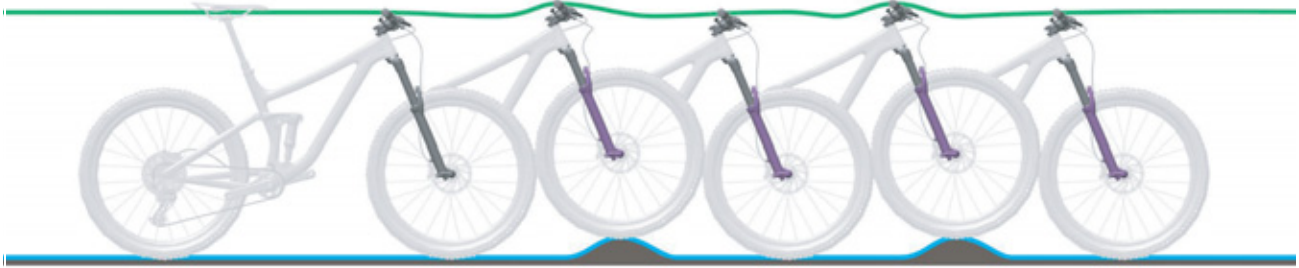


Figure 5: Optimum fork riding performance

When optimally adjusted, the fork counteracts deflection on hilly terrain and stays higher in its

deflection range. This makes it easier to maintain speed when riding over hilly sections of terrain.



Figure 6: Optimum fork riding performance on hilly terrain

When optimally adjusted, the fork deflects quickly and unhindered when the bike hits bumps and absorbs a bump. Traction is retained (blue line).

The fork responds quickly to the bump. The headset and handlebars rise slightly when absorbing a bump (green line).



Figure 7: Optimum fork riding performance over bumps

Rebound damping

Only applies to pedelecs with this equipment

Rebound damping defines the speed at which the suspension rebounds after being loaded.

Rebound damping controls the suspension fork extension and rebound speed, which, in turn, has an impact on traction and control.

Rebound damping can be adjusted to body weight, spring stiffness, deflection, the terrain and the rider's preferences.

If the air pressure or spring stiffness increases, the extension and rebound speeds also increase.

Rebound damping needs to be increased to achieve an optimal setting if the air pressure or spring stiffness are increased.

The damper rebounds at a controlled speed if the fork is optimally adjusted. The wheel stays in contact with the ground when passing over bumps (blue line).

The fork head, handlebars and body follow terrain (green line) when riding over bumps. The suspension motion is predictable and controlled.



Figure 8: Optimum fork riding performance

Suspension fork compression adjustment

Only applies to pedelecs with this equipment

The compression adjuster allows the rider to make quick adjustments to the fork's suspension behaviour to adapt to the changes in terrain. It is intended for adjustments made during the ride.

The compression adjuster controls the compression lifting speed or the rate at which the fork deflects slow impacts. The compression adjuster affects the absorption of bumps and its efficiency when weight shifts or during transitions,

cornering and uniform impacts caused by bumps, and when braking. When optimally adjusted, the fork counteracts deflection, stays higher in its deflection range and helps to maintain speed while riding on hilly parts of terrain. The fork deflects quickly and unhindered when the bike hits a bump and absorbs the bump. Traction is retained (blue line).



Figure 9: Optimum performance on hilly terrain

Steel suspension fork structure

The stem and the handlebars are fastened to the fork steerer. The wheel is fastened to the axle.

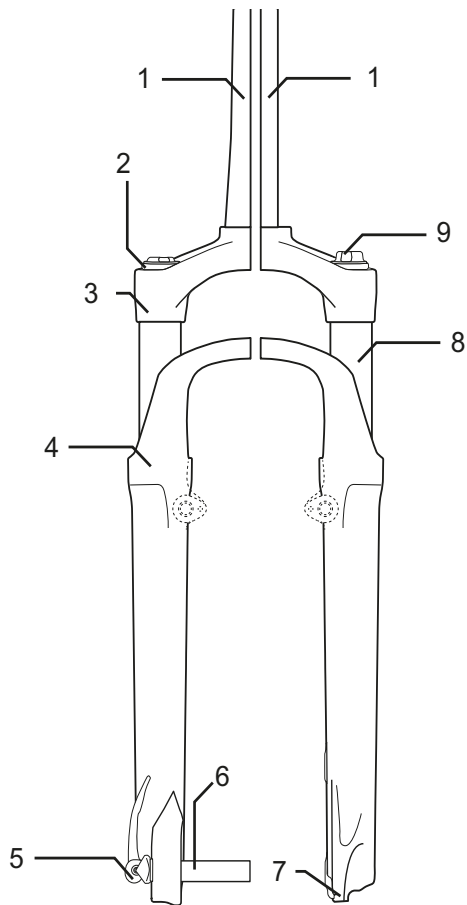


Figure 10: Suntour steel suspension fork as an example

- | | |
|---|--------------------|
| 1 | Fork steerer |
| 2 | Sag setting wheel |
| 3 | Crown |
| 4 | Dust seal |
| 5 | Q-Loc |
| 6 | Axle |
| 7 | Fork end |
| 8 | Stanchion |
| 9 | Compression damper |

Air suspension fork structure

Depending on the model, the air suspension fork has either

- an air suspension assembly group (orange) and/or
- a compression damper assembly (blue) and/or
- a rebound damper assembly group (red)

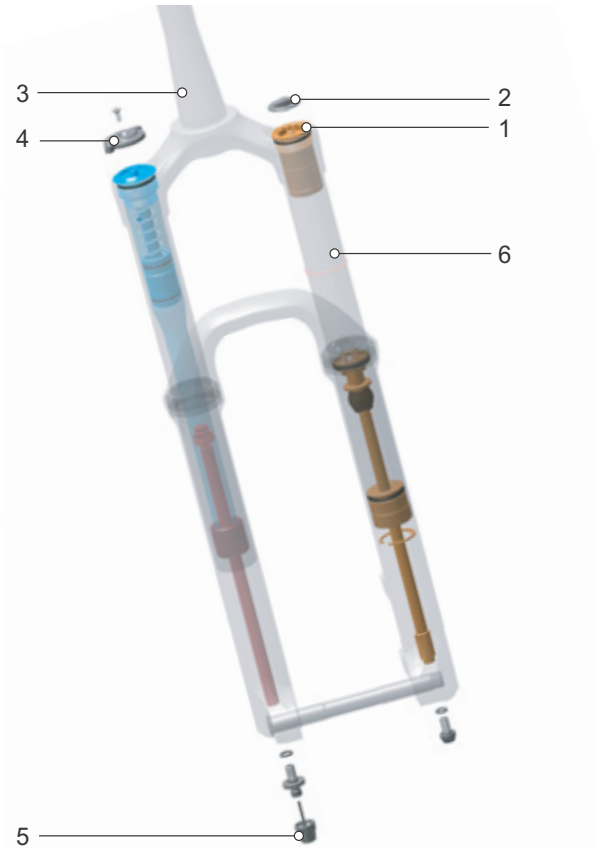


Figure 11: Internal structure of air suspension fork

- | | |
|---|-------------------|
| 1 | Air valve |
| 2 | Air valve cap |
| 3 | Fork steerer |
| 4 | Sag setting wheel |
| 5 | Rebound adjuster |
| 6 | Stanchion |

3.3.4 Wheel

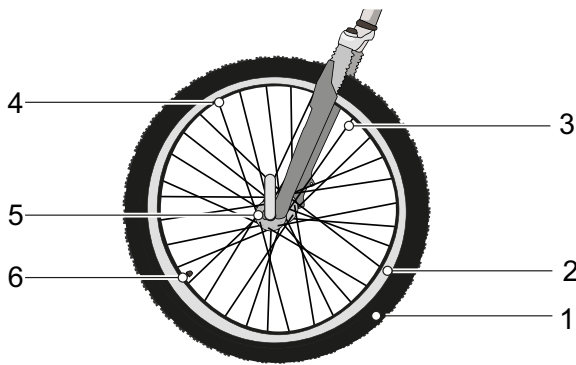


Figure 12: Visible wheel components

- | | |
|---|---------------|
| 1 | Tyres |
| 2 | Rim |
| 3 | Spoke |
| 4 | Spoke nipples |
| 5 | Hub |
| 6 | Valve |

The wheel comprises the *wheel* itself, an inner tube with a valve and a tyre.

3.3.4.1 Tyres

The tyre forms the outer section of the wheel. Tyres differ in their tread, depending on their intended use.

Tread

The tread has little influence on riding characteristics on a smooth road. In this case, the grip between the road and tyre is mainly due to the rolling friction between the rubber and the road surface.

Unlike cars, a pedelec will not aquaplane. The tread contact is much smaller and the contact pressure much higher. Theoretically, aquaplaning will not occur until speeds of 200 km/h are reached.

However, the tread is highly important on terrain. In this case, the tread creates an interlock with the ground. This is the only way possible to transmit the driving, braking and steering forces. The tread can also help improve control on dirty road surfaces.

If a tyre with a deep tread is used on asphalt, this may make an unpleasant noise when the brakes are used. In such a case, the specialist dealer needs to replace the tyre with a new one with a shallow tread.



Figure 13: Example: Information on tyres

Tyre pressure

The permitted pressure range is indicated on the side of the tyre. It is indicated in psi or bars.

The tyre is only able to support the pedelec if there is adequate tyre pressure. The tyre pressure must be adjusted to the rider and then checked on a regular basis.

Tyre size

The tyre size pressure range is indicated on the side of the tyre.

3.3.4.2 Rim

The rim is the metal profile on a wheel which holds the tyre, tube and rim band together. The rim is joined to the hub with spokes.

In rim brakes, the outer surface of the rim is used to brake.

3.3.4.3 Valve

Each wheel has a valve. Air is pumped into the tyre via the valve. There is a valve cap on each valve. The screw-on valve cap keeps out dust and dirt.

The pedelec has either:

- a conventional valve
- a Presta valve or
- a Schrader valve.

Dunlop valve

The Dunlop valve, also known as a conventional valve, is the valve in most widespread use. The valve insert can be replaced easily and air can be let out very quickly.



Figure 14: Dunlop valve

Presta valve

The Presta valve, also known as the French valve (FV) or Sclaverand valve, is the narrowest variant of all valves. The Presta valve requires a smaller hole in the rim, which is why it is especially suitable for the narrow rims on racing bikes. It is about 4 to 5 g lighter than a Dunlop or Schrader valve.



Figure 15: Presta valve

Schrader valve

The Schrader valve can be pumped at filling stations. Older and easy bicycle pumps are unsuitable for filling tyres via a Schrader valve.



Figure 16: Schrader valve

3.3.4.4 Spoke

A spoke is a rod that connects the hub to the rim. The bent end of the spoke which is hooked into the hub is called the spoke head. A thread between 10 mm and 15 mm is attached to the other end of the spoke.

3.3.4.5 Spoke nipples

Spoke nipples are screw elements with an internal thread which fits onto the spoke thread. Fitted spokes are tensioned by tightening the spoke nipples. This straightens the wheel uniformly.

3.3.4.6 Hub

The hub is located in the centre of the wheel. The hub is connected to the rim and tyre with the spokes. An axle runs through the hub, connecting the hub with the fork at the front and with the frame at the rear.

The hub's main task is to transfer the pedelec's force of weight to the tyres. Special hubs on the rear wheel perform additional functions. There is a distinction between five types of hub:

- Hubs without additional features
- Brake hub, see Back-pedal brake
- Gear hub, also known as a hub gear
- Generator hub, see Hub dynamo
- Motor hub.

3.3.5 Braking system

A pedelec's brake system is primarily operated using the brake lever on the handlebars.

- If the left brake handle is pulled, the brake on the front wheel is applied.
- If the right brake handle is pulled, the brake on the rear wheel is applied.

The brakes are used as an emergency stop system and bring the bicycle to a halt quickly and safely in the event of an emergency.

The brake is applied using the brake lever either

- with the brake lever and shift cable (mechanical brake) or
- with the brake lever and hydraulic brake cable (hydraulic brake).

3.3.5.1 Mechanical brake

The brake lever is connected with the brake via a wire inside the shift cable (also known as a Bowden cable).



Figure 17: Bowden cable structure

3.3.5.2 Hydraulic brake

The brake fluid is in a closed hose system. If the brake lever is pulled, the brake fluid transfers pressure to the brake on the wheel.

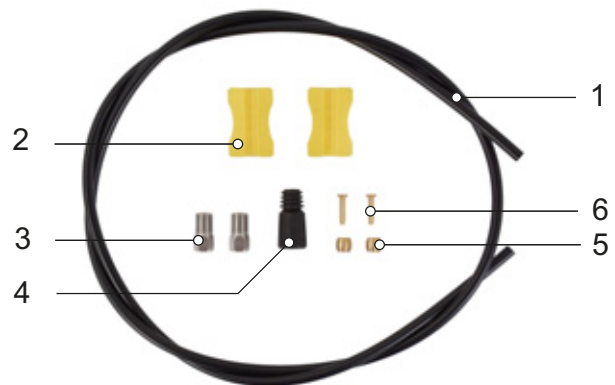


Figure 18: Components in a brake cable

- | | |
|---|-------------|
| 1 | Brake cable |
| 2 | Cable clip |
| 3 | Union nut |
| 4 | Cover cap |
| 5 | Knob |
| 6 | Insert pin |

3.3.5.3 Rim brake

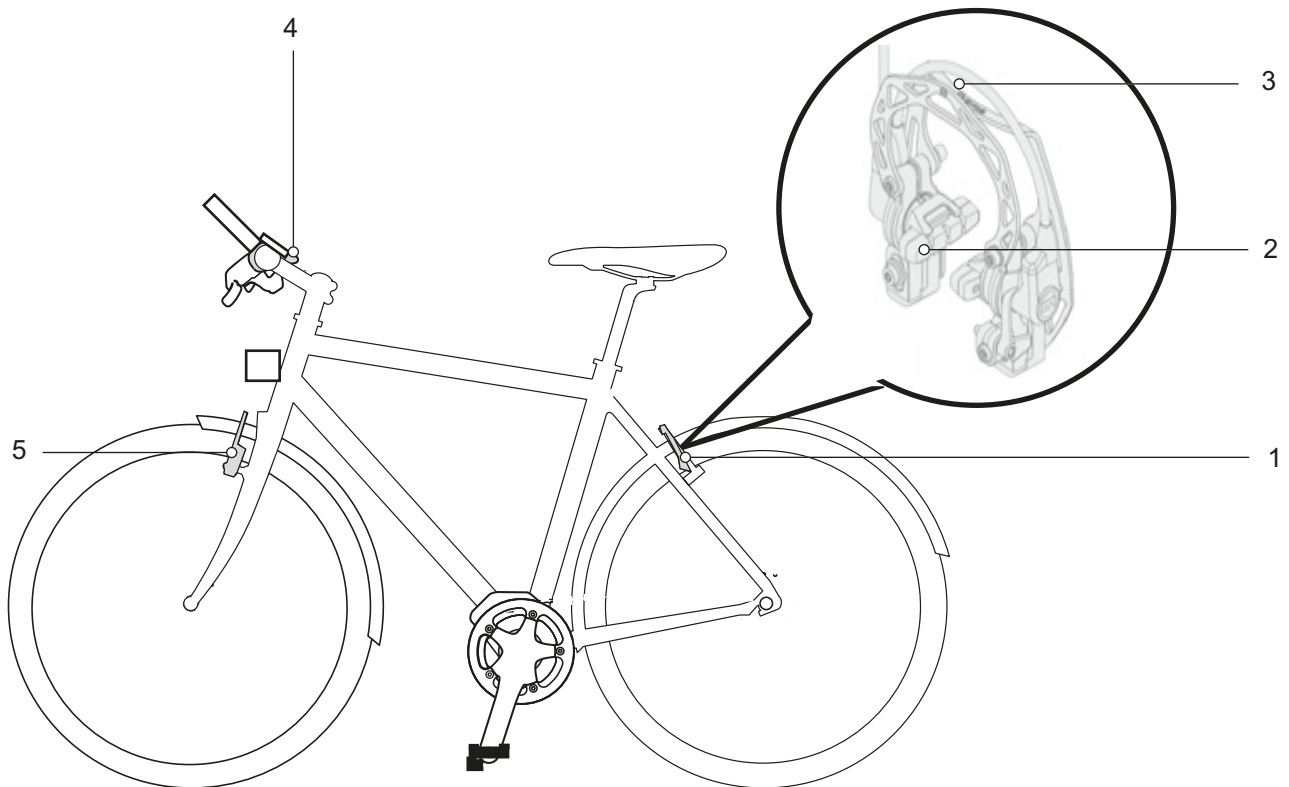


Figure 19: Brake system with rim brake in detail – MAGURA HS22 used as an example

- 1 Rear wheel rim brake
- 2 Brake lining
- 3 Brake booster
- 4 Handlebars with brake lever
- 5 Front wheel rim brake

The rim brake stops the wheel moving when the rider pulls the brake lever, causing two brake linings, positioned opposite one another, to press onto the rims. The hydraulic rim brake features a locking lever. The rim brake locking lever is not marked with any lettering. Only specialist dealers may set the rim brake locking lever.

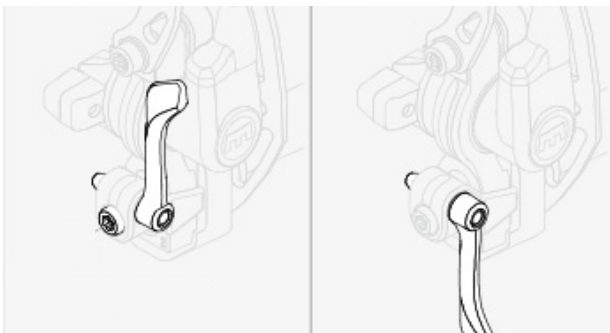


Figure 20: Rim brake locking lever closed (1) and open (2)

3.3.5.4 Disc brake

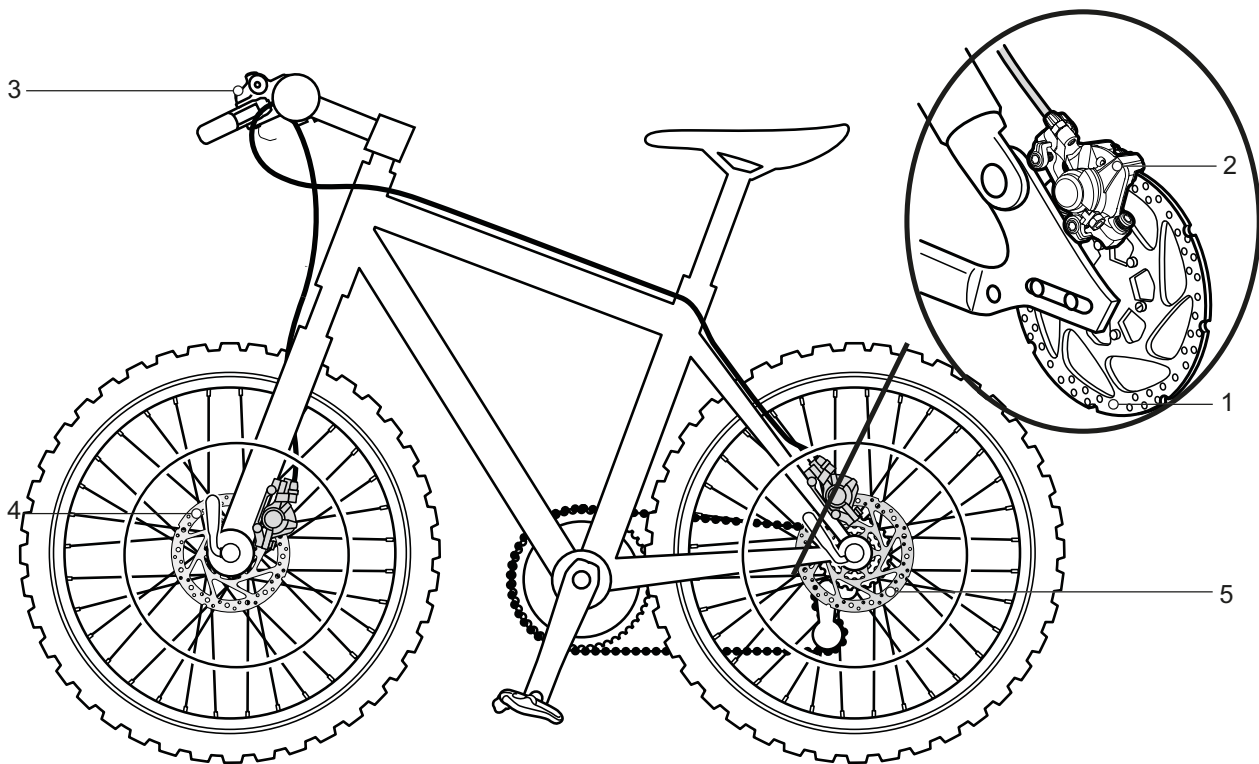


Figure 21: Brake system with disc brake – example

- 1 Brake disc
- 2 Brake calliper with brake linings
- 3 Handlebars with brake lever
- 4 Front wheel brake disc
- 5 Rear wheel brake disc

On a pedelec with a disc brake, the brake disc is screwed permanently to the wheel *hub*.

You increase brake pressure by pulling the *brake lever*. The brake fluid is used to transfer pressure through the brake cables to the cylinders in the brake calliper. The braking force is boosted by a speed reduction and applied to the brake linings. These apply the brake disc mechanically. If the *brake lever* is pushed, the brake linings are pressed against the brake disc and the wheel movement is decelerated until it comes to a stop.

3.3.5.5 Back-pedal brake



Figure 22: Brake system with a back-pedal brake – example

- 1 Rear wheel rim brake
- 2 Handlebars with brake lever
- 3 Front wheel rim brake
- 4 Pedal
- 5 Back-pedal brake

The back-pedal brake stops the rear wheel from moving by pushing the pedals in the opposite direction to the direction of travel.

3.3.6 Seat post

Seat posts are not designed to fasten the saddle but also to adjust exactly to the optimum sitting position. The seat post can:

- adjust the seat height in the seat tube
- adjust the saddle horizontally with a clamping mechanism and
- adjust the saddle angle by swivelling the entire saddle clamping mechanism.

Retractable seat posts feature a remote control on the handlebars, which can be used to lower the seat post – at a traffic light, for example – and raise it again.

3.3.6.1 Patent seat post



Figure 23: Example of ergotec patent seat post with either one or two seat clamping screws

Patent seat posts have a rigid link between the saddle and the post. Patent seat posts which are angled more markedly towards the rear are called offset seat posts. Offset seat posts provide a greater distance between the saddle and the handlebars.

In patent saddle posts, the saddle is attached to the head with one or two saddle clamping screws. It is recommended to lubricate the thread in these screws to ensure sufficient tension when tightening the screw.

Patent saddle posts are fastened into the seat tube with either a quick release or a screwable clamp.

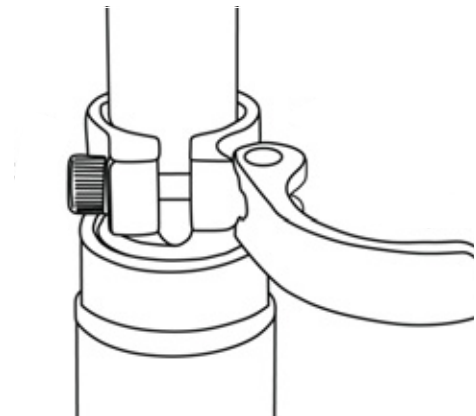


Figure 24: Example of a quick release

3.3.6.2 Suspension seat post

Spring-loaded seat posts can reduce shock after one-time hard impacts, thus improving ride comfort significantly. However, suspension seat posts are not able to compensate for bumps in the road.

If the seat post is the only suspension element, the entire vehicle is a non-suspended mass. This has an unfavourable effect on loaded touring bikes or pedelecs with child trailers.

Suspension seat posts feature small, heavy-duty slide bearings, guides and articulated joints. If they are not lubricated on a regular basis, the sensitive response behaviour diminishes considerably, causing excessive wear.

The pre-tensioning in non-damped suspension seat posts must be adjusted in such a way that the suspension seat post does not deflect with just body weight. This prevents the suspension seat post from deflecting and bobbing intermittently at higher pedalling frequencies or if the rider pedals irregularly.

The spring stiffness can be set lower with damped suspension seat posts, thus making use of the negative deflection.

3.3.7 Mechanical drive system

The pedelec is driven by muscle power, just like a bicycle.

The force which is applied by pedalling in the direction of travel drives the front chain wheel. The chain or belt transmits the force onto the rear chain wheel and then onto the rear wheel.

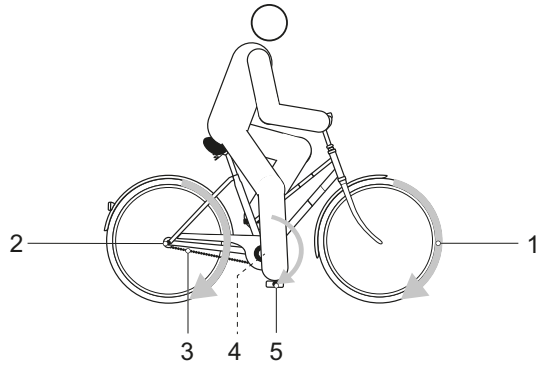


Figure 25: Diagram of mechanical drive system

- | | |
|---|----------------------------------|
| 1 | Direction of travel |
| 2 | Chain or belt |
| 3 | Rear chain wheel or belt pulley |
| 4 | Front chain wheel or belt pulley |
| 5 | Pedal |

The pedelec is equipped with either a chain or belt drive.

3.3.7.1 Chain drive layout



Figure 26: Chain drive with derailleur gears

- | | |
|---|------------------|
| 1 | Front derailleur |
| 2 | Rear derailleur |
| 3 | Chain |

A chain drive is compatible with:

- Back-pedal brake,
- Hub gear or
- Derailleur gears

3.3.7.2 Belt drive layout



Figure 27: Belt drive

- | | |
|---|-------------------|
| 1 | Front belt pulley |
| 2 | Rear belt pulley |
| 3 | Belt |

A belt drive is compatible with:

- Back-pedal brake and
- Hub gear

A belt drive is not compatible with derailleur gears.

3.3.8 Electric drive system

The pedelec has an electric drive system in addition to a mechanical one.

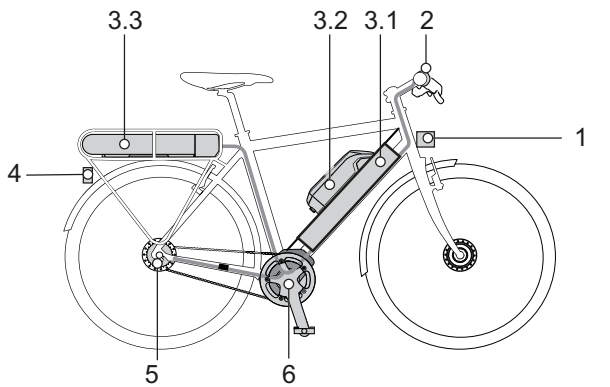


Figure 28: Diagram of an electric drive system with electric components

- | | |
|-----|--|
| 1 | Front light |
| 2 | On-board computer |
| 3.1 | Integrated battery and/or |
| 3.2 | Frame battery and/or |
| 3.3 | Pannier rack battery |
| 4 | Rear light |
| 5 | Electric gear shift (alternative) |
| 6 | Motor |
| 7 | A charger which is designed for the battery. |

3.3.8.1 Motor

As soon as the muscle power required for pedalling passes a certain level, the motor is activated gently and assists the pedalling motion. The pre-set level of assistance determines the motor output.

The motor switches off automatically as soon as the rider no longer pedals, the temperature is outside the permitted range, there is an overload or the shut-off speed of 25 km/h has been reached.

A push assist system can be activated. The speed depends on the selected gear. The motor continues to drive the pedelec as long as the rider presses the push assist button on the handlebars. The speed can be a maximum of 6 km/h in this case. The electric drive system stops when the push assist button is released.

The pedelec does not have a separate emergency shut-off button. In the event of an emergency, the motor can be stopped by removing the on-board computer. The mechanical brakes are used as an emergency stop system and bring the bicycle to a halt quickly and safely in the event of an emergency.

3.3.8.2 Rechargeable battery

BOSCH batteries are lithium ion batteries which are developed and manufactured to the latest technical standards. Each individual cell is protected by a steel cup and encased in a plastic battery housing. These batteries meet and exceed applicable industrial safety standards. The battery has an internal electronic protection circuit, which is specifically designed for the charger and the pedelec. The battery temperature is monitored at all times. The battery is protected against deep discharge, overcharging, overheating and short circuit. In the event of a hazard, a protective circuit switches the battery off automatically.

The battery has a high energy content when charged. The code of practice for their safe handling is found in Section 2 Safety and Section 6.9 Rechargeable battery in the operating instructions. If the electric drive system is not used for 10 minutes and no button has been pressed on the on-board computer or the control panel, the electric drive system and the battery are automatically switched off to save energy.

The type and duration of operating conditions have a significant effect on the battery life. Just like any other lithium-ion battery, the battery will age naturally if it is not being used. The battery's service life can be extended if the battery is well maintained and stored at the correct temperature. The charging capacity will decrease with age, even if the battery is maintained properly. If the operating time is severely shortened after charging, this is a sign that battery has reached the end of its useful life.

Battery performance is reduced when the temperature drops since this increases electrical resistance. As a result, you can expect the range to be shorter than normal in winter. We recommend using thermal protection sleeves when riding longer distances in the cold.

Each battery has its own lock.

3.3.8.3 Frame battery

Three different types of frame batteries can be fitted:



Figure 29: Overview of frame battery

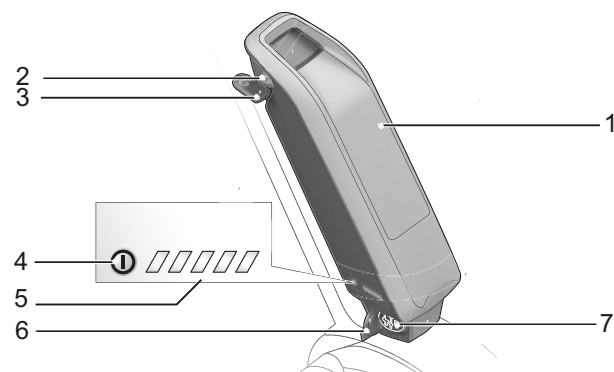


Figure 30: Details of frame battery

- 1 Battery housing
- 2 Battery lock
- 3 Battery key
- 4 On-off button (battery)
- 5 Battery level indicator (battery)
- 6 Charging port cover
- 7 Charging port

3.3.8.4 Pannier rack battery

Three different types of pannier rack batteries can be fitted:



Figure 31: Overview of pannier rack battery

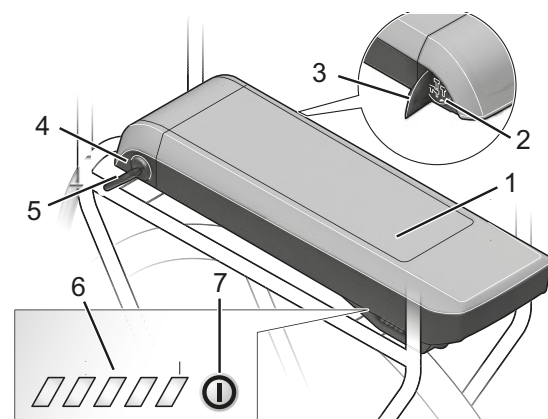


Figure 32: Details of pannier rack battery

- 1 Battery housing
- 2 Charging port
- 3 Charging port cover
- 4 Battery lock
- 5 Battery key
- 6 Battery level indicator (battery)
- 7 On-Off button (battery)

3.3.8.5 Integrated battery

Four different types of pannier rack batteries can be fitted:

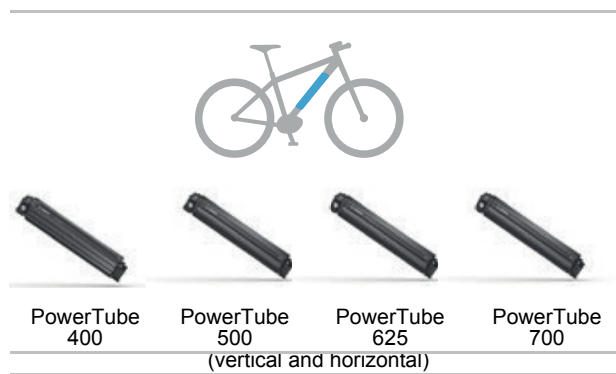


Figure 33: Overview of integrated battery

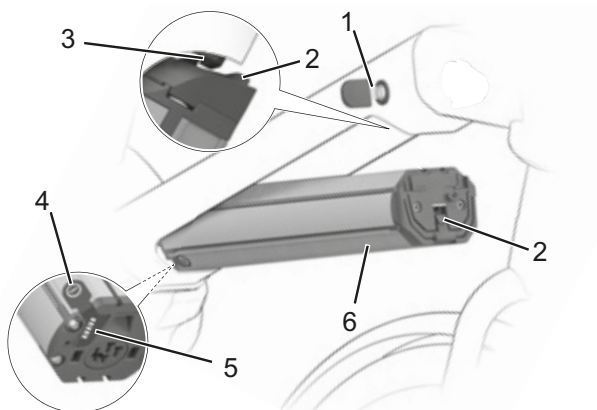


Figure 34: Integrated battery in detail

- 1 Battery key
- 2 Retainer guard
- 3 Securing hook
- 4 On-off button (battery)
- 5 Battery level indicator (battery)
- 6 Battery housing

3.3.8.6 Charger

Each pedelec is supplied with a charger. As a general rule, any BOSCH charger may be used:

- The 2 A compact charger
- The 4 A standard charger
- The 6 A fast charger

Observe the operating instructions in the Section 11.4 Documents.

3.3.9 Lighting

When the riding light is activated, the front light and the rear light are switched on together.

3.3.10 On-board computer

The pedelec has a BOSCH Intuvia on-board computer.

The on-board computer controls the drive system and displays the journey data.

The rider can switch off the electric drive system by removing the on-board computer.

The battery powers the on-board computer if the on-board computer is inserted in its mount, a sufficiently charged battery is inserted into the pedelec and the electric drive system is switched on. If the rider removes the display from its mount, the display is powered by a on-board computer battery. The on-board computer battery cannot be replaced.



Figure 35: BOSCH Intuvia on-board computer

3.3.10.1 USB port

There is a USB port beneath the rubber cover on the right-hand edge of the on-board computer.

3.3.11 Control panel

The control panel controls the electric drive system.



Figure 36: Overview of control panel

3.4 Description of controls and screens

3.4.1 Handlebars

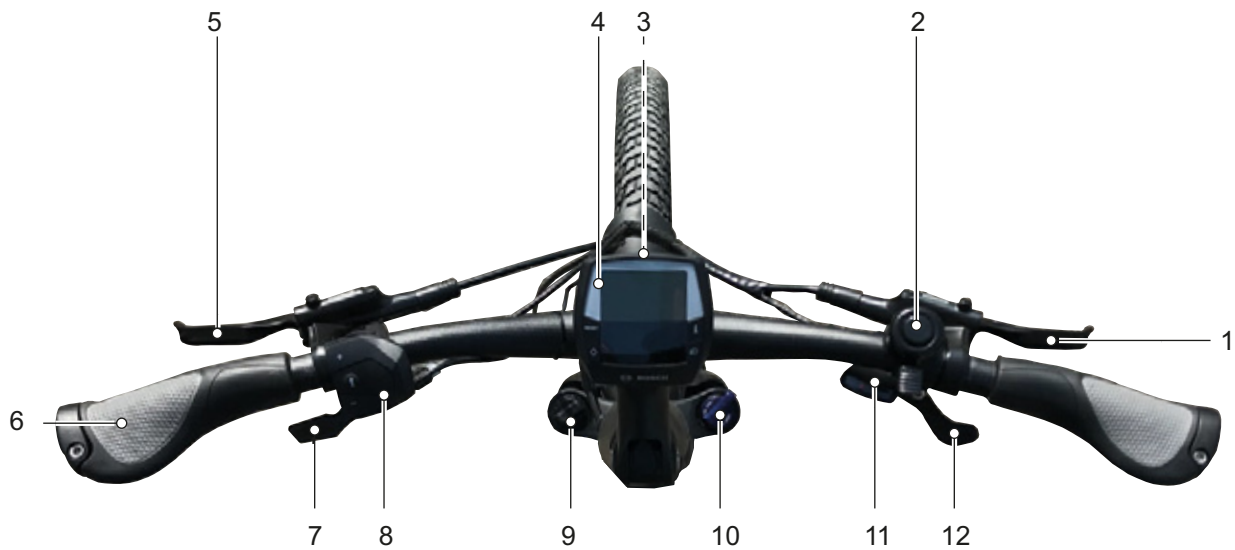


Figure 37: Detailed view of handlebars with BOSCH Intuvia on-board computer, example

1	Rear wheel hand brake	7	Seat post remote control
2	Bell	8	Control panel
3	Front light	9	Sag setting wheel
4	On-board computer	10	Fork lock, lockout
5	Front wheel hand brake	11	Shift indicator
6	Handle	12	Shifter

3.4.2 On-board computer

The on-board computer is operated using four buttons on its casing and the buttons on the control panel.

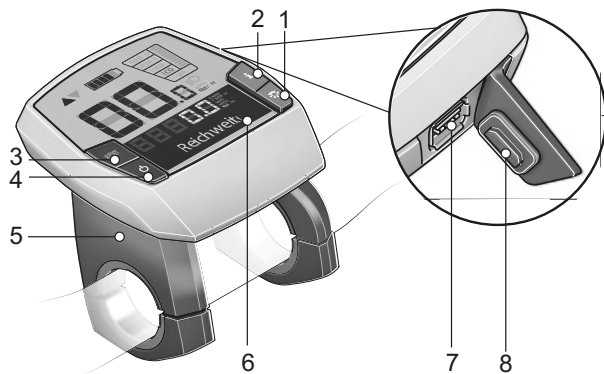


Figure 38: BOSCH Intuvia on-board computer layout

- 1 Riding light button
- 2 Info button (on-board computer)
- 3 RESET button
- 4 On-off button (on-board computer)
- 5 On-board computer mount
- 6 On-board computer
- 7 USB port
- 8 USB port protective flap

The on-board computer has seven indicators:

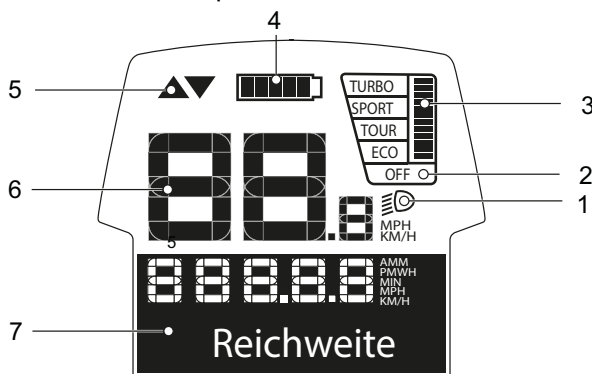


Figure 39: Overview of on-board computer display screen

- 1 Riding light indicator, see Section [3.4.2.1](#)
- 2 Level of assistance indicator, see Section [3.4.2.2](#)
- 3 Motor power used indicator, see Section [3.4.2.4](#)
- 4 Battery level indicator (on-board computer), see Section [3.4.2.3](#)
- 5 Gear recommendation indicator, see Section [3.4.2.5](#)
- 6 Tachometer display, see Section [3.4.2.6](#)
- 7 Function display, see Section [3.4.2.7](#)

3.4.2.1 Riding light indicator

The riding light indicator lights up when the riding light is activated.

3.4.2.2 Level of assistance indicator

The higher the selected level of assistance, the more the electric drive system assists the rider when pedalling. These levels of assistance are available.

Level of assistance	Use
TURBO	Maximum assistance up to high pedalling frequencies for sport riding.
SPORT	Powerful assistance, for sport rides on mountainous rides and on urban roads.
TOUR	Constant assistance, for long-range tours
ECO	Low assistance for maximum range with maximum efficiency.
OFF	When the drive system is switched on, the motor assistance is switched off. The pedelec can be used like a normal bicycle by simply pedalling. Push assist is disabled.

Table 12: Overview of levels of assistance, standard

The eMTB MODE level of assistance is available for Performance Line CX drives. In eMTB MODE, the assistance factor and the torque are adjusted dynamically, depending on the pedalling force applied to the pedals. If the pedelec has been configured with eMTB MODE, eMTB MODE will appear briefly when the SPORT level of assistance is selected.

Level of assistance	Use
TURBO	Maximum assistance up to high pedalling frequencies, for sport riding
eMTB	Optimum assistance on any terrain, sporty start-up, improved dynamics and maximum performance.
TOUR	Constant assistance, for long-range tours
ECO	Low assistance for maximum range with maximum efficiency.
OFF	When the drive system is switched on, the motor assistance is switched off. The pedelec can be used like a normal bicycle by simply pedalling. Push assist is disabled.

Table 13: Overview of levels of assistance – eMTB mode

3.4.2.3 Charge level indicator (on-board computer)

The battery level indicator displays the pedelec battery level, not the level for the on-board computer's internal battery. If the on-board computer is removed from its mount, the last battery level displayed is saved. Each bar in the battery symbol on the screen represents 20% capacity.




Symbol	Meaning
	The battery is fully charged.
	The battery needs to be recharged.
	The LEDs on the battery level indicator have gone out. The capacity for drive assistance has been used up and assistance is gently switched off. The remaining capacity is reserved for lighting and the on-board computer. The screen flashes. The pedelec battery capacity is sufficient to provide 2 more hours of lighting. Other electrical loads, such as automatic gears and charging of external devices connected to the USB port, are not taken into account here.

Table 14: Overview of battery level indicator

If a pedelec is used with two batteries, the battery level indicator shows the charge level for both batteries.

If both batteries are being charged on a pedelec, the function display shows the charging progress for both batteries. You can see which of the two batteries is being charged as the indicator will flash on the battery being charged.

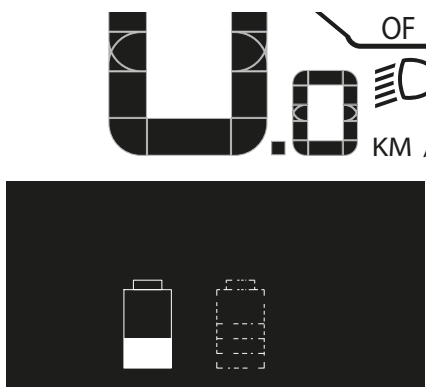


Figure 40: The left-hand battery is being charged

You can also see the battery charge level on the level indicator LEDs (battery).

3.4.2.4 Indicator for motor power used

If the motor is active, the indicator for the motor power used is shown on the on-board computer display. The maximum motor power depends on the selected level of assistance. A long bar indicates high power consumption.

3.4.2.5 Gear recommendation indicator

Peddalling frequencies higher than 50 revolutions per minute optimise drive unit efficiency. However, very slow pedalling uses up a great deal of energy. The speed and range can be increased while applying the same force if you select the right gear.

The gear recommendation function reacts to excessively slow or excessively quick pedalling and recommends a change of gear.

- ✓ The gear recommendation function has to be switched on in the system settings.



Symbol	Use
	Peddalling frequency is too high, a higher gear is recommended
	Peddalling frequency is too low, a lower gear is recommended

Table 15: Symbols of the gear recommendation function

3.4.2.6 Tachometer indicator

The tachometer indicator shows the current speed at all times.

You can select whether the speed is displayed in kilometres or miles in the system settings.

3.4.2.7 Function display

The function display shows texts and readings. Three different types of information are shown:

- Journey information,
- System settings and data, and
- System messages

3.4.2.8 Journey information

Depending on the type of pedelec, the function display may show up to seven journey information items. The displayed journey information can be switched.

Display	Function
CLOCK	Current time
MAX. SPEED	Maximum speed reached since the last RESET
AVG. SPEED	Average speed reached since the last RESET
TRIP TIME	Journey time since last RESET
RANGE	Estimated range of the available battery charge
ODOMETER	Display of the total distance travelled (cannot be changed)
TRIP DISTANCE	Distance travelled since the last RESET

Table 16: Journey information

3.4.2.9 Additional journey information

Only applies to SHIMANO DI2 automatic hub gears

The following additional function is available on the function display:

Display	Change
AUTO: ON/AUTO: OFF	This menu option indicates whether the automatic mode is switched on or off.

Table 17: Additional journey information for SHIMANO DI2 automatic hub gears

Applies only to eShift with manual Shimano DI2 hub gears

The following additional function is available on the function display:

Display	Change
GEAR	The gear shift currently selected is displayed on the on-board computer display screen. The new selected gear is shown briefly on the on-board computer each time it is changed.

Table 18: Additional eShift journey information with manual Shimano DI2 hub gears

Applies only to eShift with SHIMANO DI2 automatic hub gears

The following additional function is available on the function display:

Display	Change
GEAR	The gear shift currently selected is displayed on the on-board computer display screen. The new selected gear is shown briefly on the on-board computer each time it is changed.

Table 19: Additional eShift journey information with Shimano DI2 hub gears

Applies only to eShift with NuVinci H|Sync/
ENVILO with Optimized H|Sync

The following additional function is available on the function display:

Display	Change
± NUVINCI CADENCE / ± NUVINCI GEAR	The gear shift currently selected is displayed on the on-board computer display screen. The new selected gear is shown briefly on the on-board computer each time it is changed. The standard setting is ± NuVinci cadence.

Table 20: Additional journey information eShift with NuVinci H|Sync/enviolo with Optimized H|Sync

Applies only to eShift with ROHLOFF E-14
Speedhub 500/14

The following additional functions are available on the function display:

Display	Change
GEAR	The gear shift currently selected is displayed on the on-board computer display screen. The new selected gear is shown briefly on the on-board computer each time it is changed.

Table 21: Additional journey information eShift with ROHLOFF E-14 Speedhub 500/14

3.4.2.10 System settings and data

The system settings need to be opened to see the system settings and specifications. The system setting values can be changed but the system specifications can't.

Display	Function
Changeable system settings	
- CLOCK +	Changes the time
- WHEEL CIRCUM +	Wheel circumference in mm
- ENGLISH +	Changes the language
- UNIT KM/MI +	Selects whether the speed and distance are displayed in kilometres or miles
- TIME FORMAT +	Select whether the time is displayed in 12-hour clock or 24-hour clock format
- SHIFT RECOM. OFF +	Switches the gear recommendation on and off
Invariable system settings	
POWER ON HOURS	Display of the total journey duration
DISPL. VX.X.X.X	On-board computer software version
DU VX.X.X.X	Drive system software version
DU# XXXX XXXXX	Drive system serial number
SERVICE MM/YYYY	(Alternative) defined inspection date
SERV. XX KM/MI	(Alternative) defined inspection
BAT. VX.X.X.X	Software version
1.BAT VX.X.X.X	Software version
2.BAT VX.X.X.X	Software version

Table 22: Changeable system settings

3.4.2.11 Additional system settings

Applies only to eShift with SHIMANO DI2 automatic hub gears

Display	Change
– Start gear +	This is where you can set the start gear. The automatic gear switch function is switched off in Position – –. This menu option is only shown when the on-board computer is positioned in its mount.
Gear adjustment	You can use this menu option to make a fine adjustment to the SHIMANO DI2. You'll find the specified setting range described in the gear manufacturer's operating instructions. Make fine adjustments if the gear shift makes unusual noises. This menu option is only shown when the on-board computer is positioned in its mount.
Gear vx.x.x.x:	this is the gear software version. This menu option is only shown when the on-board computer is positioned in its mount. This menu option is only shown if you have an electronic control gear.

Table 23: Changing the system settings

Applies only to eShift with manual SHIMANO DI2 hub gears

Display	Change
– Start gear +	This is where you can set the start gear. The automatic gear switch function is switched off in Position – –. This menu option is only shown when the on-board computer is positioned in its mount.
Gear adjustment	You can use this menu option to make a fine adjustment to the SHIMANO DI2. You'll find the specified setting range described in the gear manufacturer's operating instructions. Make fine adjustments if the gear shift makes unusual noises. This menu option is only shown when the on-board computer is positioned in its mount.
Gear vx.x.x.x:	this is the gear software version. This menu option is only shown when the on-board computer is positioned in its mount. This menu option is only shown if you have an electronic control gear.

Table 24: Changing the system settings

Applies only to eShift with SHIMANO DI2 automatic hub gears.

Display	Change
Gear adjustment	You can use this menu option to make a fine adjustment to the SHIMANO DI2. You'll find the specified setting range described in the gear manufacturer's operating instructions. Make fine adjustments if the gear shift makes unusual noises. This menu option is only shown when the on-board computer is positioned in its mount.
Gear recovery	You can use this menu option to reset the rear derailleur if it has been detached – due to a crash or impact against the derailleur, for example. You will find a description of how to reset the gear shift in the gear shift manufacturer's operating instructions. This menu option is only shown when the on-board computer is positioned in its mount.
Gear vx.x.x.x:	this is the gear software version. This menu option is only shown when the on-board computer is positioned in its mount. This menu option is only shown if you have an electronic control gear.

Table 25: Changing the system settings

Applies only to eShift with NuVinci H|Sync/ ENVIOLLO with Optimized H|Sync

Display	Change
Gear calibration	This is where the continuously adjustable gear is calibrated. You might need to perform calibration while riding in the event of a fault. The menu option is only shown when the on-board computer is positioned in its mount <ul style="list-style-type: none"> ▶ Press on the Lighting button to confirm calibration. ▶ Follow the instructions.
Gear vx.x.x.x:	this is the gear software version. This menu option is only shown when the on-board computer is positioned in its mount. This menu option is only shown if you have an electronic control gear.

Table 26: Changing the system settings

Applies only to eShift with ROHLOFF E-14
Speedhub 500/14

Display	Change
Start gear	This is where you can set the start gear. The automatic gear switch function is switched off in Position – –. This menu option is only shown when the on-board computer is positioned in its mount.
Gear vx.x.x.x:	This is the gear software version. This menu option is only shown when the on-board computer is positioned in its mount. This menu option is only shown if you have an electronic control gear.

Table 27: Changing the system settings

3.4.2.12 System message

The drive system monitors itself continuously and displays a number as a system message if a known error is detected. The system may switch off automatically depending on the type of error. You will find more information and a table containing all system messages in Section 6.2.

3.4.3 Control panel

The on-board computer is operated using four buttons on the control panel.

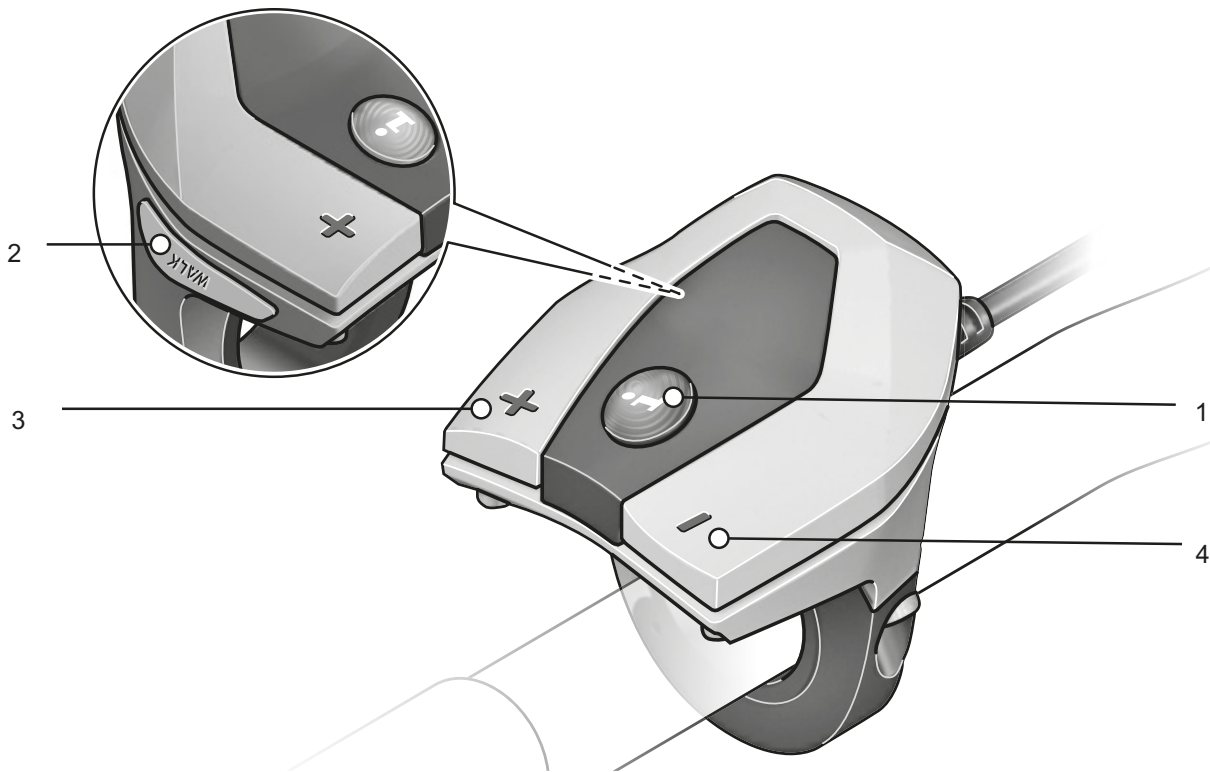


Figure 41: Overview of BOSCH control panel

- 1 Info button (control panel)
- 2 Push assist button
- 3 Plus button (control panel)
- 4 Minus button (control panel)

3.4.4 Gear shift

3.4.4.1 SHIMANO hub gear

Only applies to vehicles with this equipment

SHIMANO hub gears feature a twist grip with a display on the right-hand side of the handlebars.

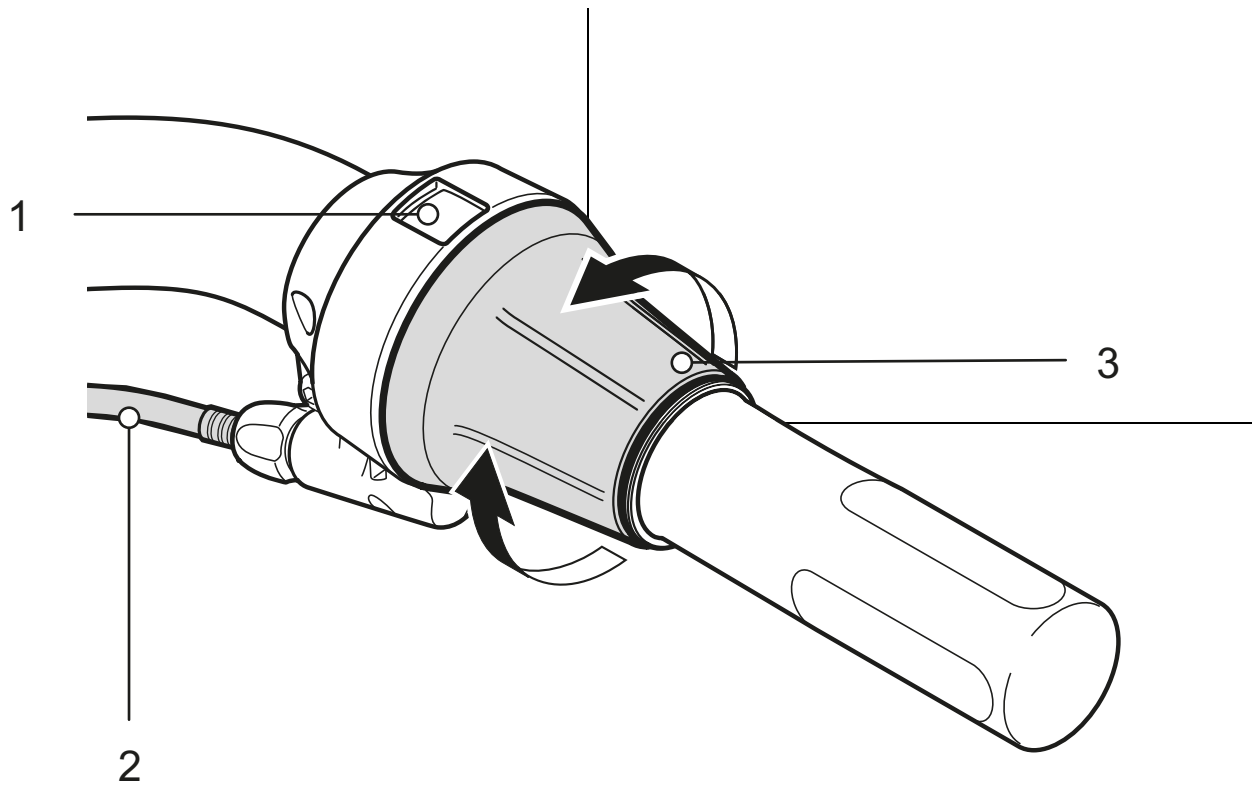


Figure 42: ENVIOLLO twist grip with indicator

- 1 Gear indicator
- 2 Gear cable
- 3 Twist grip

3.4.4.2 ENVIOLLO hub gear

Only applies to vehicles with this equipment

The Automatic+ system is integrated into the drive system and offers an automatic switching option. The automatic ENVIOLLO gear shift includes a twist grip with an indicator.

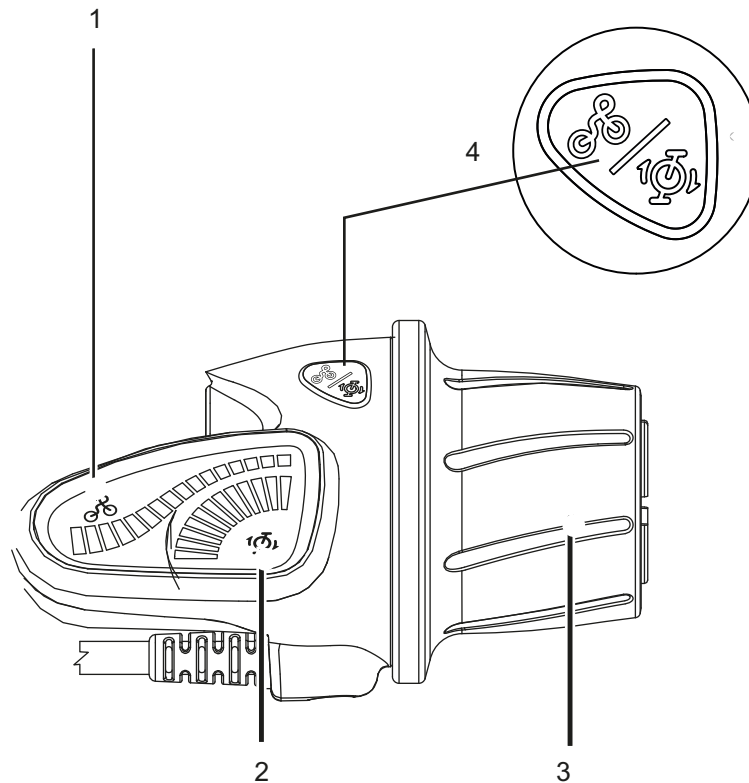


Figure 43: ENVIOLLO twist grip with indicator

- 1 Manual gear shift indicator
- 2 Automatic gear shift indicator
- 3 Twist grip
- 4 Mode button

The rider has the choice between automatic and manual gear switching.

In automatic mode, the system automatically adjusts transmission to maintain the preferred pedalling frequency. The required pedalling frequency is set on the on-board computer.

In manual switching mode, the rider uses the twist grip to shift up and down gears.

3.4.4.3 ROHLOFF E-14 hub gear

Only applies to vehicles with this equipment

The ROHLOFF E-14 only works when the drive system is switched on. The drive system motor assistance is switched off automatically when the battery is low. The pedelec's light devices will continue working for another 2 hours. The gear shift will also continue to work within this time.

The E-14 can change gears when not under load and can switch through all gears when stationary.

The ROHLOFF E-14's direct connection and permanent communication with the drive system's CAN bus provides continuous evaluation of

- the drive system's current level of assistance
- the drive crank's current position
- the rider's current power output.

The gear change takes about 0.2 seconds to complete.

The rider needs to press buttons on the ROHLOFF E-14 handlebar switch unit to change gears in the ROHLOFF E-14.

There are three buttons on the ROHLOFF E-14 handlebar switch unit:



Figure 44: ROHLOFF gear shift

- 1 Plus button (gear shift)
- 2 M-button
- 3 Minus button (gear shift)

The ROHLOFF E-14 offers the option of setting a start gear. When the <Start gear> function is activated, the pedelec is automatically shifted down to the configured start gear when it comes to a standstill for longer than 3 seconds (auto-downshift) if the last gear change is higher than the configured start gear and the driving speed was previously faster than 10 km/h.

The pedals also need to be not subject to pressure when stationary.

3.4.5 Hand brake

There is a hand brake on the left and right of the handlebars.

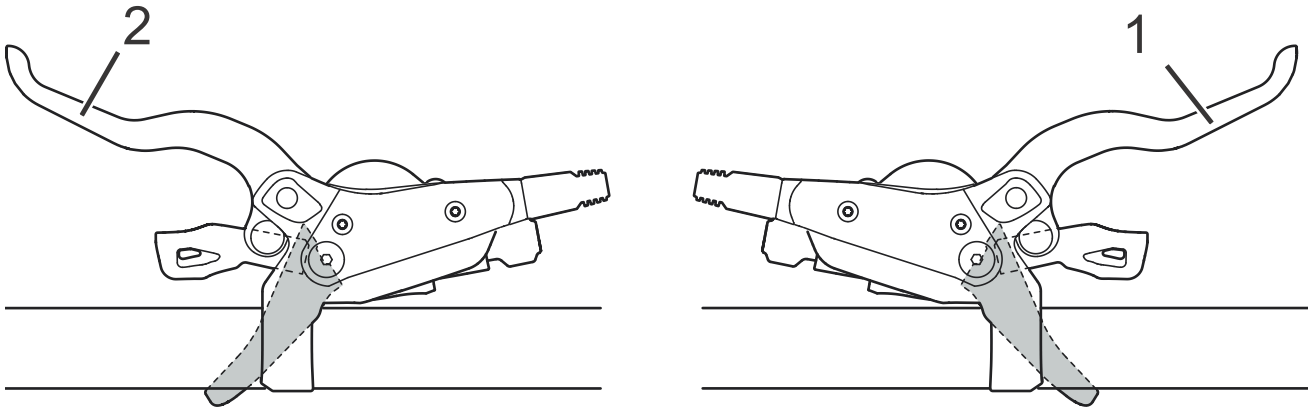


Figure 45: Front wheel (2) and rear (1) brake levers – Shimano brake used as an example

- The left-hand brake controls the front wheel brake.
- The right-hand brake controls the rear wheel brake.

3.4.6 Fork lock

Only applies to vehicles with this equipment

The suspension in suspension forks is set using fork locks. The fork locks are either directly on the suspension fork or can be controlled using the remote control on the handlebars.

3.4.6.1 SR Suntour

The following (compression adjusters) may be featured on the suspension fork:

Model	RL	RL-R	LO	LO-R	HLO
	Lockout with remote control	Lockout with remote control + rebound adjustment	Lockout on the fork	Rebound adjustment + lockout on the fork	Hydraulic lockout
					
Axon		x		x	
CR			x		x
M3010					
MOBIE25		x		x	
NCX	x		x		
NEX	x		x		x
NVX	x				x
XCE					
XCM	x		x	x	
XCR	x	x	x	x	
XCT					x

Table 28: Fork lock by suspension fork

3.4.7 Battery level indicator (battery)

Each battery has its own level indicator:

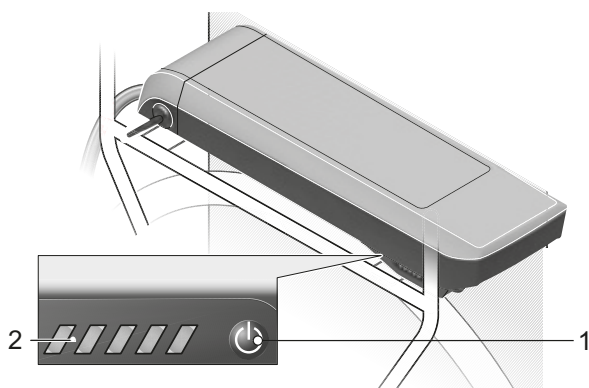


Figure 46: Position of charge level indicator on pannier rack battery

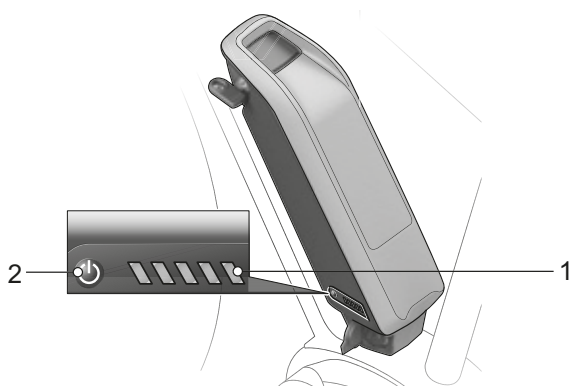


Figure 47: Position of charge level indicator on seat tube battery

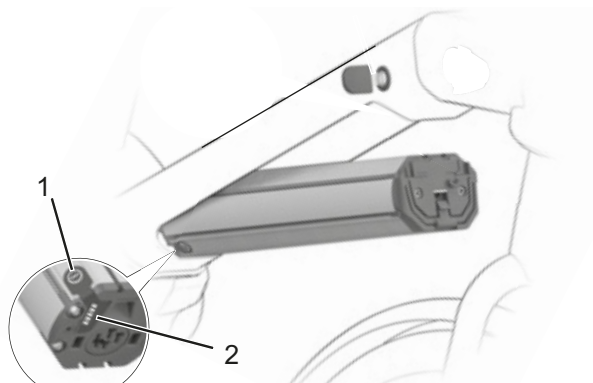


Figure 48: Position of charge level indicator on integrated battery

- 1 On-Off button (battery)
- 2 Battery level indicator (battery)

3.4.7.1 Battery level indicator (battery)

The five green LEDs on the battery level indicator show the charge level when the battery is switched on. Each LED represents 20% of battery capacity.

LED 1,2,3,4,5	Battery level
● ● ● ● ●	100...80%
● ● ● ● ○	79...60%
● ● ● ○ ○	59...40%
● ● ○ ○ ○	39...20%
● ○ ○ ○ ○	19...15%
○ ○ ○ ○ ○	5...0%

Figure 49: Battery level indicator

Symbols:



All five LEDs will light up when the battery is fully charged. The charge level for the activated battery is also shown on the on-board computer.

If the battery level falls below 5%, all the LEDs on the operating status and battery level indicator will go out.

The battery level is still shown on the on-board computer.

3.5 Technical data

3.5.1 Pedelec

Power output/system	250 W (0.25 W)
Shut-off speed	25 km/h

Table 29: Pedelec technical data

3.5.2 Emissions

A-weighted emission sound pressure level	< 70 dB(A)
Total vibration level for the hands and arms	< 2.5 m/s ²
Highest effective value of weighted acceleration for the entire body	< 0.5 m/s ²

Table 30: Emissions from the pedelec*

*The safety requirements as per Electromagnetic Compatibility Directive 2014/30/EU have been met. The pedelec and the charger can be used in residential areas without restriction.

3.5.3 Tightening torque

Axle nut tightening torque	35... 40 Nm
Handlebars clamping screw maximum tightening torque*	5... 7 Nm

Table 31: Tightening torque values

*if there is no other data on the component

3.5.4 Bicycle lighting

Voltage about	12 V
Maximum output	
Front light	17.4 W
Rear light	0.6 W

Table 32: Bicycle lighting

3.5.5 Intuvia on-board computer

Internal lithium ion battery	3.7 V, 230 mAh
Operating temperature	-5... +40 °C
Storage temperature	-10... +50 °C
Charging temperature	0... +40 °C
Protection class (with USB cover closed)	IP54
Weight about	0.15 kg

Table 33: Intuvia on-board computer technical data (BUI255)

3.5.5.1 USB port

Charge voltage	5 V
Charging current	Max. 500 mA

Table 34: USB port technical data

3.5.6 Motor

3.5.6.1 Active Line

Maximum continuous power	250 W
Max. torque	40 Nm
Nominal voltage	36 V DC
Protection class	IP54
Weight about	2.9 kg
Operating temperature	-5... +40 °C
Storage temperature	-10... +40 °C

Table 35: Technical data for Active Line BDU310 motor

3.5.6.2 Active Line Plus

Maximum continuous power	250 W
Max. torque	50 Nm
Nominal voltage	36 V DC
Protection class	IP54
Weight about	3.2 kg
Operating temperature	-5... +40 °C
Storage temperature	-10... +40 °C

Table 36: Technical data for Active Line Plus BDU350 motor

3.5.6.3 Performance Line

Maximum continuous power	250 W
Max. torque	65 Nm
Nominal voltage	36 V DC
Protection class	IP54
Weight	3.2 kg
Operating temperature	-5... +40 °C
Storage temperature	-10... +40 °C

Table 37: Technical data for Performance Line BDU365 motor

3.5.6.4 Performance Line CX

Maximum continuous power	250 W
Max. torque	85 Nm
Nominal voltage	36 V DC
Protection class	IP54
Weight	3 kg
Operating temperature	-5... +40 °C
Storage temperature	-10... +40 °C

Table 38: Technical data for Performance Line motor CX, BDU450CX

3.5.7 Rechargeable battery

3.5.7.1 PowerPack 300

Nominal voltage	36 V
Nominal capacity	8.2 Ah
Energy	300 Wh
Weight	2.5/ 2.6 kg
Protection class	IP54
Operating temperature	-5... +40 °C
Storage temperature	+10... +40 °C
Permitted charging temperature range	0... +40 °C

Table 39: Technical data for PowerPack 300, BBS245 and BBR245 batteries

3.5.7.2 PowerPack 400

Nominal voltage	36 V
Nominal capacity	11 Ah
Energy	400 Wh
Weight	2.5/ 2.6 kg
Protection class	IP54
Operating temperature	-5 °C... 40 °C
Storage temperature	+10... +40 °C
Permitted charging temperature range	0 °...40 °C

Table 40: Technical data for PowerPack 400, BBS265 and BBR265 batteries

3.5.7.3 PowerPack 500

Nominal voltage	36 V
Nominal capacity	13.4 Ah
Energy	500 Wh
Weight	2.6/ 2.7 kg
Protection class	IP54
Operating temperature	-5... +40 °C
Storage temperature	+10... +40 °C
Permitted charging temperature range	0... +40 °C

Table 41: Technical data for PowerPack 500, BBS275 and BBR275 batteries

3.5.7.4 PowerTube 400

Nominal voltage	36 V
Nominal capacity	11 Ah
Energy	400 Wh
Weight	2.9 kg
Protection class	IP54
Operating temperature	-5... +40 °C
Storage temperature	+10... +40 °C
Permitted charging temperature range	0... +40 °C

Table 42: Technical data for PowerTube 400, BBP282 and BBP283 vertical batteries

3.5.7.5 PowerTube 500 battery

Nominal voltage	36 V
Nominal capacity	13.4 Ah
Energy	500 Wh
Weight	2.9 kg
Protection class	IP54
Operating temperature	-5... +40 °C
Storage temperature	+10... +40 °C
Permitted charging temperature range	0... + 40 °C

Table 43: Technical data for PowerTube 500, BBP280 horizontal and BBP281 vertical batteries

3.5.7.6 PowerTube 625 battery

Nominal voltage	36 V
Nominal capacity	16.7 Ah
Energy	625 Wh
Weight	3.5 kg
Protection class	IP54
Operating temperature	-5... +40 °C
Storage temperature	+10... +40 °C
Permitted charging temperature range	0... 40 °C

Table 44: Technical data for PowerTube 625, BBP282 and BBP283 vertical batteries

3.5.8 BOSCH Pedelec ABS BAS100

Operating temperature	-5... +40 °C
Storage temperature	10... +60 °C
Protection class	IPx7
Weight about	1 kg

Table 45: BOSCH pedelec ABS BAS100 technical data

4 Transporting and storing

4.1 Weight and dimensions for transportation

Weight and dimensions during transport

Type no.	Frame	Box dim. [cm]	Weight** [kg]	Shipping weight [kg]
21-Y-0005	52	#	22	#
21-Y-0006	52	#	22	#
22-P-0001	53	#	27	#
	57	#	27	#
	61	#	27	#
22-P-0002	45	#	27	#
	49	#	27	#
	53	#	27	#
	57	#	27	#
22-P-0003	53	#	27	#
	57	#	27	#
	61	#	27	#
22-P-0004	45	#	27	#
	49	#	27	#
	53	#	27	#
22-P-0005	45	#	27	#
	49	#	27	#
	53	#	27	#
	57	#	27	#
22-P-0006	57	#	29	#
	61	#	29	#
	65	#	29	#
22-P-0007	45	#	29	#
	49	#	29	#
	53	#	29	#
22-P-0008	57	#	29	#
	61	#	29	#
	65	#	29	#
22-P-0009	45	#	29	#
	49	#	29	#
	53	#	29	#

Table 46: Type number, model and pedelec type

Type no.	Frame	Box dim. [cm]	Weight** [kg]	Shipping weight [kg]
22-P-0010	57	#	29	#
	61	#	29	#
	65	#	29	#
22-P-0011	45	#	29	#
	49	#	29	#
	53	#	29	#
22-P-0012	64	#	28	#
	55	#	28	#
	60	#	28	#
	68	#	28	#
22-P-0013	46	#	28	#
	50	#	28	#
	55	#	28	#
	60	#	28	#
22-P-0014	64	#	28	#
	55	#	28	#
	60	#	28	#
	68	#	28	#
22-P-0015	46	#	28	#
	50	#	28	#
	55	#	28	#
22-P-0016	64	#	28	#
	55	#	28	#
	60	#	28	#
22-P-0017	64	#	28	#
	55	#	28	#
	60	#	28	#
22-Q-0001	43	#	27	#
	45	#	27	#
22-Q-0002	50	#	27	#
	55	#	27	#
22-Q-0003	43	#	27	#
	45	#	27	#

Table 46: Type number, model and pedelec type

Type no.	Frame	Box dim. [cm]	Weight** [kg]	Shipping weight [kg]
22-Q-0004	45	#	27	#
	50	#	27	#
	55	#	27	#
22-Q-0010	53	#	27	#
	57	#	27	#
	61	#	27	#
22-Q-0011	49	#	27	#
	53	#	27	#
	57	#	27	#
22-Q-0015	53	#	27	#
	57	#	27	#
	61	#	27	#
22-Q-0016	45	#	27	#
	49	#	27	#
	53	#	27	#
	57	#	27	#
22-Q-0023	53	#	26	#
	57	#	26	#
	61	#	26	#
22-Q-0024	45	#	26	#
	49	#	26	#
	53	#	26	#
22-Q-0025	45	#	26	#
	49	#	26	#
	53	#	26	#
	57	#	26	#
22-Q-0026	53	#	27	#
	57	#	27	#
	61	#	27	#
22-Q-0027	45	#	27	#
	49	#	27	#
	53	#	27	#
	57	#	27	#

Table 46: Type number, model and pedelec type

Type no.	Frame	Box dim. [cm]	Weight** [kg]	Shipping weight [kg]
22-Q-0028	49	#	26	#
	53	#	26	#
	57	#	26	#
	61	#	26	#
22-Q-0029	45	#	26	#
	49	#	26	#
	53	#	26	#
22-Q-0030	45	#	26	#
	49	#	26	#
	53	#	26	#
22-Q-0031	49	#	26	#
	53	#	26	#
	57	#	26	#
22-Q-0032	45	#	26	#
	49	#	26	#
	53	#	26	#
22-Q-0033	45	#	26	#
	49	#	26	#
	53	#	26	#
	57	#	26	#
22-Q-0074	53	#	28	#
	57	#	28	#
	61	#	28	#
22-Q-0075	46	#	28	#
	49	#	28	#
	53	#	28	#
	57	#	28	#
22-Q-0076	53	#	28	#
	57	#	28	#
	61	#	28	#
22-Q-0077	46	#	28	#
	49	#	28	#
	53	#	28	#
	57	#	28	#

Table 46: Type number, model and pedelec type

Type no.	Frame	Box dim. [cm]	Weight** [kg]	Shipping weight [kg]
22-Q-0078	46	#	28	#
	49	#	28	#
	53	#	28	#
	57	#	28	#
22-Q-0079	53	#	28	#
	57	#	28	#
	61	#	28	#
	49	#	28	#
22-Q-0080	53	#	28	#
	57	#	28	#
	61	#	28	#
	46	#	28	#
	49	#	28	#
22-Q-0081	53	#	28	#
	57	#	28	#
	61	#	28	#
	49	#	28	#
22-Q-0082	53	#	28	#
	57	#	28	#
	61	#	28	#
	46	#	28	#
	49	#	28	#
22-Q-0083	40	#	27	#
22-Q-0084	45	#	27	#
	50	#	27	#
	55	#	27	#
	60	#	27	#
22-Q-0085	40	#	27	#
22-Q-0086	45	#	27	#
	50	#	27	#
	55	#	27	#
	60	#	27	#
22-Q-0087	45	#	27	#
	50	#	27	#
	55	#	27	#
	60	#	27	#

Table 46: Type number, model and pedelec type

Type no.	Frame	Box dim. [cm]	Weight** [kg]	Shipping weight [kg]
22-Q-0088	45	#	27	#
	50	#	27	#
	55	#	27	#
22-Q-0089	45	#	25	#
	50	#	25	#
	55	#	25	#
22-Q-0093	47	#	25	#
22-Q-0094	47	#	25	#
22-Q-0095	47	#	25	#
22-Q-0096	47	#	25	#
22-Q-0104	47	#	25	#
22-Q-0105	47	#	25	#
22-Q-0106	47	#	25	#
22-Q-0107	47	#	25	#
22-Q-0108	47	#	25	#
22-X-0001	51	#	57	#
22-X-0002	45	#	35	#
22-X-0003	49	#	29	#
22-Y-0002	52	#	22	#
22-Y-0003	52	#	22	#
22-Y-0004	52	#	22	#
22-Y-0005	52	#	22	#
22-Y-0006	52	#	22	#
22-Y-0007	47	#	22	#
22-Y-0008	47	#	22	#
22-Y-0009	47	#	22	#
22-Y-0010	47	#	22	#
22-Y-0014	47	#	22	#

Table 46: Type number, model and pedelec type

** Vehicle weight without battery

Not yet available when the instructions were produced

4.2 Designated handles, lifting points

The box does not have any handles.

4.3 Transportation



Crash caused by unintentional activation

There is a risk of injury if the drive system is activated unintentionally.

- ▶ Remove the battery.

4.3.1 Using the brake transport securing system

Applicable for pedelec disc brakes only.



Oil leak if no transport securing device

The brake securing device prevents the brakes from being applied accidentally during transportation or shipment. This could cause irreparable damage to the brake system or an oil leak, which will harm the environment.

- ▶ Never push the brake lever when the wheel has been dismantled.
 - ▶ Always use the transport securing system when transporting or shipping.
-
- ▶ Insert the **transport securing devices** between the brake linings.
- ⇒ Transport securing device is squeezed between the two linings and prevents undesired sustained braking which can cause brake fluid to leak out.

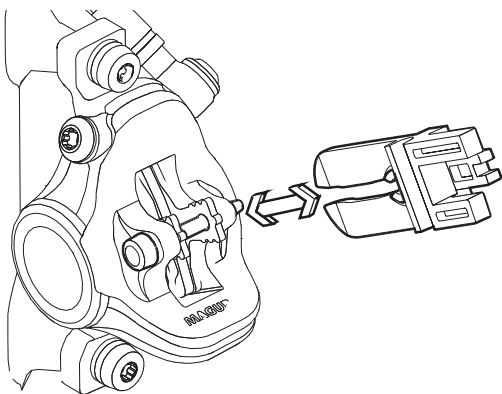


Figure 50: Fastening the transport securing device

4.3.2 Transporting the pedelec

Bicycle rack systems which use the handlebars or frame to hold the pedelec in an upside-down position exert inadmissible forces on its components during transportation. This can cause the supporting parts to break.

- ▶ Never use bicycle rack systems which use the pedelec's handlebars or frame to hold it in an upside-down position. The specialist dealer will give a consultation on correct selection and safe use of a rack system.
- ▶ Take into account the weight of the ready-to-use pedelec when transporting it.
- ▶ Protect the electrical components and connections on the pedelec from the weather conditions with suitable protective covers.
- ▶ Transport the battery in a dry, clean position where it is protected from direct sunlight.

4.3.3 Shipping a pedelec

- ▶ When shipping the pedelec, we recommend that you have the specialist dealer place it in proper packaging.

4.3.4 Transporting the battery

Batteries are subject to hazardous goods regulations. Undamaged batteries may be transported by private persons in road traffic.

Commercial transport requires compliance with regulations concerning packaging, labelling and the transportation of hazardous goods. Open contacts must be covered and the battery securely packaged.

4.3.5 Shipping the battery

The battery is considered a hazardous good and only trained persons may pack and ship a battery. Contact specialist dealer.

4.4 Storing

- ▶ Store pedelec, on-board computer, battery and charger in a clean, dry place where they are protected from sunlight. Do not store outdoors to ensure a long service life.

Optimum pedelec storage temperature	+10... +20 °C
-------------------------------------	---------------

Table 47: Storage temperature for batteries and the pedelec

- ✓ Temperatures under -10 °C or over +40 °C must generally be avoided.
- ✓ Storage at about 10 °C to 20 °C is beneficial to a long battery life.
- ✓ Store pedelec, on-board computer, battery and charger separately.

4.4.1 Break in operation

Notice

The battery discharges when not in use. This can cause irreparable damage to the battery.

- ▶ The battery must be recharged every 6 months.

The battery may become damaged if it is connected permanently to the charger.

- ▶ Never connect the battery to the charger permanently.

The on-board computer battery discharges when it is not in use. This can cause irreparable damage to it.

- ▶ Recharge the on-board computer battery for at least 1 hour every 3 months.

- ▶ Remove the on-board computer from its mount if the pedelec is not going to be used for up to four weeks. Store the on-board computer away safely in a dry environment at room temperature.
- ▶ If the pedelec is removed from service for longer than four weeks, you need to prepare it for a break in operation.

4.4.1.1 Preparing a break in operation

- ✓ Remove the rechargeable battery from the pedelec.
- ✓ Charge battery to 30%–60%.
- ✓ The pedelec needs to be cleaned with a damp cloth and preserved with wax spray. Never wax the friction surfaces of the brake.
- ✓ Before longer periods without use, it is recommended to have the specialist dealer carry out an inspection and basic cleaning and apply preservative agent.

4.4.1.2 Carrying out a break in operation

- 1 Store the pedelec, battery and charger in a dry, clean environment. We recommend storing them in uninhabited rooms with smoke alarms. Dry locations with an ambient temperature between 10 °C and 20 °C are ideal.
- 2 Recharge the on-board computer battery for at least 1 hour every 3 months.
- 3 Check the battery level after 6 months. If only one LED on the battery level indicator lights up, recharge the battery to between 30% and 60%.



5 Assembly

WARNING

Risk of eye injury

Problems may arise if components are set incorrectly. They may cause serious injuries to the face.

- ▶ Always wear safety glasses to protect eyes when assembling pedelecs.

CAUTION

Crash and crushing hazard caused by unintentional activation

There is a risk of injury if the drive system is activated unintentionally.

- ▶ Remove the battery.

- ✓ Assemble the pedelec in a clean, dry environment.
- ✓ The *work environment* temperature should be between 15 °C and 25 °C.
- ✓ The fitting stand used must be approved for a maximum weight of least 30 kg.

5.1 Unpacking

The packaging material consists mainly of cardboard and plastic film.

- ▶ Dispose of the packaging in accordance with the regulatory requirements (see Section 10).
- ⇒ Pedelecs are fully assembled in the factory for test purposes and then dismantled for transportation. The pedelec is 95% to 98% pre-assembled.

Scope of delivery

<input type="checkbox"/>	1 pre-assembled pedelec
<input type="checkbox"/>	1 front wheel
<input type="checkbox"/>	2 pedals
<input type="checkbox"/>	2 quick releases (optional)
<input type="checkbox"/>	1 charger
<input type="checkbox"/>	1 set of operating instructions on CD.
<input type="checkbox"/>	1 battery (supplied separately from the pedelec)

5.2 Required tools

The following tools are required to assemble the pedelec:

	Knife
	Ring spanners 8 mm, 9 mm, 10 mm, 13 mm, 14 mm and 15 mm
	Torque wrench Working range 5–40 Nm
	by.Schulz handlebars: TORX® bits: 4 mm, 5 mm and 6 mm If not: Hexagon bits: 4 mm, 5 mm and 6 mm
	Hexagon socket spanner 2 mm, 2.5 mm, 3 mm, 4 mm, 5 mm, 6 mm and 8 mm
	Spline nut socket T25
	Cross-recess screwdriver
	Slotted-head screwdriver

Table 48: Tools required for assembly



5.3 Commissioning

Only trained specialist staff may perform initial commissioning since initial commissioning of the pedelec requires special tools and specialist knowledge.

Experience has shown that a pedelec which has not yet been sold is automatically handed to customers as soon as it appears ready to ride.

- ▶ It makes sense to prepare each pedelec so that it is fully ready for use immediately after being assembled.
- ▶ The assembly report (see Section [11.2](#)) describes all safety-relevant inspections, tests and maintenance tasks.
- ▶ All assembly work must be completed to ensure the pedelec is ready to ride.
- ▶ Complete an assembly report to document quality assurance (see Section [11.1](#)).

5.3.1 Checking the battery

The battery must be checked before it is charged for the first time.

- ▶ Press the **On-Off button (battery)**.
- ⇒ If none of the LEDs on the battery level indicator light up, the battery may be damaged.
- ⇒ The battery may be fully charged if at least one, but not all, of the LEDs on the battery level indicator is lit up.



5.3.2 Preparing the battery

5.3.2.1 Retrofitting the PowerTube adapter

Only applies to pedelecs with this equipment

A PowerTube Adapter 400 or 500 needs to be retrofitted to use a BOSCH PowerTube 625 battery.

- 1 Use a TORX® T25 wrench to undo the screws in the battery mount.



Figure 51: Undoing screws on battery mount

- 2 Use a ratchet to remove the two 4 mm hexagon screws in the PowerTube adapter. If you don't have a ratchet, you can use a hexagonal key to remove the screws.



Figure 52: Removing the 4 mm hexagon screws

- 3 Use a ratchet to remove the two 4 mm hexagon screws in the PowerTube adapter.

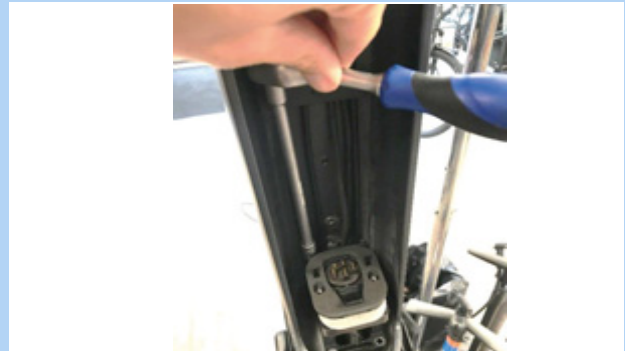


Figure 53: Removing hexagon screws

- 4 Pull out the PowerTube adapter.



Figure 54: Pulling out the PowerTube adapter

- 5 Use adapter plates to adjust the distance if necessary.



Figure 55: Fitted adapter plates



- 6 Use a TORX® T25 wrench to fasten the screws into the battery mount.

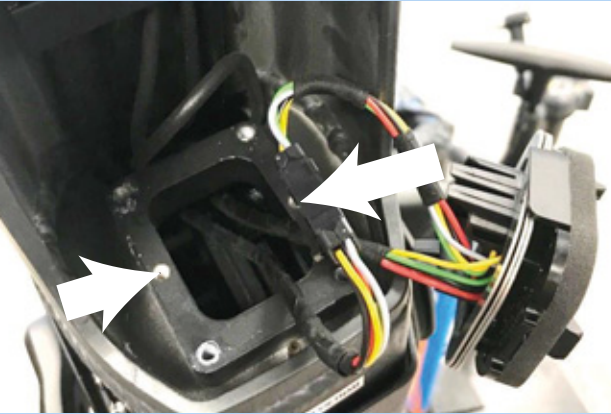


Figure 56: Fastening the battery mount



5.3.2.2 Fit battery cover onto Bosch PowerTube 625 battery (horizontal)

Only applies to pedelecs with this equipment

- 1 Detach the upper interface (lock side) from the BOSCH PowerTube 625 battery with a TORX® T20 wrench.



Figure 57: Detaching the upper interface

- 2 Screw the battery mounting plate to the BOSCH the PowerTube 625 battery with original BOSCH screws (M4 × 8 T20). In doing so, ensure that the removal tab faces the front of the battery.



Figure 58: Fitting the mounting plate

- 3 Press to push the battery cover onto the battery. In doing so, ensure that the battery On-Off switch fits through its designated slot in the cover.

⇒ The battery cover will lock into the fitting grooves on the battery.



Figure 59: Pushing the battery cover onto battery

⇒ The battery can now be inserted into the frame.



5.3.2.3 Fit battery cover onto Bosch PowerTube 500 battery (horizontal)

Only applies to pedelecs with this equipment

- 1 Detach the upper interface (lock side) from the BOSCH PowerTube 625 battery with a TORX® T20 wrench.



Figure 60: Detaching the upper interface

- 2 Fasten the PowerTube extension to the BOSCH PowerTube 500 battery using the two M4 x 8 T20 screws supplied. In doing so, ensure that the closed side faces the front of the battery (towards On-Off switch). The smooth upper surface of the PowerTube extension must face upwards, away from the battery.



Figure 61: Fitting the PowerTube extension

- 3 Screw the battery mounting plate onto the PowerTube extension with original BOSCH screws (M4 × 8 T20). To do so, use the PowerTube extension screw plate as a counter support. When positioning the extension, ensure that the removal tab faces the front of the battery.



Figure 62: Fastening the battery mounting plate

- 4 Press to push the battery cover onto the battery. In doing so, ensure that the battery On-Off switch fits through its designated slot in the cover.

⇒ The battery cover will lock into the fitting grooves on the battery.



Figure 63: Pushing the battery cover onto battery

⇒ The battery can now be inserted into the frame.



5.3.3 Preparing the wheel

There is an arrow on the sides of the tyres with the inscription ROTATION to show the direction of rotation. The inscription says DRIVE on older tyres. The rotation direction arrow indicates the recommended direction of rotation. On road tyres, the direction of rotation is mainly for optical reasons.



Figure 64: Rotation direction arrow

The direction of rotation is much more important on off-road terrain because the tread creates an interlock with the ground. While the rear wheel needs to transmit the drive forces, the front wheel is responsible for transmitting braking and steering forces. Drive and braking forces have different directions of action. This is why some tyres are mounted on the front and rear wheels in opposite directions. On these tyres, there are two rotation direction arrows:

- The FRONT rotation direction arrow indicates the recommended direction of rotation for the front wheel.
- The REAR rotation direction arrow indicates the recommended direction of rotation for the rear wheel.



Figure 65: Rotation direction arrow on MTB tyres

- ▶ The rotation direction arrow must point in the direction of travel when the wheel is placed in the fork.
- ▶ There are also non-directional tyre profiles with no rotation direction arrow.



5.3.4 Installing the wheel in the SUNTOUR fork

Only applies to Suntour forks with this equipment

5.3.4.1 Screw-on axle (12AH2 and 15AH2)

Only applies to Suntour forks with this equipment

✓ Before installing the wheel, ensure that the O-ring is in the right position on the thread piece.

- 1 Insert the front wheel into the fork ends.
- 2 Insert the axle into the hub on the drive side.

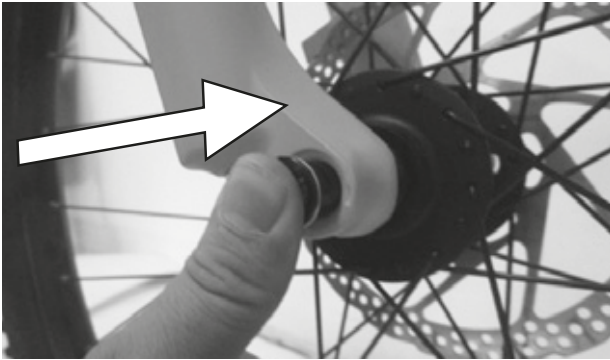


Figure 66: Inserting the axle in the direction of the arrow

- 3 Use a 6 mm hex key to tighten the axle using between 8 and 10 Nm. The axle thread must be visible.



Figure 67: Tighten the axle in the direction of the arrow

- 4 Insert the securing screw on the non-drive side.



Figure 68: Pushing the quick release lever into the axle

- 5 Tighten the securing screw with a 5 mm hex key using between 5 and 6 Nm.



Figure 69: Tightening the securing screw

⇒ The wheel is now fitted.



5.3.4.2 20 mm cross axle

Only applies to Suntour forks with this equipment

CAUTION

Crash caused by loose quick release axle

A faulty or incorrectly installed cross axle may become caught in the brake disc and block the wheel. This will cause a crash.

- ▶ Never fit a defective cross axle.

Crash caused by faulty or incorrectly installed cross axle

The brake disc becomes very hot during operation. Parts of the cross axle may become damaged as a result. The cross axle becomes loose. This will cause a crash with injuries.

- ▶ The cross axle and the brake disc must be opposite one another.

Crash caused by incorrectly set cross axle

Insufficient clamping force will result in unfavourable transmission of force. The suspension fork or the quick release axle may break. This will cause a crash with injuries.

- ▶ Never fasten the cross axle with a tool (e.g. hammer or pliers).

- 1 Insert the cross axle into the hub on the drive side.

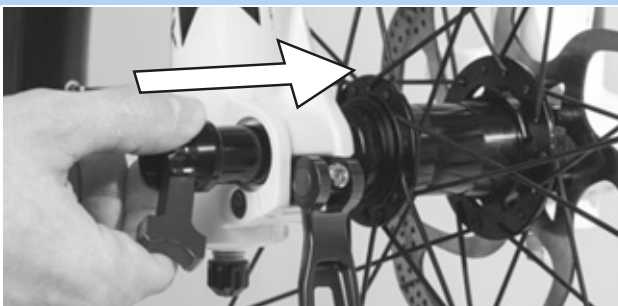


Figure 70: Inserting the cross axle in the direction of the arrow

- 2 Tighten the cross axle with the red handle.

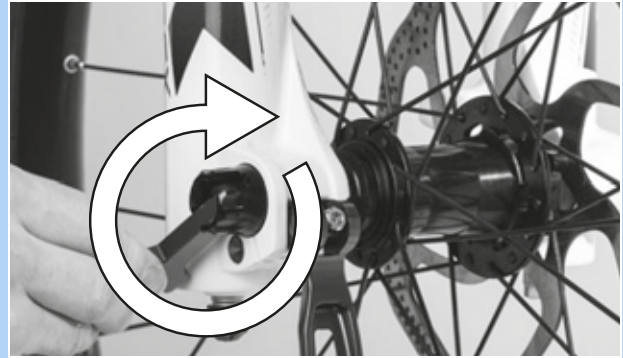


Figure 71: Tighten the axle in the direction of the arrow

- 3 Push red lever into the cross axle.

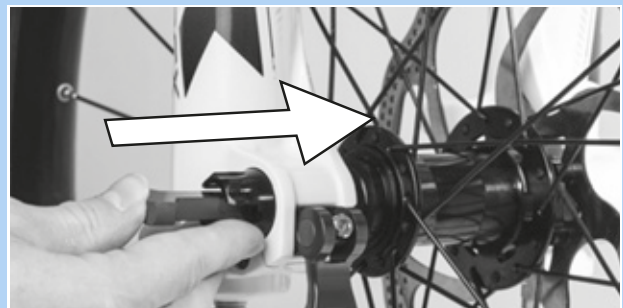


Figure 72: Pushing the red lever in the direction of the arrow

- 4 Closing the quick release lever.



Figure 73: Pressing the quick release lever in the direction of the arrow

⇒ The cross axle is secured.



- 5 Check the position and clamping force of the quick release lever. The quick release lever must be flush with the shock absorber.



Figure 74: Perfect position for the clamping lever

- 6 Use 4 mm hexagon socket spanner to adjust the clamping lever clamping force if required.

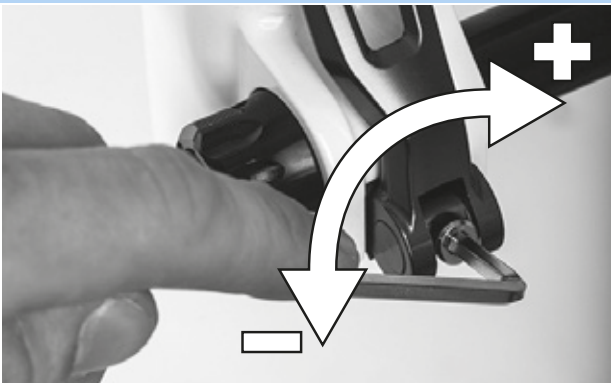


Figure 75: Adjusting the quick release clamping force

- 7 Check the quick release lever position and clamping force.

⇒ The wheel is now fitted.



5.3.4.3 Q-LOC quick release

Only applies to Suntour forks with this equipment

CAUTION

Crash caused by unfastened quick release

A faulty or incorrectly installed quick release may become caught in the brake disc and block the wheel. This will cause a crash.

- ▶ Never fit a defective quick release.

Crash caused by faulty or incorrectly installed quick release

The brake disc becomes very hot during operation. Parts of the quick release may become damaged as a result. The quick release comes loose. This will cause a crash with injuries.

- ▶ The front wheel quick release lever and the brake disc must be situated on opposite sides.

Crash caused by incorrectly set clamping force

Excessively high clamping force will damage the quick release and cause it to lose its function.

Insufficient clamping force will result in unfavourable transmission of force. The suspension fork or the quick release may break. This will cause a crash with injuries.

- ▶ Never fasten a quick release using a tool (e.g. hammer or pliers).
- ▶ Only use the clamping lever with the specified set clamping force.

- ✓ Before installing, ensure that the quick release flange is extended. Open the lever fully.

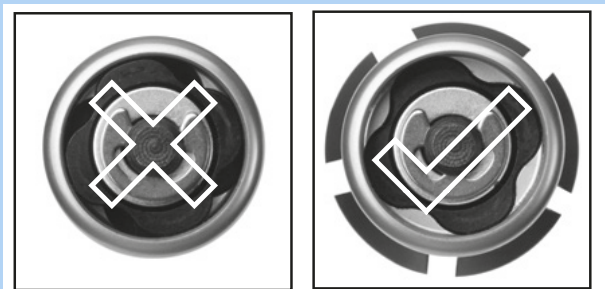


Figure 76: Closed and opened flange

- 1 Push in the quick release until you can hear a click. Make sure that the flange is extended.



Figure 77: Inserting the quick release in the direction of the arrow

- 2 Adjust tensioning with half-open clamping lever until the flange reaches the fork end.



Figure 78: Adjusting the clamping

- 3 Fully close the quick release. Check that it is firmly in place and adjust it on the flange if necessary.

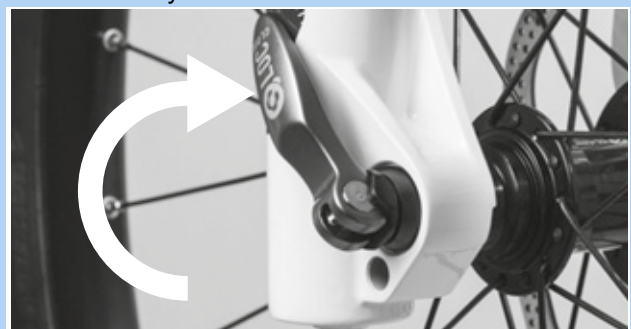


Figure 79: Closing the quick release

⇒ The wheel is now fitted.



5.3.5 Preparing the LIMOTEC seat post

Only applies to pedelecs with this equipment

- 1 Use the seat height formula to calculate the optimum seat post height for the length of rider's leg:
Seat height (SH) = inner leg length (I) \times 0.9
- 2 Lower the seat post further into the seat tube
- 3 The seat post Bowden cable must be tightened in the frame up to the remote control to the same length as the seat post was lowered.
- 4 Trim the seat post Bowden cable on the handlebars if necessary.



5.3.6 Fitting the pedals

The pedals have two different threads to ensure they don't come loose while the rider is pedalling.

- The pedal on the left facing the direction of travel has a left-hand thread and is marked L.
- The pedal on the right facing the direction of travel has a right-hand thread and is marked R.

The mark is either on the top end, the axle or the pedal body.



Figure 80: Example of markings on pedals

- 1 Coat threads in both pedals with waterproof grease.
- 2 Turn the pedal marked L anti-clockwise by hand into the crank arm on the left as seen when facing the direction of travel.



Figure 81: L-pedal in the left-hand crank arm

- 3 Turn the pedal marked R anti-clockwise by hand into the crank arm on the right as seen when facing the direction of travel.



Figure 82: R-pedal in the right-hand crank arm

- 4 Use a 15 mm spanner to fasten the left-hand pedal thread in an anti-clockwise direction and the right-hand pedal in a clockwise direction with a torque between 33 Nm and 35 Nm.



5.3.7 Checking the stem and handlebars

5.3.7.1 Checking the connections

- 1 Stand in front of the pedelec. Clamp the front wheel between your legs. Grasp the handlebar grips.
- 2 Try to twist the handlebars against the direction of the front wheel.
⇒ The stem must not move or twist.
- 3 If the stem can be twisted, check fastening.
⇒ If the stem cannot be fastened, contact your specialist dealer.

5.3.7.2 Checking stem is firmly in position

- 1 Press full body weight on the handlebars.
⇒ The handlebars must not move downwards in the fork.

Stem with clamping lever version I

- 2 If the handlebars should move, increase the lever tension in the clamping lever.
- 3 Turn knurled nut in a clockwise direction with the clamping lever open.
- 4 Close clamping lever and check stem is firmly in position again.
- 5 If the handlebars cannot be fastened, contact your specialist dealer.

Stem with clamping lever version II and stem with screw

- ▶ If the handlebars cannot be fastened, contact your specialist dealer.

5.3.7.3 Checking the headset backlash

- 1 Place the fingers of one hand on the upper headset cup. Pull the front wheel brake with the other hand and try to push the pedelec backwards and forwards.
Keep in mind that there may be noticeable backlash due to worn-out bearing bushes or brake lining backlash in suspension forks and disc brakes.
⇒ The headset cup halves must not move towards one another.
- 2 Set bearing clearance as per the stem repair manual as quickly as possible as otherwise the bearing will become damaged. Contact specialist dealer.

5.4 Pedelec sale

- ▶ Complete Pedelec pass on the operating instructions envelope.
- ▶ Note down the manufacturer and the number of the battery key.
- ▶ Adjust the pedelec to the rider; see Section 6.5.
- ▶ Adjust the stand and shifter.
- ▶ Brief operator or rider on all the pedelec's functions (see Section 6.3).

6 Operation

6.1 Risks and hazards

WARNING

Injuries and fatalities caused by blind spots

Other road users, trucks, cars and pedestrians often underestimate the speed of pedelecs. Likewise, other road users frequently do not see pedelecs. This may cause a crash with serious injuries or even death.

- ▶ Wear a helmet. The helmet must have a reflective strip or a light in a clearly visible colour.
- ▶ Clothing should be retroreflective or as light as possible. Fluorescent materials are also suitable. High-visibility jackets and straps on your upper body ensure even greater safety.
- ▶ Always take a defensive approach to riding.
- ▶ Avoid the blind spots of vehicles turning off the road. Reduce speed as a precaution when other road users turn right.

Injuries and death caused by riding incorrectly

A pedelec is not a bicycle. Incorrect riding and underestimated speeds soon result in hazardous situations. This can cause an accident with serious or fatal injuries.

- ▶ Slowly get used to road traffic and speed before riding at speeds over 12 km/h, especially if you have not ridden a bike for some time. Increase the levels of assistance gradually.
- ▶ Practice braking hard on a regular basis.
- ▶ Take and complete a riding safety course.

WARNING

Injuries and death caused by distraction

A lack of concentration while riding increases the risk of an accident. This may cause a crash with serious injuries.

- ▶ Never allow yourself to be distracted by the on-board computer or your mobile phone.
- ▶ Stop the pedelec if you want to make inputs on the on-board computer other than change the level of assistance. Only enter data when stationary.

CAUTION

Crash caused by loose clothing

Shoe laces, scarves and other loose items may become entangled in the spokes on the *wheels* and on the *chain drive*. This may cause a crash with injuries.

- ▶ Wear sturdy footwear and close-fitting clothing.

Crash caused by difficult-to-spot damage

If the pedelec topples over or you have a fall or an accident, there may be difficult-to-spot damage to components such as the brake system, quick releases or frame. This may cause a crash with injuries.

- ▶ Take pedelec out of service. Contact specialist dealer.

 **CAUTION**
Crash caused by material fatigue

Intensive use can cause material fatigue. A component may suddenly fail in case of material fatigue. This may cause a crash with injuries.

- ▶ Remove the pedelec from service immediately if there are any signs of material fatigue. Have your specialist dealer inspect the component.
- ▶ Arrange the mandatory maintenance appointments with your specialist dealer on a regular basis. During maintenance, the specialist dealer will inspect the pedelec for any signs of material fatigue on the frame, fork, suspension element mountings (if there are any) and components made of composite materials.

Carbon becomes brittle when exposed to heat radiation such as heating. This can cause the carbon part to break and result in a crash with injuries.

- ▶ Never expose carbon parts on the pedelec to strong sources of heat.

Crash caused by poor road conditions

Loose objects, such as branches and twigs, may become caught in the wheels and cause a crash with injuries.

- ▶ Be aware of the road conditions.
- ▶ Ride slowly and brake in good time.

The *tyres* may slip on wet roads. In wet conditions you must also expect a longer braking distance. The braking sensation differs from the usual sensation. This can cause loss of control or a crash, which may result in injuries.

- ▶ Ride slowly and brake in good time when it is raining.

 **CAUTION**
Crash caused by soiling

Heavy soiling can impair pedelec functions, such as braking. This may cause a crash with injuries.

- ▶ Remove coarse soiling before riding.

Notice

Heat or direct sunlight can cause the *tyre pressure* to increase above the permitted maximum pressure. This can destroy the *tyres*.

- ▶ Never park the pedelec in the sun.
- ▶ On hot days, regularly check the *tyre pressure* and adjust it as necessary.

When riding downhill, high speeds may be reached. The pedelec is only designed to exceed a speed of 25 km/h for short intervals. The *tyres* in particular can fail if exposed to a continuous load.

- ▶ Use the brakes to decelerate the pedelec if you reach speeds greater than 25 km/h.

Moisture penetrating at low temperatures may impair individual functions due to the open structural design.

- ▶ Always keep the pedelec dry and free from frost.
- ▶ If the pedelec is used at temperatures below 3 °C, the specialist dealer must perform an inspection beforehand and prepared it for winter use.

Off-road riding subjects the joints in the arms to severe strain. Take a break from riding every 30 to 90 minutes, depending on the road surface and your physical fitness.

6.2 Tips for a greater range

The pedelec's range depends on many influencing factors. A single battery charge may only last fewer than 20 kilometres but much more than 100 is also possible. There are a few tips which will generally help you maximize range.

Suspension elements

- ▶ Only open suspension fork and damper when necessary on terrain or gravel paths. Block suspension fork and damper on tarmacked roads or on hills.

Mileage

The more own physical effort the rider makes, the greater the attainable range is.

- ▶ Shift down 1 to 2 gears to increase the induced power and pedalling frequency.

Pedalling frequency

- ▶ Ride using pedalling frequencies of over 50 revolutions per minute. This optimises the electric drive's efficiency.
- ▶ Avoid pedalling very slowly.

Weight

- ▶ Minimise the total weight of pedelec and baggage.

Stopping and starting

- ▶ Ride long distances at a constant speed.
- ▶ Avoid stopping and starting frequently.

Level of assistance

- ▶ The higher the selected levels of assistance are, the shorter the range is.

Gear shift

- ▶ Use a low gear and a low level of assistance on hills and when setting off.
- ▶ Switch up a gear depending on the speed and terrain.
- ▶ 50-80 crank rotations are optimal.
- ▶ Avoid high stress loads on the crank during a gear change.
- ▶ Switch gear back in good time, e.g. before inclines.

Tyres

- ▶ Always select the right tyres for the surface type. As a general rule, narrower treads move along more easily than heavier ones. Long studs and large grooves usually have an unfavourable effect on energy consumption.
- ▶ When riding on asphalt, it is important to always use the maximum permitted tyre pressure.
- ▶ When riding off-road on gravel tracks or soft woodland or meadow soils, it is important to remember the lower the tyre pressure is, the greater the rolling resistance is and thus the greater electric drive system energy consumption is.

Rechargeable battery

Electrical resistance increases as the temperature drops. Battery performance is reduced. As a result, you should expect the range to be shorter than normal in winter.

- ▶ Use a thermal protection sleeve on the battery in winter.

The range also depends on the battery's age, charge level and state of repair.

- ▶ Maintain the battery and replace older batteries where necessary.

6.3 Error message

6.3.1 On-board computer

The drive system monitors itself continuously and displays a number as an error message if a known error is detected. The system may switch off automatically depending on the type of error.

Code	Description	Method of resolution
410	One or more on-board computer buttons are blocked	<ul style="list-style-type: none"> ▶ Check whether buttons are jammed because dirt has accumulated between them, for example. ▶ Clean buttons if necessary.
414	Connection problem with the control panel	<ul style="list-style-type: none"> ▶ Contact specialist dealer. Have ports and connections checked.
418	One or more buttons on the control panel are blocked	<ul style="list-style-type: none"> ▶ Check whether buttons are jammed because dirt has accumulated between them, for example. ▶ Clean buttons if necessary.
419	Configuration error	<ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists.
422	Battery connection problem	<ul style="list-style-type: none"> ▶ Have ports and connections checked.
423	Battery connection problem	<ul style="list-style-type: none"> ▶ Have ports and connections checked.
424	Communication error with components communicating with one another	<ul style="list-style-type: none"> ▶ Have ports and connections checked.
426	Internal time-out error	<p>It is not possible to display or adjust the tyre size in the basic settings menu in this error status.</p> <ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists.
430	On-board computer battery flat	<ul style="list-style-type: none"> ▶ Recharge on-board computer battery (while in its mount or using USB port).
431	Software version error	<ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists.

Table 49: List of on-board computer error messages

Code	Description	Method of resolution
440	Battery internal error	<ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists.
450	Internal software error	<ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists.
460	Error in USB port	<ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists.
490	On-board computer internal error	<ul style="list-style-type: none"> ▶ Have on-board computer checked.
500	Battery internal error	<ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists.
502	Fault in the lighting	<ol style="list-style-type: none"> 1 Check the light and its cabling. 2 Re-start the system. 3 Contact your specialist dealer if the problem persists.
503	Speed sensor error	<ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists.
504	Speed signal manipulation detected	<ul style="list-style-type: none"> ▶ Check position of spike magnets and re-adjust if necessary. ▶ Check for manipulation. ▶ Assistance from drive has been reduced.
503	Speed sensor error	<ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists.
510	Internal sensor error	<ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists.
511	Battery internal error	<ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists.

Table 49: List of on-board computer error messages

Code	Description	Method of resolution
530	Battery error	<ol style="list-style-type: none"> 1 Switch off system. 2 Remove the battery. 3 Re-insert battery. 4 Restart electric drive system. 5 Contact your specialist dealer if the problem persists.
531	Configuration error	<ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists.
540	Temperature error The pedelec is outside the permitted temperature range.	<ol style="list-style-type: none"> 1 Switch off the system to cool the motor and battery down or warm them to the permitted temperature range. 2 Re-start the system. 3 Contact your specialist dealer if the problem persists.
550	An inadmissible electrical load has been detected	<ol style="list-style-type: none"> 1 Remove consumer. 2 Re-start the system. 3 Contact your specialist dealer if the problem persists.
580	Software version error	<ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists.
591	Authentication error	<ol style="list-style-type: none"> 1 Switch off system. 2 Remove the battery. 3 Re-insert battery. 4 Re-start the system. 5 Contact your specialist dealer if the problem persists.
592	Incompatible component	<ol style="list-style-type: none"> 1 Insert compatible on-board computer. 2 Re-start the system. 3 Contact your specialist dealer if the problem persists.
593	Configuration error	<ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists.

Table 49: List of on-board computer error messages

Code	Description	Method of resolution
595, 596	Communication error	<ol style="list-style-type: none"> 1 Check cabling to the gears. 2 Re-start the system. 3 Contact your specialist dealer if the problem persists.
602	Internal error during charging	<ol style="list-style-type: none"> 1 Disconnect charger from battery. 2 Re-start the system. 3 Connect charger to the battery. 4 Contact your specialist dealer if the problem persists.
602	Internal fault	<ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists.
603	Internal fault	<ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists.
605	Temperature error The pedelec is outside the permitted temperature range.	<ol style="list-style-type: none"> 1 Switch off the system to cool the motor and battery down or warm them to the permitted temperature range. 2 Re-start the system. 3 Contact your specialist dealer if the problem persists.
605	Temperature error during the charging process	<ol style="list-style-type: none"> 1 Disconnect charger from battery. 2 Leave battery to cool down. 3 Contact your specialist dealer if the problem persists.
606	External fault	<ol style="list-style-type: none"> 1 Check cabling. 2 Re-start the system. 3 Contact your specialist dealer if the problem persists.
610	Voltage error	<ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists.
620	Charger error	<ol style="list-style-type: none"> 1 Replace charger. 2 Contact your specialist dealer if the problem persists.

Table 49: List of on-board computer error messages

Code	Description	Method of resolution
640	Internal fault	<ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists.
655	Multiple battery error	<ol style="list-style-type: none"> 1 Switch off system. 2 Remove the battery. 3 Re-insert battery. 4 Re-start the system. 5 Contact your specialist dealer if the problem persists.
656	Software version error	▶ Contact your specialist dealer to install a software update.
7xx	Gear error	▶ Observe the gear shift manufacturer's operating instructions.
800	Internal ABS error	▶ Contact your specialist retailer.
810	Implausible signals from the wheel speed sensor	▶ Contact your specialist retailer.
820	Error in the line to the front wheel speed sensor	▶ Contact your specialist retailer.
821... 826	Implausible signals from the front wheel speed sensor. Sensor disc is possibly missing, defective or incorrectly installed; significantly different tyre diameter between the front wheel and rear wheel; extreme riding situation, such as riding on the rear wheel only	<ol style="list-style-type: none"> 1 Re-start the system. 2 Take a test ride of at least two minutes. The ABS indicator lamp must go out. 3 Contact your specialist dealer if the problem persists.
830	Error in the line to the rear wheel speed sensor	▶ Contact specialist dealer.
831 833 ... 835	Implausible signals from the rear wheel speed sensor. Sensor disc may be missing. It is defective or incorrectly installed; significantly different tyre diameter between the front wheel and rear wheel; extreme riding, such as riding on the rear wheel only	<ol style="list-style-type: none"> 1 Re-start the system. 2 Take a test ride of at least two minutes. The ABS indicator lamp must go out. 3 Contact your specialist dealer if the problem persists.
840	Internal ABS error	▶ Contact specialist dealer.
850	Internal ABS error	▶ Contact specialist dealer.

Table 49: List of on-board computer error messages

Code	Description	Method of resolution
860, 861	Error in the power supply	<ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists.
870, 871, 880 883 ... 885	Communication error	<ol style="list-style-type: none"> 1 Re-start the system. 2 Contact your specialist dealer if the problem persists.
889	Internal ABS error	▶ Contact specialist dealer.
890	ABS indicator lamp is defective or missing; ABS possibly not functioning	▶ Contact specialist dealer.
No displays	On-board computer internal error	▶ Re-start the drive system by switching it on and off.

Table 49: List of on-board computer error messages

6.3.2 Rechargeable battery

The battery is protected against deep discharge, overcharging, overheating and short circuits by Electronic Cell Protection (ECP). In the event of a hazard, a protective circuit switches the battery off automatically. If a fault is detected in the battery, the LEDs flash on the battery level indicator.





Description	Method of resolution
Code: 	
If the battery is outside its charging temperature range, three LEDs will flash on the battery level indicator.	<ol style="list-style-type: none"> 1 Disconnect charger from battery. 2 Leave battery to cool down. 3 Contact your specialist dealer if the problem persists.
Code: 	
If a fault is detected in the battery, two LEDs flash on the battery level indicator.	► Contact specialist dealer.
Code: 	
No LEDs will flash if the charger is defective and will not charge. One or more LEDs will light up permanently, depending on the battery level.	► Contact specialist dealer.
Code: 	
No LEDs will light up if there is no power.	<ol style="list-style-type: none"> 1 Check all plug connections. 2 Check contacts on the battery for dirt. Clean the contacts carefully if needed. 3 Contact your specialist dealer if the problem persists.

Table 50: List of battery error messages

6.4 Instruction and customer service

The supplying specialist dealer will provide customer service. Contact details can be found on the pedepec pass for these operating instructions. The specialist dealer will explain all the pedepec functions to the new owner in person, this being when the specialist dealer hands over the pedepec at the latest. These operating instructions are provided with every pedepec, so that the rider can consult them at a later stage.

The supplying specialist dealer will also perform all maintenance, modifications and repairs in the future.

6.5 Adjusting the pedepec



Crash caused by incorrectly adjusted torques

If a screw is fastened too tightly, it may break. If a screw is not fastened enough, it may loosen. This will cause a crash with injuries.

- ▶ Always observe the indicated torques on the screw and in the operating instructions.

Only a correctly adjusted pedepec will guarantee the desired ride comfort and health-promoting activity.

All settings must be re-configured if the body weight or maximum baggage weight changes.

6.5.1 Preparing

The following tools are required to adjust the pedepec:









	Tape measure
	Scales
	Spirit level
	Ring spanners 8 mm, 9 mm, 10 mm, 13 mm, 14 mm and 15 mm
	Torque wrench Working range 5–40 Nm
	Hex key 2 mm, 2.5 mm, 3 mm, 4 mm, 5 mm, 6 mm and 8 mm
	Cross-recess screwdriver
	Slotted-head screwdriver

Table 51: Tools required for assembly

6.5.2 Pedelec adjustment procedure

► Observe the correct order for adjustment.

Sequence	Adjustment	Section	For pedelecs with components only				
			Rhomboid seat post	Ergonomic handles	Suspension fork	Rear frame damper	Front light
1.1	Saddle	6.5.4.1					
1.2	• Straighten saddle	6.5.4.3					
1.3	• Adjust saddle height	6.5.4.5					
1.4	• Adjust saddle position	6.5.4.6					
	• Adjust saddle tilt						
If present	Adjust saddle spring	6.5.4.8	x				
2	Handlebars	6.5.5					
3	Stem	6.5.6					
4	Handles	6.5.7		x			
5	Tyres	6.5.8					
6.1	Brake	6.5.9.1					
6.2	• Position of the brake handles	6.5.9.2					
6.3	• Brake handle tilt angle	6.5.9.3					
6.4	• Determine grip distance	6.5.9.9					
6.5	• Pressure point	6.5.9.10					
	• Retract the brake linings						
7	Adjust suspension						
	- adjust suspension fork sag	6.5.11			x		
	- adjust suspension fork rebound damper	6.5.12			x		
8	Light	6.5.13					x

6.5.3 Determining the sitting position

The starting point for a comfortable posture is the correct position of the pelvis. If the pelvis is in the wrong position, it can cause different types of pain, e.g. in the shoulder or back.

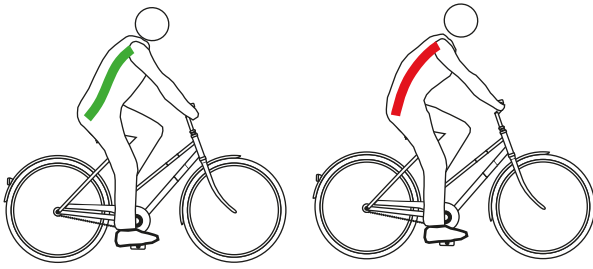


Figure 83: The pelvis is in the right position (green) or incorrect position (red)

The pelvis is in the right position if the spine forms an S-shape and a natural, easy arch.

The pelvis is positioned incorrectly if it tilts slightly backwards. As a result, the spine becomes curved and can no longer deflect to an optimal extent.

A suitable sitting position must be selected beforehand depending on the pedelec type, physical fitness and desired trip distance or speed.

It is especially advisable to check and optimise the sitting position once more before longer rides.


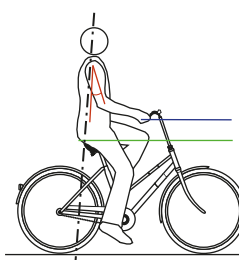
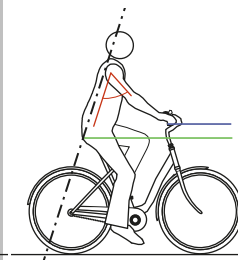
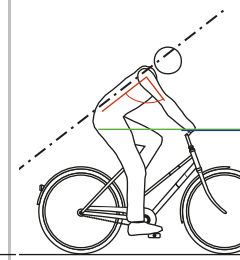
	Position on roadster	Position on city bike	Position on trekking bike	Position on sports bike
				
Angle of upper body (black dashed line)	Upright, almost vertical posture, back at an angle of almost 90°. Handlebars and handles are very close to the upper body.	Slightly inclined upper body, back at an angle of 60°–70°.	Considerably inclined upper body, back at an angle of 30°–60°. Greater distance between handlebars and saddle.	Sharply inclined upper body, back at an angle of 15°–30°. Saddle higher than the handlebars.
Angle between upper arm & upper body (red line)	Extremely acute angle at around 20°. The upper arms are almost parallel to the upper body. The hands are simply placed loosely on the handlebars.	An angle of 75°–80° is optimum. Many people prefer a smaller angle of up to 60° as it requires less effort to support the shoulders, arms and hands.	An angle of 90° is optimum. The muscular support required in the arms, back and shoulder girdle is reduced at 90°.	Above 90°. Shoulders, arms and hands need to provide a great deal of support, the supporting muscles in the back are heavily strained and the load on the bearing surface shifts to the front.
Saddle-handlebar height difference (blue and green line)	>10 The handlebars are positioned far higher than the saddle.	10..5 The handlebars are positioned higher than the saddle.	5..0 Handlebars and saddle are almost at the same height.	<0 The saddle is positioned far higher than the handlebars.
Benefits	The spine is intuitively moved into its natural S-shape. The strain on arms and hands is very slight – no effort required to support.	The upright position provides a good overview in traffic. Force can be applied to the pedals when pedalling without using much energy.	Shoulders, neck and hands provide more of the support effort, thus promoting a dynamic, agile riding style. Impact is reduced on the back, spine and buttocks, which is particularly important on longer rides. The whole body can apply force to the pedals effectively.	Optimum power transmission. Aerodynamic: low air resistance.
Disadvantages	Force is applied relatively inefficiently to the pedals. Weight rests exclusively on the buttocks. The spine slumps after a short time for many people (pelvic straightening).	The arms are often stretched through to the high handlebars – this leads to tense shoulders and painful hands. The spine tends to slump quickly due to the “high position”.	There is greater strain on the hands, neck and shoulders. The muscular system needs to be trained for this higher strain, i.e. riders should practise.	Requires highly trained muscles in back, legs, shoulders, abdomen! Comfortable position only for people who are fit.
Fitness level and use	Low fitness level, occasional cyclists	Medium fitness level, city cyclists	Medium to high fitness level, riding long distances	Speed-oriented, sports cycling
Suitable pedelec types	City bike Folding bike	City bike Cargo bike	Trekking bike	Mountain bike Racing bicycle

Table 52: Overview of sitting positions

6.5.4 Adjusting the saddle

6.5.4.1 Straightening the saddle

- ▶ Position saddle in direction of travel. In doing so, align the tip of the saddle with the top tube.

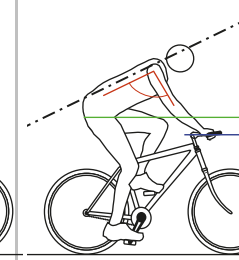

Figure 84: Positioning the saddle in direction of travel

6.5.4.2 Eightpins suspension seat post

- 1 Position saddle in direction of travel. In doing so, align the tip of the saddle with the top tube.
- 2 Use a torque wrench to tighten the seat post axle with 8 Nm.



Figure 85: Tightening the seat post axle

6.5.4.3 Adjusting the saddle height

- ✓ To adjust the saddle height safely, either:

- Push the pedelec near to a wall so that the rider can lean on the wall to support themselves or
- Ask another person to hold the pedelec.

- 1 Use the seat height formula to roughly set the saddle height:

$$\text{Seat height (SH)} = \text{inner leg length (I)} \times 0.9$$

- 2 Climb onto the bicycle.

- 3 Place your heel on the pedal and extend your leg, so that the pedal is at the lowest crank rotation point. Your knee should now be fully extended.

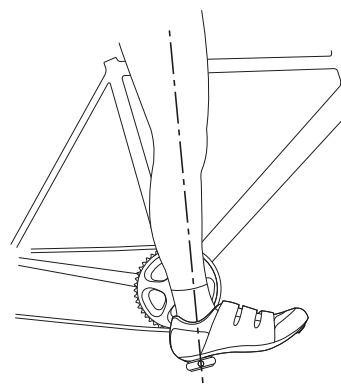


Figure 86: Heel method

- 4 Take a test ride.

- ⇒ Riders should sit straight on the saddle at an optimal saddle height.

- If the pelvis moves to the left and right as you pedal, the saddle is too high.
- If your knees are painful after a few kilometres, the saddle is too low.

- ⇒ Position the seat post according to needs if necessary. Adjust the seat height with the quick release.

- 5 Open the quick release on the seat post to change the seat height (1). To do so, push the clamping lever away from the seat post (3).

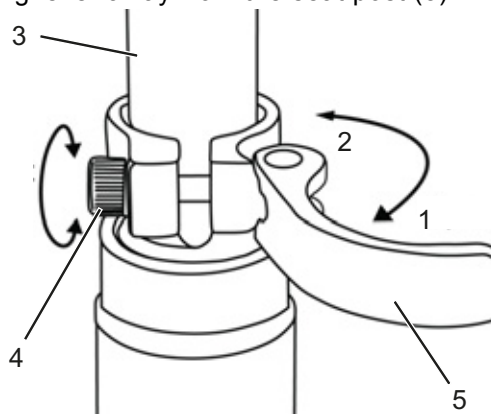


Figure 87: Opening the seat post quick release

- 6 Set the seat post to the required height.

CAUTION

Crash caused by an excessively high seat post setting

A seat post which is set too high will cause the seat post or the frame to break. This will cause a crash with injuries.

- ▶ Do not pull the seat post out of the frame beyond the minimum insertion depth marking.

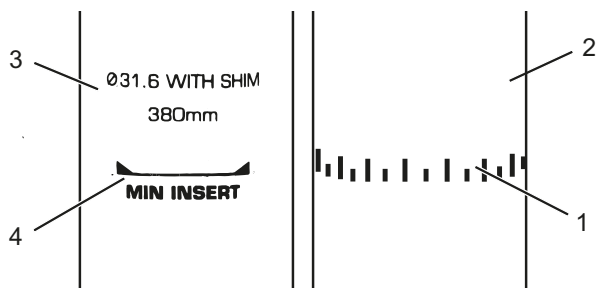


Figure 88: Detailed view of the seat post – examples of the minimum insertion depth marking

- 7 To close it, push the seat post clamping lever as far as it will go into the seat post (2).
- 8 Check the clamping force of quick releases.

6.5.4.4 Setting the saddle height with the remote control

Use the seat height formula to set the saddle height:

$$\text{Seat height (SH)} = \text{inner leg length (I)} \times 0.9$$

Notice

If you are unable to achieve the required saddle height, the seat post must be lowered further into the seat tube. The seat post Bowden cable must be tightened in the frame up to the remote control to the same length as the seat post was lowered. If this is not possible, contact your specialist dealer.

Lowering the saddle

- 1 Sit on the saddle.
- 2 Press the remote control operating lever.
 - ⇒ The seat post will lower.
- 3 Release the remote control operating lever when you have reached the desired height.

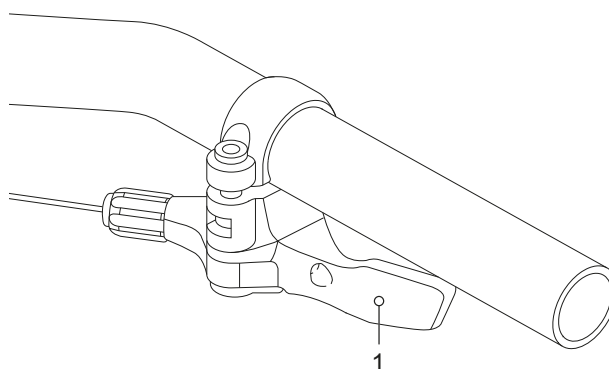


Figure 89: Remote control operating lever (1)

Raising the saddle

- 1 Remove any pressure from the saddle.
- 2 Press the remote control operating lever.
 - ⇒ The seat post will rise.
- 3 Release the remote control operating lever when you have reached the desired height.

6.5.4.5 Adjusting the saddle position

The saddle can be shifted on the saddle frame. The right horizontal position ensures an optimal leverage position for legs. This prevents knee pain and painful incorrect pelvis positions. If you have displaced the saddle more than 10 mm, you need to adjust the saddle height again since both settings affect one another.

- ✓ The saddle setting must only be made when the bicycle is stationary.
- ✓ To set the saddle position, either:
 - Push the pedelec near to a wall so that the rider can lean on the wall to support themselves or
 - Ask another person to hold the pedelec.
- ✓ Move the saddle within its permitted displacement range only (marked on the saddle stay).

1 Climb onto the pedelec.

2 Place the pedals into the vertical position with your feet.

⇒ Riders are adopting the optimal saddle position if the perpendicular line from the kneecap runs through the pedal axle.

- ▶ If the perpendicular line crosses behind the pedal, bring the saddle further forward.
- ▶ If the perpendicular line crosses in front of the pedal, bring the saddle further back.

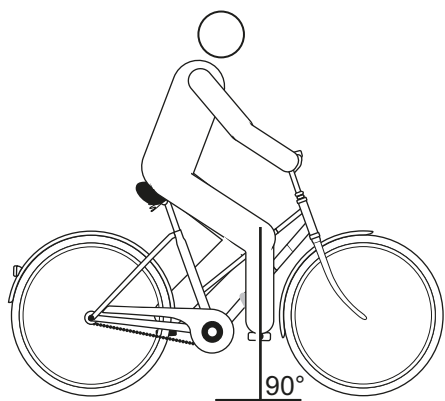


Figure 90: Knee cap perpendicular line

- 3 Unfasten and adjust the designated screw connections, and clamp them with the maximum tightening torque for the saddle clamping screws.

6.5.4.6 Adjusting the saddle tilt

The saddle tilt must be adjusted to the seat height, the saddle and handlebar position, and the saddle shape to ensure an optimum fit. The seating position can be optimised in this way if needed.

The saddle placed in a horizontal position prevents the rider from slipping backwards or forwards. This avoids seat problems. In any other position, the tip of the saddle may press uncomfortably into the crotch area. It is also recommended that the centre of the saddle is exactly straight. This ensures that the rider is seated with their sit bones on the wide rear part of the saddle.

1 Adjust the saddle tilt to horizontal.

2 Position saddle middle so that it is completely straight.

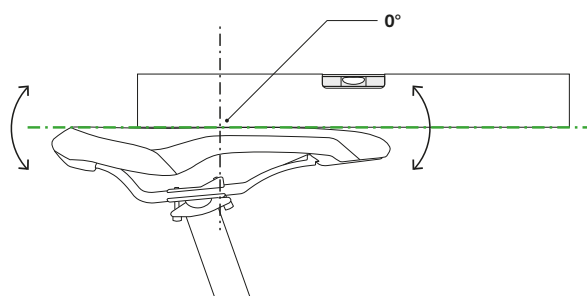


Figure 91: Horizontal saddle tilt with 0° tilt in the centre of the saddle

⇒ Riders sit comfortably on the saddle and do not slip backwards or forwards.

- 3 If the rider tends to slip forwards or sit on the narrow part of the saddle, adjust the seat position (see Section 6.6.2.3) or tilt the saddle very slightly backwards.

6.5.4.7 Checking saddle stability

- ▶ Check saddle stability after adjusting it; see Section 7.5.6.

6.5.4.8 Adjusting the BY.SCHULZ saddle spring

Only applies to pedelecs with this equipment

Different strength suspension elements are offered for the whole range of body weights for rhomboid suspension seat posts. The following table acts as a guide when choosing the suspension element with the body weight, position and ride profile being taken into account when making a decision. The suspension elements are marked with a colour code. A yellow, medium suspension element comes pre-fitted on delivery.

Suspension element colour code	Body weight [kg]
  Soft	45 – 65
  Medium	60 – 85
  Standard	80 – 105
  Hard	100 – 130
  Extra hard	125 – 150

Table 53: Colour code and recommended body weight for the G.1. urban from by.schulz

Replacing the suspension element

- 1 Drive out the M5 grub screw on the large stainless steel axle.
- 2 Use a 2.5 mm hex key to open the seat post base pivot bearing in the rear arm. In doing so, turn the screw in an anti-clockwise direction until it protrudes about 2 mm from the arm.

- 3 Drive the 8 mm stainless steel axle out of the bearing.

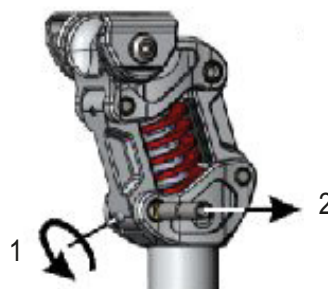


Figure 92: Undo the grub screw (1) and drive out the stainless steel axle (2)

- 4 Open the rhomboid mechanism by pulling the rear suspension by hand in the direction of travel.

⇒ The entire upper part of the seat post will tilt forward in the direction of travel.

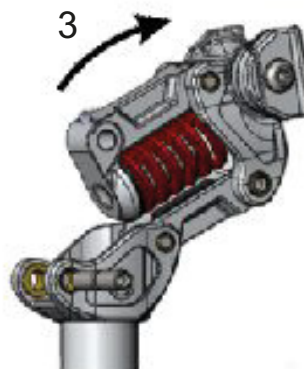


Figure 93: Pulling the upper part forwards

- 5 Swivel the rear suspension arm in the small top articulated joint upwards until the suspension element detaches from the adjustment mechanism in the spring retainer.

6 Remove suspension element.

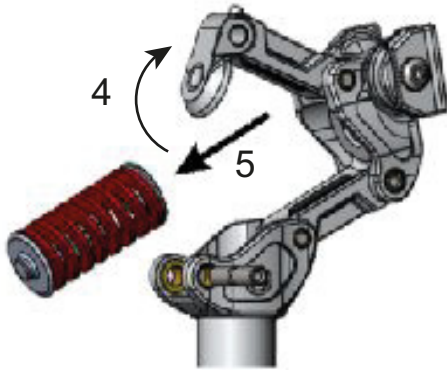


Figure 94: Swivel suspension arm backwards (4) and remove suspension element

- 7 Position the new suspension element in the rhomboid mechanism.
- 8 Press the top of the suspension element with the spring end cap adjustment pin into the hole in the retainer in the front spring arm.

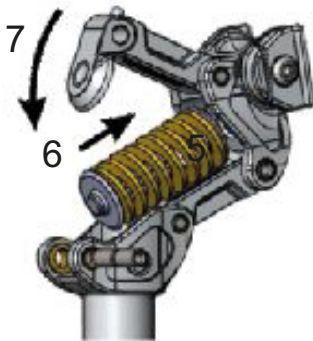


Figure 95: Position suspension element (6) and close suspension element

- ⇒ You must hear the second spring element spring end cap adjustment pin engage into the indentation in the retainer in the rear spring arm.

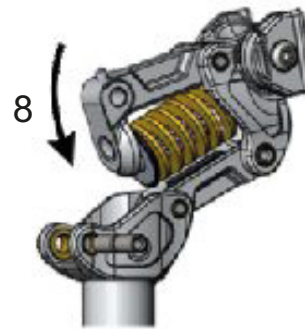


Figure 96: Swivel spring arm forwards (8)

- ⇒ Tilt the entire rhomboid mechanism backwards from the direction of travel.

- 9 Grease 8 mm stainless steel axle.
- 10 Insert 8 mm stainless steel axle. In doing so, ensure that the axle is fed correctly through all holes.
- 11 Insert the M5 fixing grub screw and use a 2.5 mm hex key to fasten it with a tightening torque of 3 Nm.

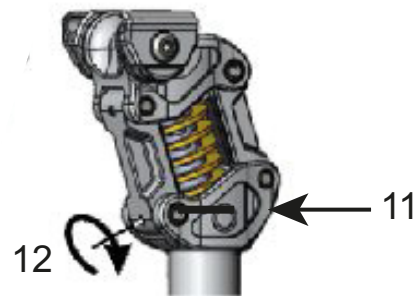


Figure 97: Grease stainless steel axle (11) and tighten fixing grub screw

- 12 Ensure that there is still sufficient blue threadlocker on the screw. Apply more if necessary.

- ⇒ The axle is now securely fixed using the centring groove.

- 13 Check that all components are in the right position before the first ride.

6.5.5 Handlebars

- ▶ Check handlebar width and hand position.
- ▶ Choose different handlebars if necessary. Contact specialist dealer.

6.5.5.1 Handlebar width

The handlebar width should be as wide as the rider's shoulders as a minimum. This is measured from mid-point to mid-point on the hand contact surfaces.

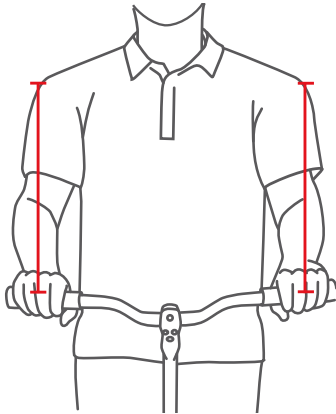


Figure 98: Determining the optimal handlebar width

The wider the handlebars are, the more control they provide, although wide handlebars require greater supporting force. Wider handlebars are particularly useful to ensure a safer ride for loaded touring bikes.

6.5.5.2 Hand position

The hand is in an optimal position on the handlebars when the forearm and hand are in a straight line, i.e. the wrist is not bent. In this way, the nerves are not pinched and do not cause pain.

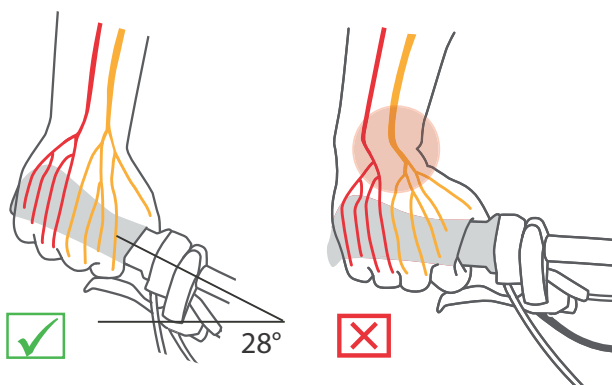


Figure 99: Distribution of nerves with curved and straight handlebars

The narrower the shoulders are, the greater the bend of the handlebars should be (maximum 28°).

Straight handlebars are advisable for sports bikes (e.g. MTB). They support direct steering behaviour, but lead to peaks in pressure and greater muscular strain on the arm and shoulder muscles.

6.5.5.3 Adjusting the handlebars

The handlebars and their position determine the posture that the rider adopts on the pedelec.

- 1 After selecting the seating position (see Section 6.6.2.1), determine the angle of the upper body and of the upper arm.
- 2 Pre-tension the back muscles when adjusting the handlebars. The only way to stabilise the spine and protect it from excessive strain is with the back and abdominal muscles pre-tensioned. Passive muscles are not able to perform this important task.
- 3 Set the required handlebar position by adjusting the stem height and angle (see Section 6.6.6).
- 4 After adjusting the handlebars, check the saddle height and seat position again. The position of the pelvis on the saddle may have changed when the handlebars were adjusted. This can have considerable impact on the position of the hip joint due to the pelvis tilting and may change the usable leg length on the saddle support by up to 3 cm.
- 5 Correct the saddle height and sitting posture if necessary.

6.5.6 Stem

6.5.6.1 Adjusting the handlebar height with quick release

Only applies to pedelecs with this equipment

- 1 Open the stem clamping lever.

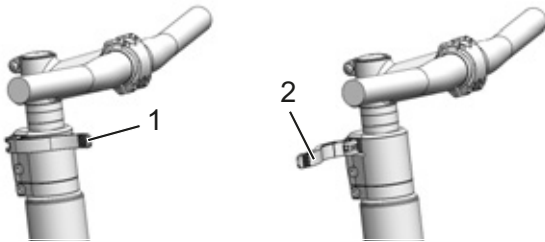


Figure 100: Open (2) and closed (1) stem clamping lever; All Up used as an example

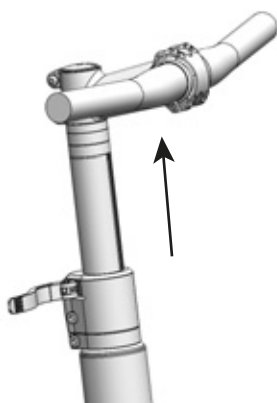


Figure 101: Pulling the locking lever upwards; All Up used as an example

- 2 Pull out the handlebars to the required height. Observe minimum insertion depth.
- 3 Close the stem clamping lever.

Adjusting the quick release clamping force



Crash caused by incorrectly set clamping force

Applying excessive clamping force damages the quick release. Insufficient clamping force will result in unfavourable transmission of force. This can cause components to break. This will cause a crash with injuries.

- ▶ Never fasten a quick release using a tool (e.g. hammer or pliers).

If the *handlebar clamping lever* stops before reaching its end position, unscrew the *knurled nut*.

- ▶ Tighten the *knurled nut* on the seat post if the *seat post clamping lever's* clamping force is not effective enough.
- ▶ Contact your specialist dealer if the clamping force cannot be set.

6.5.6.2 Setting the quill stem

Only applies to pedelecs with this equipment

In the case of a quill stem, the stem and fork steerer form a permanently interconnected component, which is clamped in the fork steerer. The stem and shaft must be replaced together.

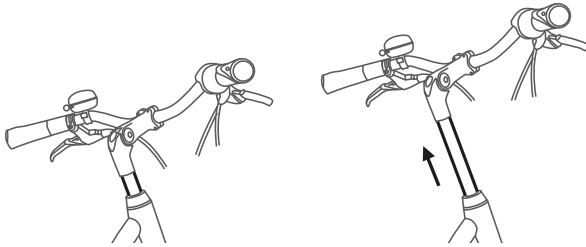


Figure 102: Adjusting the quill stem height

- 1 Undo screw.
- 2 Pull quill stem out.
- 3 Tighten screw.

6.5.6.3 Adjusting the Ahead stem

Only applies to pedelecs with this equipment

In the case of an Ahead stem, the stem is placed directly on the fork steerer, which protrudes over the frame.

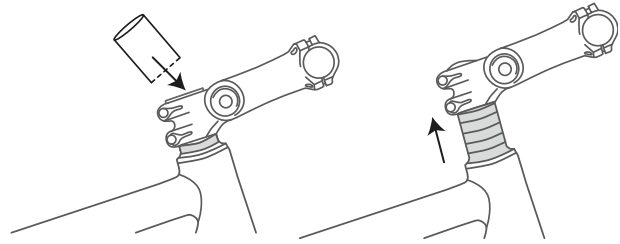


Figure 103: Raising the Ahead stem by fitting spacer rings

The handlebar height is adjusted once during production using spacer rings. The part of the fork steerer protruding is then cut off. The handlebar stem can then no longer be raised.

6.5.6.4 Adjusting the angle-adjustable stem

Only applies to pedelecs with this equipment

Angle-adjustable stems are available in different lengths for quill and Ahead stems.

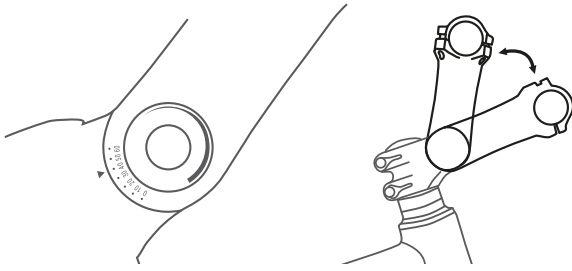


Figure 104: Different versions of angle-adjustable stems

Adjusting the stem angle (c) changes both the distance from the upper body to the handlebars (b) and the handlebar height (a).

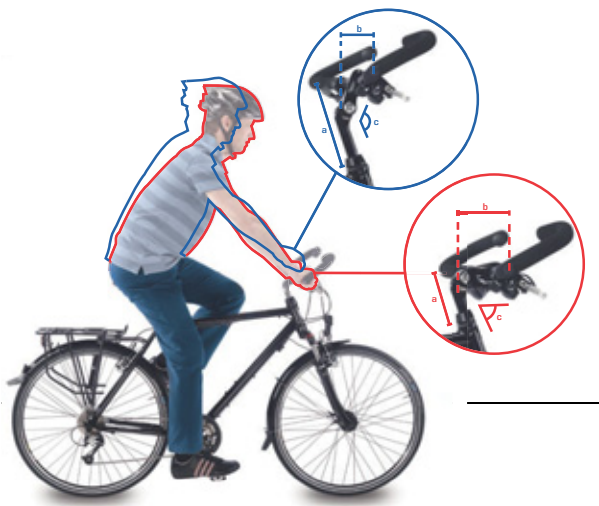


Figure 105: City bike (blue) and trekking bike position (red) by changing the angle

6.5.7 Ergonomic handles

In the case of ergonomically shaped handles, the palm rests on the anatomically shaped handle. A greater contact surface means that the pressure is more evenly distributed. Nerves and vessels are no longer squeezed in the carpal tunnel.

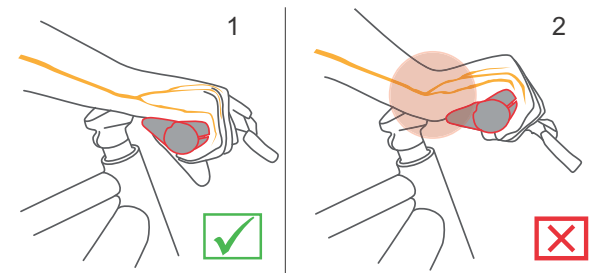


Figure 106: Correct (1) and incorrect (2) position of the handle

- 1 Undo the handle screw.
- 2 Turn handle into the right position.
- 3 Tighten the screw.

6.5.7.1 Checking handlebar stability

► See [Section 7.5.5](#).

6.5.8 Tyres

It is not possible to offer a general recommended tyre pressure for a particular pedelec or tyre. The correct tyre pressure largely depends on the weight load on the tyres, mainly determined by body weight and baggage.

Unlike cars, the weight of the vehicle has only a small impact on the total weight. Moreover, the personal preferences for low rolling resistance or a high degree of suspension comfort vary a great deal. It is important to remember that

- the higher the tyre pressure is, the lower the wear, rolling resistance and the risk of breakdown are.
- The lower the pressure in the tyre is, the greater the comfort and grip that the tyre offers is.

In the case of pedelecs used on the road, the rule is the greater the tyre pressure is, the lower the tyre rolling resistance is. The risk of breakdown is also lower when the pressure is high.

A permanently excessively low tyre pressure often leads to premature wear in the tyre. Cracking in the side wall is a typical consequence of very low tyre pressure. Abrasion is also unnecessarily high.

On the other hand, a tyre can absorb road impacts more effectively at a low pressure.

As a general rule, wide tyres are operated at a lower tyre pressure. They provide the option of exploiting the advantages of the lower tyre pressure without the serious disadvantages it causes with regard to wear, rolling resistance and breakdown protection.

- ✓ Never exceed or go below the minimum and maximum pressure limits indicated on the tyre.

- 1 Pump the tyre to the recommended tyre pressure.

Tyre width	Tyre pressure in bar for body weight		
	about 60 kg	about 80 kg	about 110 kg
25 mm	6.0	7.0	8.0
28 mm	5.5	6.5	7.5
32 mm	4.5	5.5	6.5
37 mm	4.0	5.0	6.0
40 mm	3.5	4.5	6.0
47 mm	3.0	4.0	5.0
50 mm	2.5	4.0	5.0
55 mm	2.0	3.0	4.0
60 mm	2.0	3.0	4.0

Table 54: Recommended tyre pressure for Schwalbe

- 2 Perform a visual check on tyres.



Figure 107: Correct tyre pressure. The tyre is barely deformed under the load of the body weight



Figure 108: Much too little tyre pressure

6.5.9 Brake

The brake lever grip distance can be adjusted to ensure that it can be reached more easily. The pressure point can also be adjusted to the rider's preferences.

6.5.9.1 Brake handle position

Having the brake handle in the correct position prevents the rider from stretching their wrist too far. Moreover, the brake can also be operated without any discomfort and without changing the handle position or releasing the handle.

- ✓ Apply the brake lever with the third finger phalanx to brake gently in bursts.
 - ✓ The setting for the middle finger is used for riders who brake with their middle finger or with two fingers.
- 1 Position your hand on the handle in such a way that the outer heel of the hand is flush with the end of the handlebar.
 - 2 Extend the index finger (about 15°).

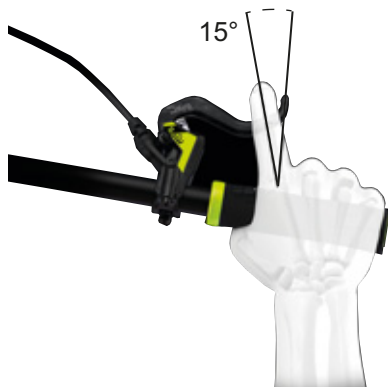


Figure 109: Brake handle position

- 3 Push brake lever outwards until the third finger phalanx sits in the brake lever recessed grip.

6.5.9.2 Brake handle tilt angle

The nerves that pass through the carpal tunnel are connected to the thumb and the index and middle fingers. An excessively steep or excessively flat brake angle will cause the wrist to bend, thus narrowing the carpal tunnel. This can cause numbness and tingling in the thumb and index and middle fingers.

- 1 Calculate the difference between the height of the handlebars and the saddle height to determine the saddle-handlebar height difference.

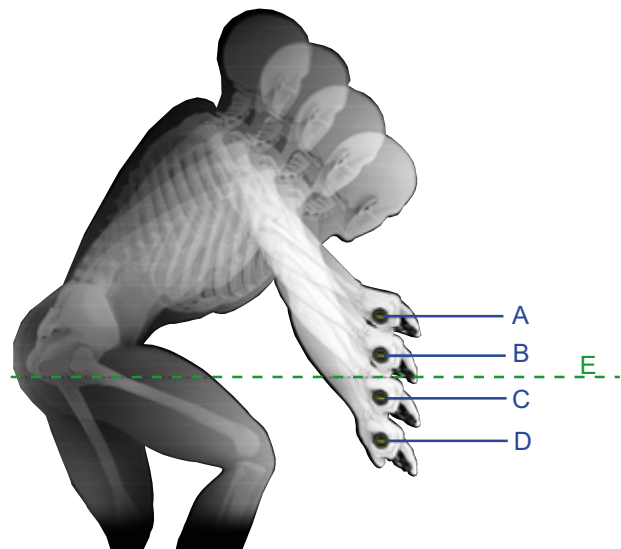



Figure 110: Example of 4 different handlebar heights (A, B, C and D) and the saddle height (E)

Calculation	Saddle-handlebar height difference [mm]
A – E	>10
B – E	0...10
C – E	0 ...-10
D – E	<-10

Table 55: Examples of saddle-handlebar height difference

Adjust the angle of the brake levers so that they form a natural extension of the forearm.

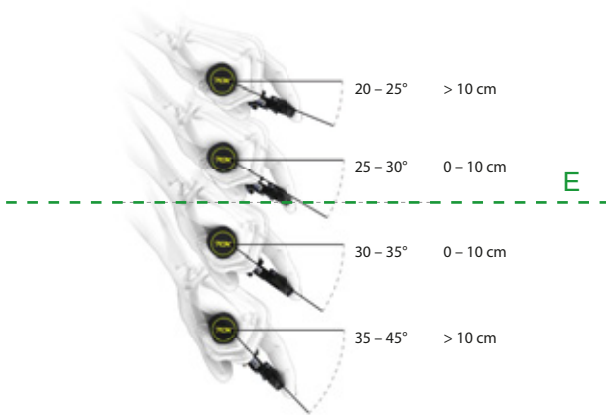- 2 Set the brake lever angle as indicated in the table.



Saddle-handlebar height difference (mm)	Brake angle
>10	20°...25°
0...10	25°...30°
0...-10	30°...35°
< -10	35°...45°

Figure 111: Brake angle

6.5.9.3 Determining the grip distance

- 1 Measure hand size using the grip distance gauge.
- 2 Adjust the grip distance at the pressure point based on the hand size.



Hand size	Grip distance (cm)
S	2
M	3
L	4

Figure 112: Brake lever position

6.5.9.4 Grip distance on a MAGURA disc brake lever

Only applies to pedelecs with this equipment

! WARNING

Crash caused by incorrectly set grip distance

If brake cylinders are set incorrectly or installed wrongly, the braking power may be lost at any time. This may cause a crash with injuries.

- ▶ Ensure that the fully applied brake lever is at a minimum distance of 20 mm from the handlebars.

The brake lever position can be adjusted to the rider's requirements. Such adjustment does not

affect the pressure point or the position of the brake linings.

- ▶ Turn the setting screw/twist knob (5) anti-clockwise towards minus (-).
 - ⇒ The brake lever moves closer to the handlebar grip.
- ▶ Turn the setting screw/twist knob (5) clockwise towards plus (+).
 - ⇒ The brake lever moves away from the handlebar grip.

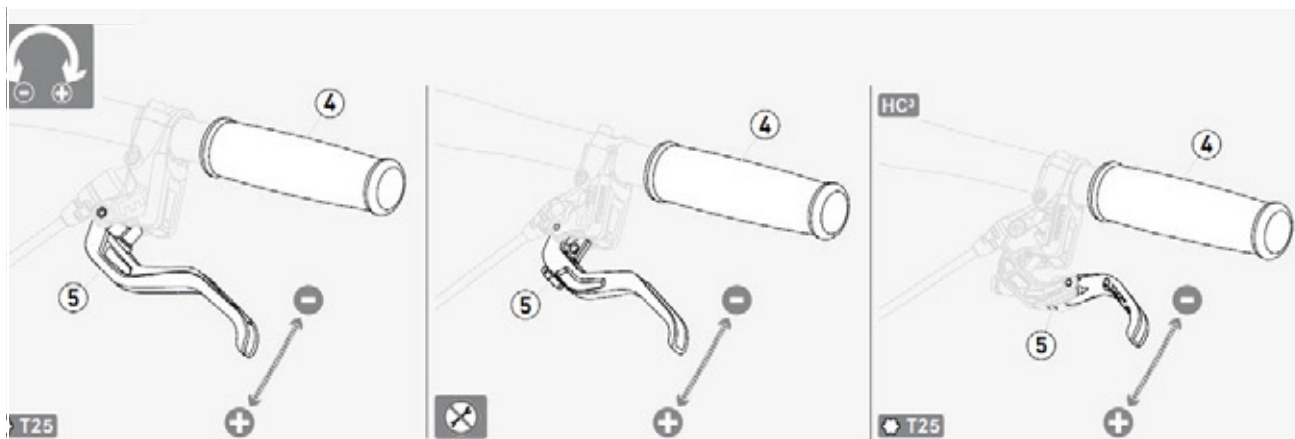


Figure 113: Adjusting the grip distance on a MAGURA disc brake lever

6.5.9.5 Grip distance on a MAGURA HS22 brake lever

Only applies to pedelecs with this equipment

WARNING

Crash caused by incorrectly set grip distance

If brake cylinders are set or installed incorrectly, braking power may be lost completely at any time. This may cause a crash with serious injuries.

- ▶ Once the grip distance has been set, check the position of the brake cylinder. Correct if necessary.

The brake lever position can be adjusted to the rider's requirements.

- ✓ Use a T25 TORX® wrench to turn the setting screw (2) to adjust the grip distance.

1 Push the brake lever gently and hold.

- ▶ Move the slider (2) outwards (–) to Position II or III.

⇒ The brake handle moves closer to the handlebars.

⇒ The brake linings move closer to the rim.

⇒ The pressure point activates sooner.

- ▶ Move the slider inwards (+) to Position II or I.

⇒ The brake lever moves away from the handlebars.

⇒ The brake linings move away from the rim.

The pressure point activates later.

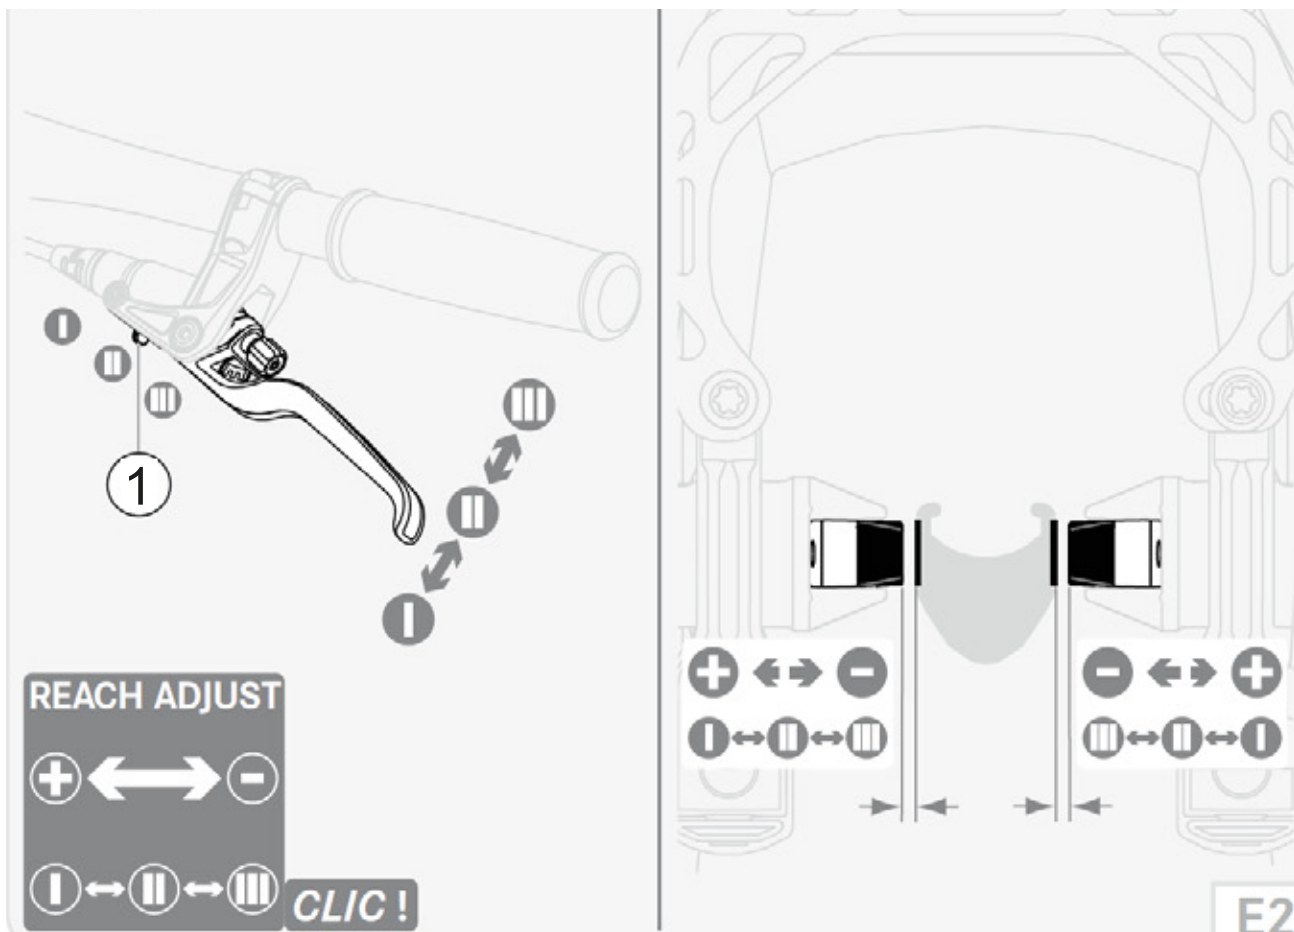


Figure 114: Setting the grip distance on a MAGURA HS 22 brake lever

6.5.9.6 Grip distance on a MAGURA HS33 brake lever

Only applies to pedelecs with this equipment

The brake lever position can be adjusted to the rider's requirements. Such adjustment does not affect the pressure point or the position of the brake linings.

- ✓ Use a T25 TORX® wrench to turn the setting screw (1) to adjust the grip distance.
- ▶ Turn the setting screw anti-clockwise towards minus (-).

- ⇒ The brake lever moves closer to the handlebar grip.
- ▶ Turn the setting screw clockwise towards plus (+).
- ⇒ The brake lever moves away from the handlebar grip.

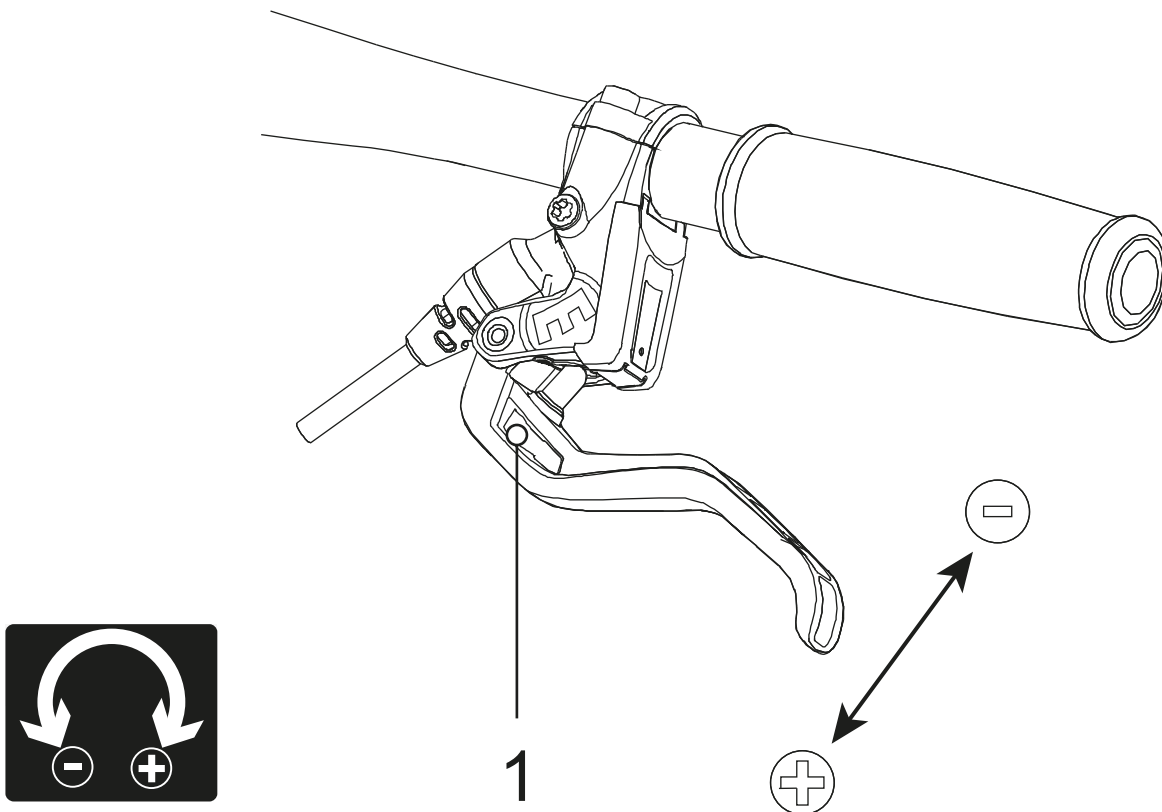


Figure 115: Setting the grip distance on a MAGURA HS 33 brake lever

6.5.9.7 Grip distance on a SHIMANO ST-EF41 brake lever

Only applies to pedelecs with this equipment

The brake lever position can be adjusted to the rider's requirements. Such adjustment does not affect the pressure point or the position of the brake linings.

- ▶ Turn setting screw anti-clockwise towards minus (-).
- ⇒ The brake lever moves closer to the handlebar grip.
- ▶ Turn setting screw clockwise towards plus (+).
- ⇒ The brake lever moves away from the handlebar grip.

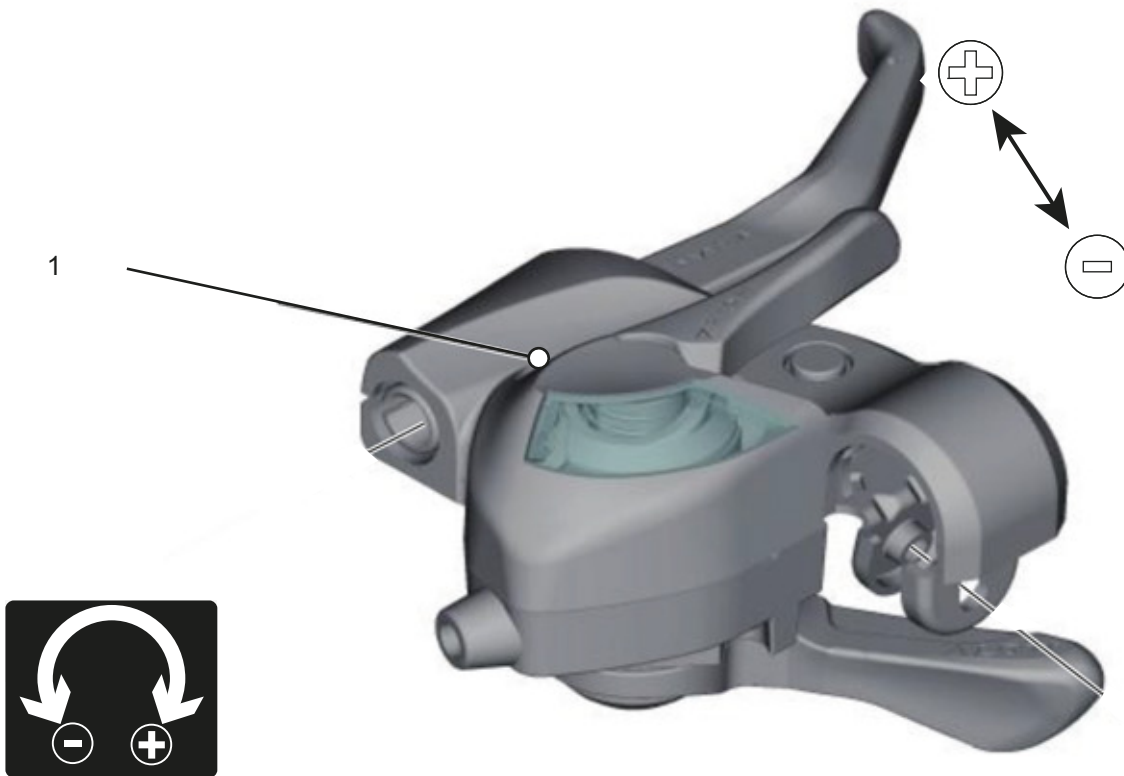


Figure 116: Setting screw position (1)

6.5.9.8 Grip distance on a SHIMANO ST-EF41 brake lever

Only applies to pedelecs with brakes:

BL-M4100

BL-M7100

BL-M8100

BL-MT200

BL-MT201

BL-MT400

BL-MT401

BL-MT402

BL-T6000

GRX ST-RX600

M7100

M8100

RS785

The brake lever position can be adjusted to the rider's requirements. Contact specialist dealer.

6.5.9.9 Pressure point on a MAGURA brake lever

Only applies to pedelecs with this equipment

WARNING

Brake failure due to incorrect setting

If the pressure point is set with brakes where the brake linings and brake disc have reached their wear limit, the brakes may fail and cause an accident with injury.

- ▶ Before you adjust the pressure point, ensure that the brake linings and brake disc have not reached their wear limit.

The pressure point setting is adjusted using the twist knob.

- ▶ Turn the twist knob towards the plus (+) symbol.
 - ⇒ The brake lever moves closer to the handlebar grip. Re-adjust the grip distance as necessary.
 - ⇒ The lever pressure point activates sooner.
- ▶ Turn the twist knob towards the minus (-).
 - ⇒ The *brake lever* move further away from the handlebar grip. Re-adjust the grip distance as necessary.
 - ⇒ The lever pressure point activates later.

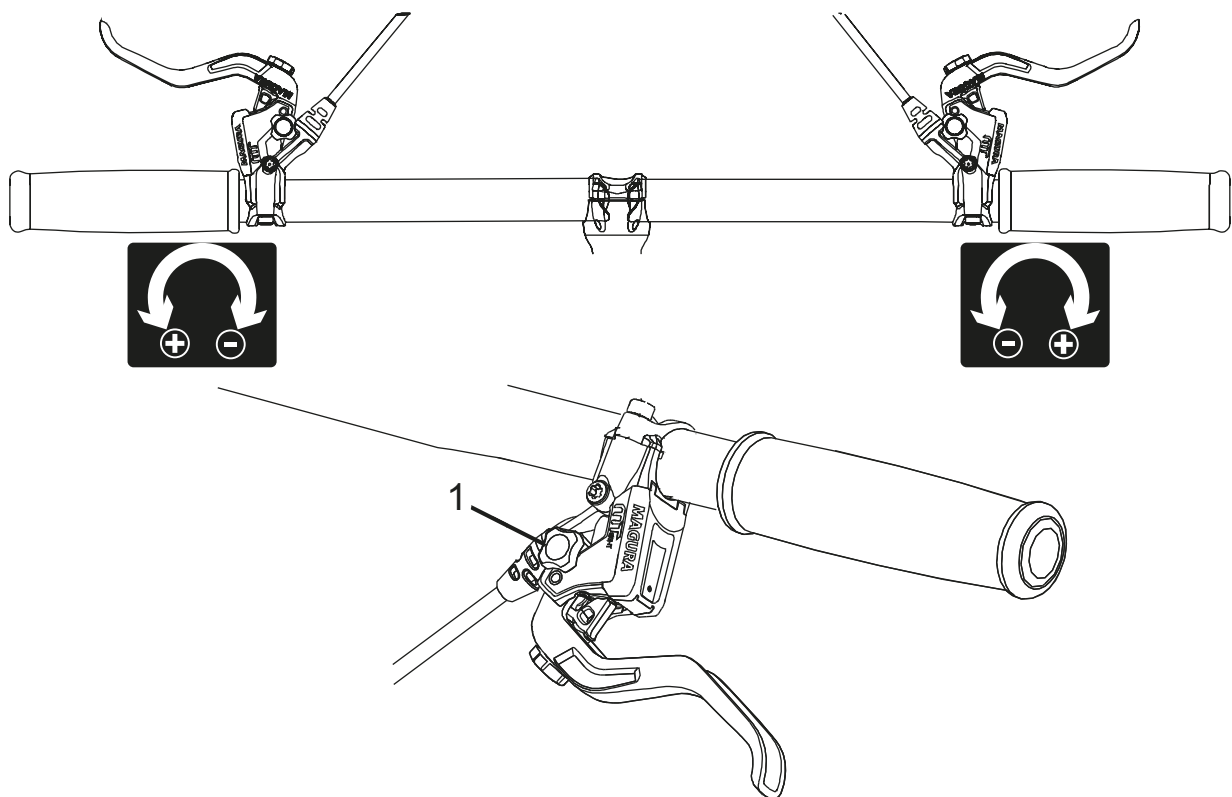


Figure 117: Using the twist knob (1) to adjust the pressure point

6.5.9.10 Retracting the brake linings

Disc brakes require wearing-in time. The braking force increases over time. The braking force is increased during break-in time. This is also the case when the brake pads or brake discs are replaced.

- 1 Accelerate pedelec to 25 km/h.
- 2 Brake pedelec until it comes to a halt.
- 3 Repeat process 30 to 50 times.

The disc brake is retracted and provides optimal braking power.

6.5.10 Suspension

A pedelec's fork suspension and rear frame damper suspension can be adjusted to the rider's weight in up to six increments, depending on the suspension system.

► Follow the the correct order for adjustment.

Sequence	Adjustment	Section	For pedelecs with components only	
			Suspension fork	Rear frame damper
1	Adjust the suspension fork sag	6.5.11	x	
2	Adjust the rear frame damper sag			x
3	Adjust suspension fork rebound damper	6.5.12	x	
4	Adjust rear frame damper rebound damper			x
5	Adjust the rear frame damper compression adjuster			x
6	The fork compression adjuster is adjusted to the terrain while riding	6.20		

Table 56: Order for adjusting the suspension

6.5.11 Fork sag



CAUTION

Crash caused by incorrectly set suspension

If the suspension is set incorrectly, the fork may become damaged, meaning problems may occur when steering. This will cause a crash with injuries.

- Never ride without air in the air suspension fork.
- Never use the pedelec without adjusting the suspension fork to the body weight.

Settings on the chassis change riding performance significantly. The rider needs to get used to the pedelec and break it in to prevent accidents.

The sag depends on the position and body weight and should be between 10% and 30% of the maximum fork deflection, depending on preferences and on how the pedelec is used.

Greater sag (20% to 30%)

A greater sag increases sensitivity to bumps, thus producing greater suspension motion. A greater sensitivity to bumps ensures more comfortable ride performance and is used on pedelecs with a longer deflection.

Decreased sag (10% to 20%)

A decreased sag reduces sensitivity to bumps, thus producing less suspension motion. A lower sensitivity to bumps ensures a firmer, more efficient ride and is generally used on pedelecs with a shorter deflection.

The adjustment shown here represents a basic setting. The rider should change the basic setting to suit the surface and their preferences.

It is advisable to make a note of the basic settings. These can then be used a starting point for subsequent settings and as a safeguard against unintentional changes.

6.5.11.1 Adjusting the Suntour fork steel suspension

Only applies to pedelecs with this equipment

- 1 You will find the **sag setting wheel (1)** beneath the plastic cover on the crown. Remove the plastic cover.

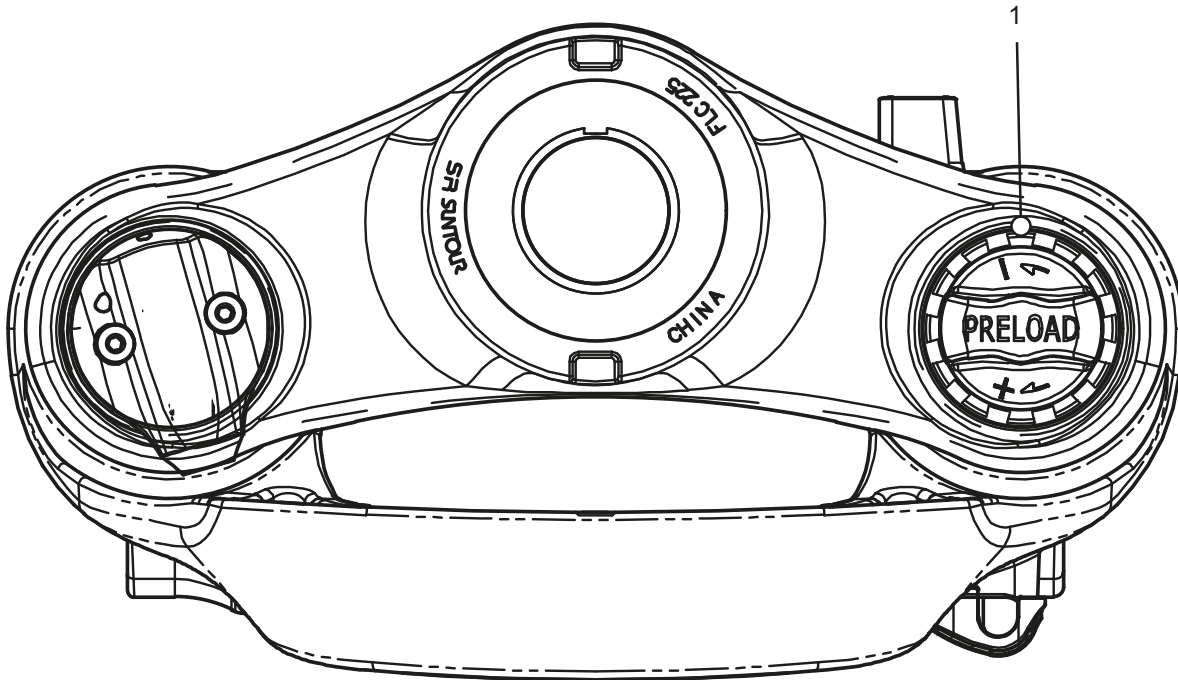


Figure 118: Sag setting wheel (1) on the suspension fork crown

- ▶ Turn the **sag setting wheel** clockwise to increase the spring pre-tensioning.
 - ▶ Turn the **sag setting wheel** anti-clockwise to decrease the spring pre-tensioning.
- ⇒ You will have made the ideal setting when the shock absorber deflects 3 mm when subject to body weight.
- 3 Replace the plastic cover on the crown after making the setting.

6.5.11.2 Adjusting the Suntour fork air suspension

Only applies to pedelecs with this equipment

- The **air valve** is located beneath the **air valve cap** on the crown. Twist off the **air valve cap**.



Figure 119: Screw caps in different designs

- 1 Attach a high-pressure damper pump to the **air valve**.
- 2 Pump air suspension fork to the required pressure. Observe the levels in the Suntour filling pressure table. Never exceed the recommended maximum tyre pressure.

Recommended air pressure (psi)						
Body weight	AION35 Mobie 45	Axon34 XCR34 XCR32	Mobie 45	NCX	XCR24	XCM-Jr.
<55 kg	35...50	40...55	40...55	40...55	40...55	40...55
55...65 kg	50...60	55...65	55...65	55...65	–	–
65...75 kg	60...70	65...75	65...75	65...75	–	–
85...95 kg	85...100	85...100	85...100	85...95	–	–
> 100 kg	+105	+100	+100	+100	–	–
Maximum air pressure	120	145	130	180	100	100

Table 57: Suntour filling pressure table for air forks

- 3 Detach high-pressure damper pump.
 - 4 Measure the distance between the crown and the dust seal. This distance is total deflection of the fork.
 - 5 Push a cable tie attached temporarily downwards against the dust seal.
 - 6 Put on your normal cycling clothing, including baggage.
 - 7 Sit on the pedelec in your usual riding position and support yourself against an object, such as a wall or tree.
 - 8 Get off the pedelec without allowing it to deflect.
 - 9 Measure distance between the dust seal and the cable tie.
- ⇒ This measurement is the sag. The recommended value is between 15% (hard) and 30% (soft) of the total fork deflection.
- 10 Increase or reduce air pressure until you have reached the desired sag.
 - 11 If the sag is correct, turn the **air valve cap** clockwise.
 - 12 If you are unable to achieve the required sag, an internal adjustment may be needed. Contact specialist dealer.

6.5.12 Fork rebound damping

Only applies to pedelecs with this equipment

Rebound damping in the suspension fork and the rear frame damper determines the speed at which the rear frame damper rebounds after being subjected to load. Rebound damping controls the suspension fork extension and rebound speed, which, in turn, has an impact on traction and control.

Rebound damping can be adjusted to body weight, spring stiffness, deflection, the terrain and the rider's preferences.

If the air pressure or spring stiffness increases, the extension and rebound speeds also increase.

Rebound damping needs to be increased to achieve an optimal setting if the air pressure or spring stiffness are increased.

The damper rebounds at a controlled speed if the fork is optimally adjusted. The wheel stays in contact with the ground when passing over bumps (blue line).

The fork head, handlebars and body follow terrain (green line) when riding over bumps. The suspension motion is predictable and controlled.


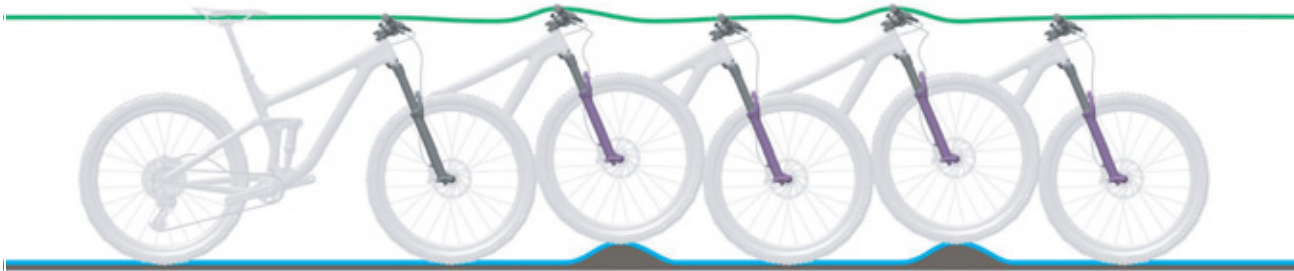


Figure 120: Optimum fork riding performance

6.5.12.1 Adjusting the Suntour fork rebound damping

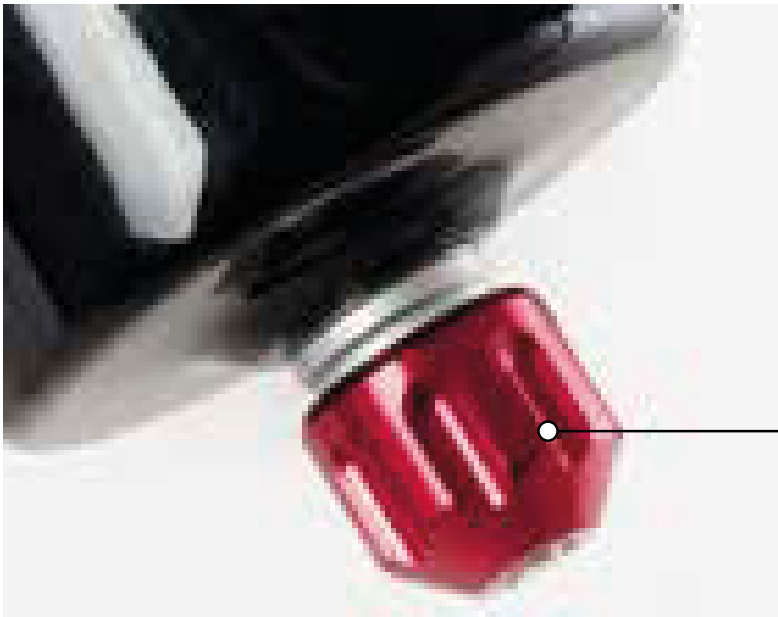Only applies to pedelecs with this equipment



1

Figure 121: Example of Suntour rebound screw (1)

- ✓ The fork sag is adjusted.
 - 1 Turn the **rebound screw** in a clockwise direction to the closed position until it stops.
 - 2 Turn the **rebound screw** slightly in an anti-clockwise direction.
- ⇒ Adjust the rebound damping in such a way that the fork rebounds quickly, but without bottoming out upwards. Bottoming out refers to when the fork rebounds too quickly and stops moving abruptly once it has reached the full rebound distance. You can hear and feel a slight impact when this happens.

6.5.13 Lighting

Example 1

If the front light is positioned too high, oncoming traffic will be dazzled. This can cause a serious accident with fatalities.

Example 2

Positioning the front light correctly can ensure that oncoming traffic is not dazzled and no-one is put at risk.

Example 3

If the front light is positioned too low, the space ahead is not illuminated to an optimum extent and the rider's vision is reduced in the dark.

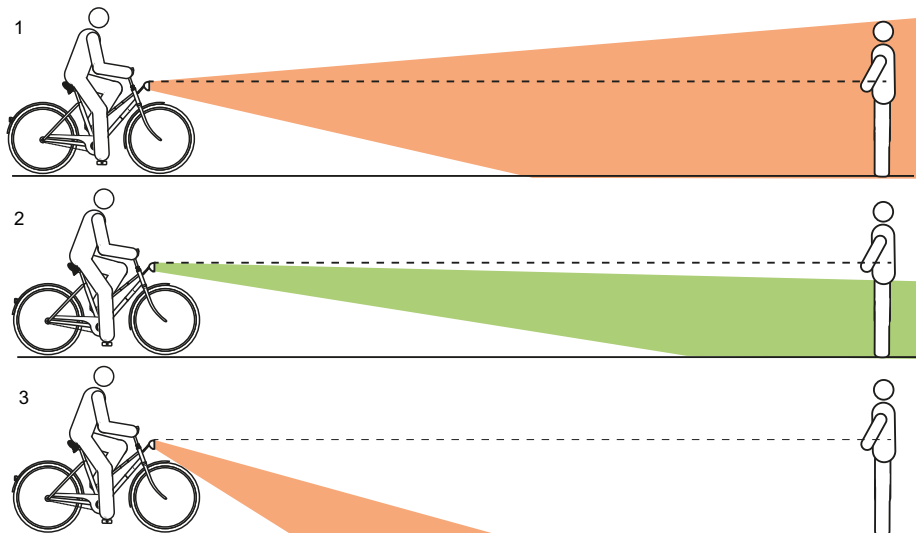


Figure 122: Light positioned too high (1), correctly (2) and too low (3)

6.5.13.1 Adjusting the lights

- 1 Position the pedelec so that its front is facing a wall.
- 2 Mark the height of the front light (1) on the wall with chalk.
- 3 Mark half the height of the front light (2) on the wall with chalk.

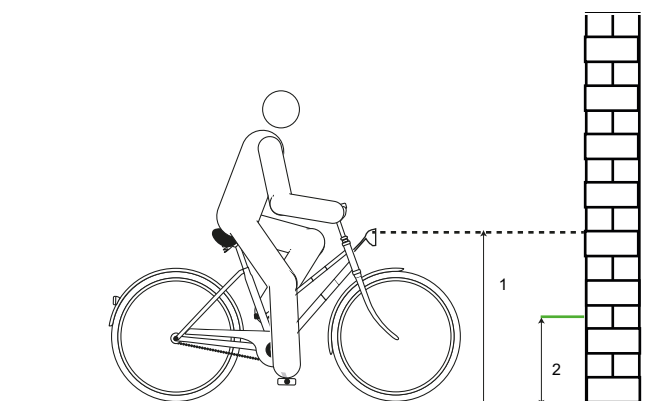


Figure 123: Front light height (1) and half the headlight height (2)

4 Place pedelec 5 m from the wall.

6 Switch on riding light.

5 Stand the pedelec up straight. Hold the handlebars straight with both hands. Do not use the kickstand.

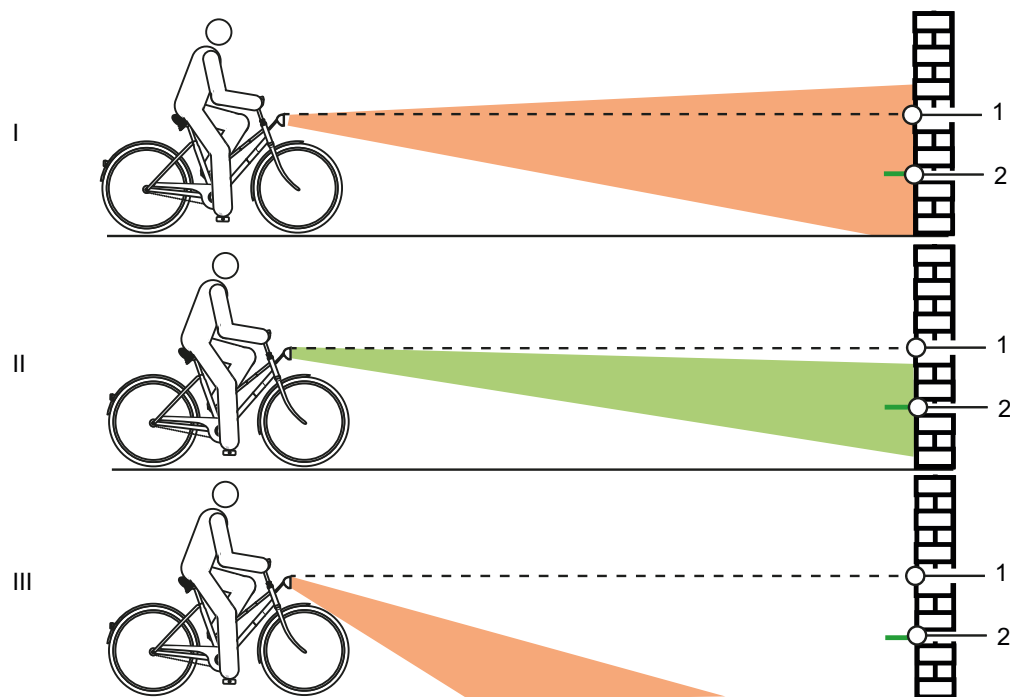


Figure 124: Light positioned too high (1), correctly (2) and too low (3)

7 Check the position of the light beam.

- ▶ (I) if the upper edge of the light beam is above the front light height mark (1), the light will dazzle. The front light must be positioned lower.
- ▶ (II) If the mid-point of the light beam is on or slightly below the mark showing half the front light (2), the light is optimally positioned.
- ▶ (III) If the light beam is in front of the wall, move front light up.

6.6 Accessories

We recommend a parking stand into which either the front wheel or rear wheel can be inserted securely for pedelecs which do not have a kickstand. The following accessories are recommended:

Description	Article number
Protective cover for electrical components	080-41000 ff
Panniers, system component*	080-40946
Rear wheel basket, system component*	051-20603
Bicycle box, system component*	080-40947
Parking stand universal stand	XX-TWO14B

Table 58: Accessories

*System components are matched to the pannier rack and provide sufficient stability due to special transmission of force.

**System components are matched to the drive system.

6.6.1 Child seat



WARNING

Crash caused by incorrect child seat

The pannier rack and down tube are unsuitable for mounting child seats and may break. Such an incorrect position may cause a crash with serious injuries for the rider or child.

- ▶ Never attach a child seat to the saddle, handlebars or down tube.



CAUTION

Crash caused by improper handling

When using child seats, the pedelec's handling characteristics and stability change considerably. This can cause a loss of control, a crash and injuries.

- ▶ You should practice how to use the child seat safely before using the pedelec in public spaces.

Risk of crushing due to exposed springs

The child may crush his/her fingers on exposed springs or open mechanical parts of the saddle or the seat post.

- ▶ Never install saddles with exposed springs if a child seat is being used.
- ▶ Never install seat posts with suspension with open mechanical parts or exposed springs if a child seat is being used.

Notice

- ▶ Observe the legal regulations on the use of child seats.
- ▶ Observe the operating and safety instructions for the child seat system.
- ▶ Never exceed the maximum permitted total weight.

The specialist dealer will advise you on choosing a child seat system for the child and the pedelec.

The specialist dealer must install the child seat the first time to ensure that it is safely fitted.

When installing a child seat, the specialist dealer makes sure that the seat and the fastening mechanism for the seat are suitable for the pedelec and that all components are installed and firmly fastened. They will also ensure that shift cables, brake cables, hydraulic lines and electrical cables are adjusted as necessary, the rider has optimum freedom of movement and the pedelec's maximum permitted total weight is complied with.

The specialist dealer will provide instruction on how to handle the pedelec and the child seat.

6.6.2 Trailer

CAUTION

Crash caused by brake failure

The braking distance may be longer if the trailer is carrying excessive load. The long braking distance can cause a crash or an accident and injuries.

- ▶ Never exceed the specified trailer load.

Notice

- ▶ The operating and safety instructions for the trailer system must be observed.
- ▶ The statutory regulations on the use of bicycle trailers must be observed.
- ▶ Only use type-approved coupling systems.

A pedelec which is approved for towing a trailer will bear an appropriate adhesive label. You may only use trailers with a tongue load and weight which do not exceed the permitted values.

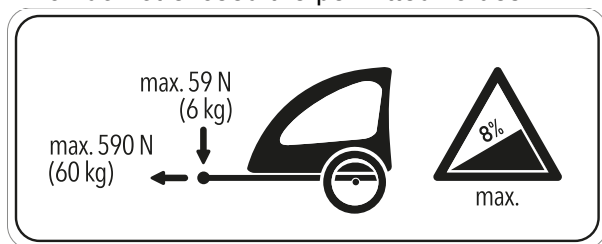


Figure 125: Trailer sign

The specialist dealer will advise on choosing a suitable trailer system for the pedelec. The specialist dealer must install the trailer the first time to ensure that it is fitted safely.

6.6.3 Pannier rack

The specialist dealer will advise on choosing a suitable pannier rack.

The specialist dealer must install the pannier rack the first time to ensure that it is safely fitted.

When installing a pannier rack, the specialist dealer makes sure that the fastening mechanism is suitable for the pedelec and that all components are installed and firmly fastened. They will also ensure that shift cables, brake cables, hydraulic lines and electrical cables are adjusted as necessary, the rider has optimum freedom of movement and the pedelec's maximum permitted total weight is not exceeded.

The specialist dealer will provide instruction on how to handle the pedelec and the pannier rack.

6.7 Personal protective equipment and accessories for road safety

Seeing and being seen is crucial in road traffic. The following requirements must be met for riding a road-safe vehicle on public roads.

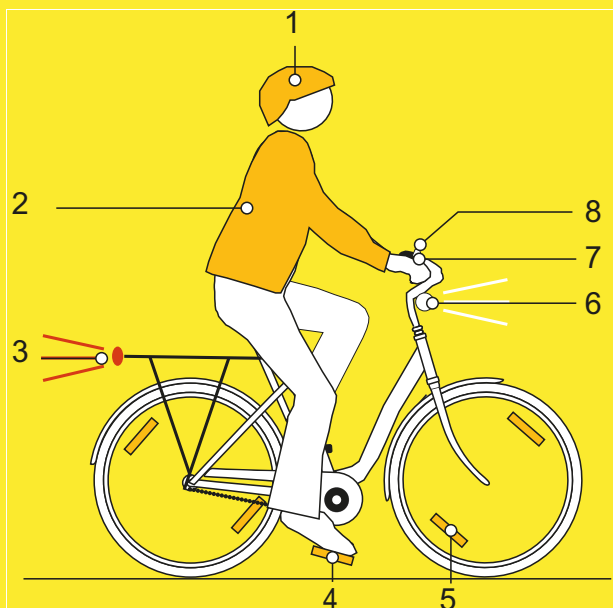


Figure 126: Road safety

- 1 The helmet must have a reflective strip or a light in a clearly visible colour.
- 2 **Cycle clothing** is essential at all times of year. Clothing should be retroreflective or as light as possible. Fluorescent materials are also suitable. High-visibility jackets and straps on your upper body ensure even greater safety. Never wear a skirt. Always wear trousers which reach down to your ankles instead.
- 3 The **large red reflector** with a “Z” registration mark and the **red rear light** must be clean. The rear light is attached high enough so that car drivers can see it (minimum height 25 cm). The rear light must work.
- 4 The two **reflectors on the two non-slip pedals** must be clean.
- 5 The **yellow spoke reflectors** on both wheels or the **white, fluorescent surface** on both wheels must be clean.
- 6 The **white front light** must work and must be positioned so that it does not dazzle other road users. If the **white reflector** is not integrated into the front light, it must be clean at all times.

- 7 The **two separate brakes** on the pedelec must work at all times.
- 8 The **clear sounding bell** must be fitted and must work.

6.8 Before each ride

- ▶ Check pedelec before each ride; see [Section 7.1](#).

Check list before each ride		
<input type="checkbox"/>	Check everything is sufficiently clean.	See Section 7.2
<input type="checkbox"/>	Check guards.	See Section 7.1.1
<input type="checkbox"/>	Check battery to ensure it is firmly in place.	See Section 6.7.3
<input type="checkbox"/>	Check lights.	See Section 7.1.13
<input type="checkbox"/>	Check brake.	See Section 7.1.14
<input type="checkbox"/>	Check suspension seat post.	See Section 7.1.9
<input type="checkbox"/>	Check pannier rack.	See Section 7.1.5
<input type="checkbox"/>	Check bell.	See Section 7.1.10
<input type="checkbox"/>	Check handles.	See Section 7.1.11
<input type="checkbox"/>	Check rear frame damper.	See Section 7.1.4
<input type="checkbox"/>	Check frame.	See Section 7.1.2
<input type="checkbox"/>	Check wheel concentricity.	See Section 7.1.7
<input type="checkbox"/>	Check quick releases.	See Section 7.1.8
<input type="checkbox"/>	Check mudguards.	See Section 7.1.6
<input type="checkbox"/>	Check USB cover.	See Section 7.1.12

- ▶ Be alert to any unusual noises, vibrations or odours while riding. Be alert to any unusual operating sensations when braking, pedalling or steering. This indicates material fatigue.
- ⇒ Take pedelec out of service if there are any deviations from the “Before each ride” check list or any unusual behaviour. Contact specialist dealer.

6.9 Raising the kickstand

- ▶ Use your foot to raise the kickstand completely before setting off.

6.10 Using the pannier rack



Crash caused by loaded pannier rack

The pedelec is handled differently with a loaded *pannier rack*, in particular when the rider needs to steer and brake. This can lead to a loss of control. This may cause a crash with injuries.

- ▶ You should practice how to use a loaded *pannier rack* safely before using the pedelec in public spaces.

Crushing the fingers in the spring flap

The spring flap on the *pannier rack* operates with a high clamping force. There is a risk of crushing the fingers.

- ▶ Never allow the spring flap to snap shut in an uncontrolled manner.
- ▶ Be careful where you position your fingers when closing the spring flap.

Crash caused by unsecured baggage

Loose or unsecured objects on the *pannier rack*, e.g. belts, may become caught in the rear wheel. This may cause a crash with injuries.

Objects which are fastened to the pannier rack may cover the *reflectors* and the *riding light*. Other users may not see the pedelec on public roads as a result. This may cause a crash with injuries.

- ▶ Secure any objects which are attached to the *pannier rack* sufficiently.
- ▶ Objects fastened to the *pannier rack* must never cover the *reflectors*, the *front light* or the *rear light*.

- ▶ Distribute the baggage as evenly as possible between the left- and right-hand side.
- ▶ We recommend the use of panniers and baggage baskets.



Figure 127: The maximum load bearing (1) capacity is indicated on the pannier rack

- ▶ Never exceed the maximum permitted *total weight* when packing the pannier.
- ▶ Never (1) exceed the maximum load bearing capacity of the pannier rack.
- ▶ Never modify the pannier rack.

6.11 Using the saddle

- ▶ Do not wear studded jeans as these can damage the saddle covering.
- ▶ Wear dark clothes for your first few rides as new leather saddles can stain clothing.

6.11.1 Using the leather saddle

Sunlight and UV light damage the colour and can cause the leather to dry out and fade.

- ▶ Do not expose the pedelec to the sun for longer periods of time.

Moisture may cause the leather to detach from material beneath and mould can form.

- ▶ If the leather handles get wet, dry handles completely.

6.12 Using the pedals

- ▶ The ball of the foot is placed on the pedal when riding and pedalling.

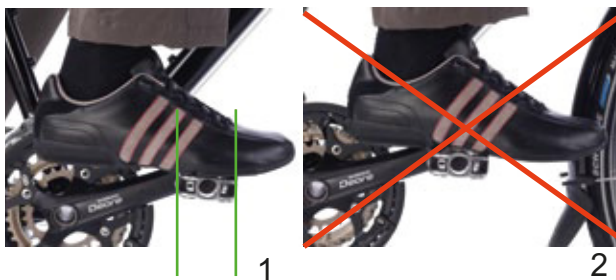


Figure 128: Correct (1) and incorrect (2) foot position on the pedal

6.13 Using the multifunctional handlebars or bar ends

- ▶ Vary handle position to avoid overstraining and tiring the hands.

6.14 Using leather handles

Sweat and grease from the skin are two of the greatest enemies of leather. They penetrate the surface of leather and cause it to disintegrate more quickly, meaning the leather can soften and abrade.

- ▶ Wear gloves.

Sunlight and UV light damage the colour and can cause the leather to dry out and fade.

- ▶ Do not expose the handle to the sun for longer periods of time.

Moisture may cause the leather to detach from material beneath and mould can form.

- ▶ If the leather handles get wet, dry handles completely.

6.15 Using the bell

- 1 Press the bell button downwards.
- 2 Let button spring back.

6.16 Using the battery

- ✓ Switch off the battery and the drive system before removing or inserting the battery.

6.16.1 Frame battery

Only applies to pedelecs with this equipment

6.16.1.1 Removing the frame battery

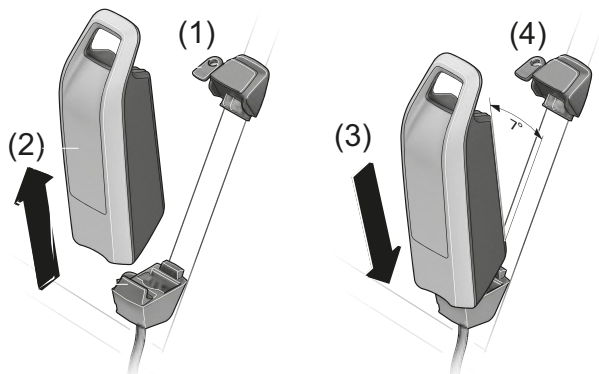


Figure 129: Removing and inserting the frame battery

- 1 Open battery lock with battery key (1).
 - 2 Tip the battery out of the top section of the frame battery mount.
 - 3 Pull from the frame battery mount (2).
- #### 6.16.1.2 Inserting the frame battery
- 1 Place the battery on the contacts in the lower section of the frame battery mount (3).
 - 2 Remove the battery key from the battery lock (4).
 - 3 Tip the battery into the top section of the frame battery mount until it will go no further.
- ⇒ There is an audible clicking noise.
- 4 Check the battery to make sure it is firmly in place.

6.16.2 Pannier rack battery

Only applies to pedelecs with this equipment

6.16.2.1 Removing the pannier rack battery

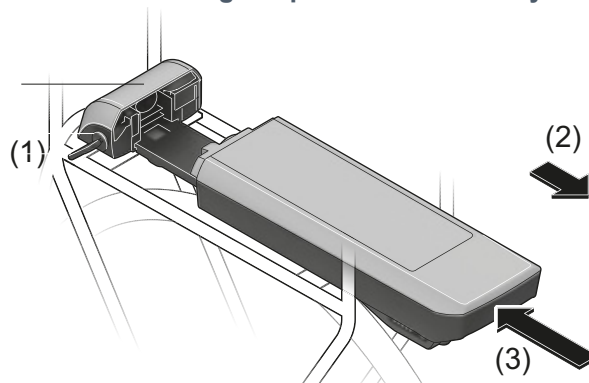


Figure 130: Removing (2) and inserting (3) the pannier rack battery

- 1 Open battery lock with battery key (1).
- 2 Pull the pannier rack battery backwards and out of its mount (2).
- 3 Remove the battery key from the battery lock (1).

6.16.2.2 Inserting the pannier rack battery

- 1 Insert battery into the pannier rack battery mount with the contacts facing the front until it clicks into place (3).
- 2 Check the battery to make sure it is firmly in place.

6.16.3 Integrated battery

Only applies to pedelecs with this equipment

6.16.3.1 Removing the integrated battery

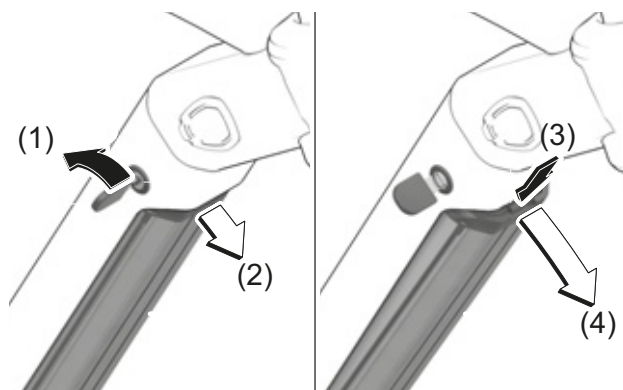


Figure 131: Removing the integrated battery

- 1 Open battery lock with battery key (1).
⇒ The battery is released and falls into the retainer guard (2).
- 2 Hold the battery in your hand from below. Use the other hand to push on the retainer guard from above (3).
⇒ The battery is released and falls into the hand (4).
- 3 Remove the battery from the frame.
- 4 Remove the battery key from the battery lock.

6.16.3.2 Inserting the integrated battery

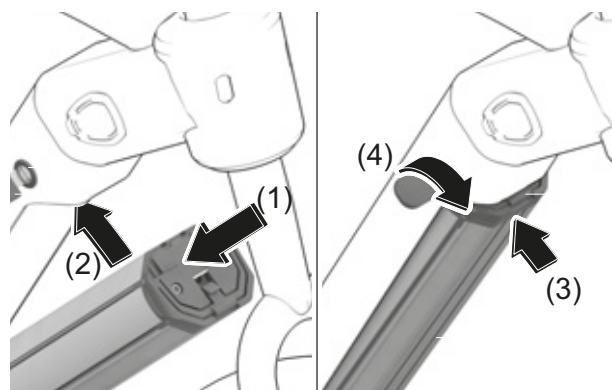


Figure 132: Inserting the integrated battery

- 1 Place the battery into the integrated battery lower mount with the contacts facing the front (1).
- 2 Flip the battery upwards so that the battery is held by the retainer guard (2).
- 3 Push the battery upwards (3).
⇒ There is an audible clicking noise.
- 4 Check battery to ensure it is firmly in place.
- 5 Lock the battery with the battery key; otherwise, the battery may fall out of the mount when you open the see (4).
- 6 Remove the battery key from the battery lock.
- 7 Check the battery to ensure it is firmly in place before each ride.

6.16.4 Charging the battery

- ✓ The ambient temperature during the charging process must be within the range from 0 °C to 40 °C.
 - ✓ The battery can remain on the pedelec or can be removed for charging.
 - ✓ Interrupting the charging process does not damage the battery.
- 1 Remove the cable connection cover if necessary.
 - 2 Connect the mains plug of the charger to a normal domestic, grounded socket.

Connection data	230 V, 50 Hz
-----------------	--------------

Notice

- ▶ Check that mains voltage! The power source voltage must match the voltage indicated on the charger nameplate. Chargers labelled 230 V may be operated at 220 V.
-
- 3 Connect the charging cable to the battery's charging port.
 - ⇒ The charging process starts automatically.
 - ⇒ The battery level indicator shows the charge level during charging. When the drive system is switched on, the *on-board computer* displays the charging process.

Notice

If an error occurs during the charging process, a system message is displayed.

- ▶ Remove the charger and battery from operation immediately and follow the instructions.
-
- ⇒ The charging process is complete when the LEDs on the charge level indicator (battery) go out.
- 4 Once charging is complete, disconnect the battery from the charger.
 - 5 Disconnect the charger from the mains.

6.16.5 Charging the dual battery

Only applies to pedelecs with this equipment

Notice

- ▶ Charge the battery via the accessible charging socket only.
- ▶ Never open a sealed charging socket. Charging via a pre-sealed charging socket can cause irreparable damage.

6.16.5.1 Charging process when two batteries are used

- ▶ If two batteries are attached to a pedelec, charge both batteries via the non-sealed socket.
 - ⇒ The two batteries are charged alternately during charging. Charging switches automatically between the two batteries several times. The charging time is twice as long.
 - ⇒ The two batteries are discharged alternately during use.

6.16.5.2 Charging process when one battery is used

- ▶ If only one battery is inserted, only charge the battery with an accessible charging socket.
- ▶ Charge the battery with the sealed charging socket outside its mount only.

6.16.6 Using double battery model with a single battery only

One of the charging sockets is not accessible or is sealed with an end cap on pedelecs with two batteries.

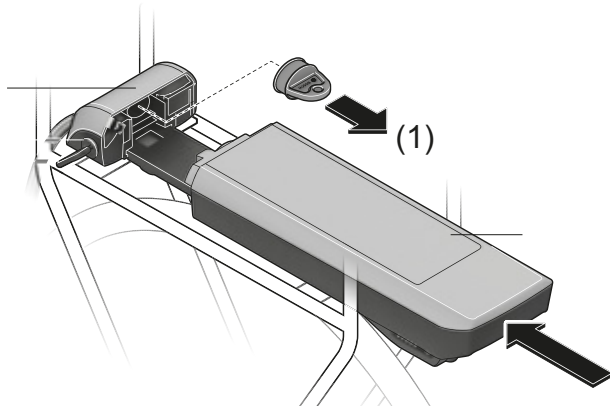


Figure 133: Covering open contacts with cover cap – example: pannier rack battery

- ▶ If you wish to use just one battery on a pedelec which is designed for two batteries, cover the contacts in the free slot with the supplied cover cap (1); otherwise, there is a risk of a short circuit caused by the open contacts.

6.16.7 Waking the battery

- ✓ The battery switches to sleep mode to protect itself when not used for a longer period. The LEDs on the battery level indicator do not light up.
- ▶ Press the **On-Off button (battery)**.
- ⇒ The charge level indicator (battery) shows the charge level.

6.17 Using pedelec with the electric drive system

6.17.1 Switching on the electric drive system



Crash caused by lack of readiness for braking

When it is switched on, the drive system can be activated by the application of force on the pedals. There is a risk of a crash if the drive is activated unintentionally and the brake is not reached.

- ▶ Never start the electric drive system, or switch it off immediately, if the brake cannot be reached safely and reliably.

- ✓ A sufficiently charged battery has been inserted into the pedelec.
- ✓ The battery is firmly positioned. The battery key has been removed.

There are three options for switching on the drive system.

On-Off button (battery)

- ▶ Press the **On-Off button (battery)** briefly.

On-Off button (on-board computer)

- ▶ Press the **On-Off button (on-board computer)** briefly.

Switched-on on-board computer

- ▶ If the on-board computer is already switched on when it is inserted into its mount, the electric drive system is switched on automatically.
- ⇒ After switching on, a speed of 0 KM/H is displayed on the *on-board computer*. If it is not, check whether the *on-board computer* is fully engaged into position.
- ⇒ If the drive system is switched on, the drive is activated as soon as the pedals are moved with sufficient force (except if in push assist mode or the level of assistance is "OFF").
- ⇒ The motor power is determined by the level of assistance set on the on-board computer.

6.17.2 Switching off the electric drive

system

As soon as you stop pushing the pedals in normal mode or reach a speed of 25 km/h, the drive system switches off the assistance system. The assistance system starts up again when you push the pedals and your speed is less than 25 km/h.

The system switches off automatically ten minutes after the last command. There are three options for switching off the drive system manually.

On-Off button (on-board computer)

- ▶ Press the **On-Off button (on-board computer)** briefly.

On-Off button (battery)

- ▶ Press the **On-Off button (battery)**.

Removing the on-board computer

- ▶ Remove the *on-board computer* from the mount.
- ⇒ The LEDs on the charge level indicator (battery) go out.

6.18 Using the on-board computer

CAUTION

Crash caused by distraction

A lack of concentration while riding increases the risk of an accident. This may cause a crash with serious injuries.

- ▶ Never allow yourself to be distracted by the on-board computer.
- ▶ Stop pedelec if you want to make inputs on the on-board computer other than change the level of assistance. Only enter data when the bicycle is stationary.

Notice

- ▶ Do not use on-board computer as a handle. The on-board computer may become irreparably damaged if you use it to lift the pedelec.
- ▶ Remove the on-board computer from its mount if the pedelec is not going to be used for several weeks. Store the on-board computer away safely in a dry environment at room temperature.

The internal on-board computer battery discharges when it is not in use. This can cause damage to the internal on-board computer battery.

- ▶ Charge internal on-board computer battery every 3 months for at least 1 hour.

6.18.1 Attaching the on-board computer

Notice

If the rider is not present, the on-board computer can be used without authorisation, e.g. it may be stolen, the system settings may be changed or journey information may be read.

- ▶ Remove on-board computer when you park.

The system is switched off by removing the on-board computer.

6.18.1.1 Removing the on-board computer

- ▶ Push the **on-board computer catch** down and simultaneously push the on-board computer forwards and out of the mount.

6.18.1.2 Attaching the on-board computer

- 1 Place the on-board computer on the mount.
- 2 Push the on-board computer back as far as it will go.

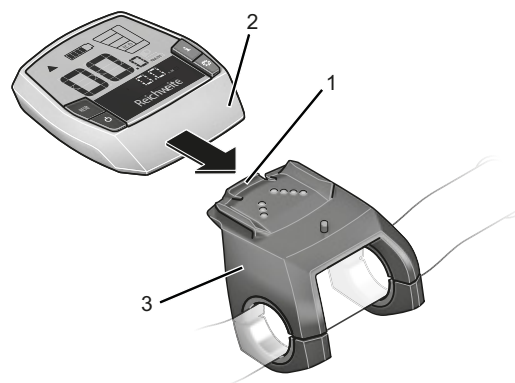


Figure 134: Push on-board computer (2) over the on-board computer catch (1) until it locks into the mount (3)

6.18.2 Securing the on-board computer against removal

- 1 Detach the on-board computer mount from the handlebars.
 - 2 Place on-board computer in its mount.
 - 3 Fasten the blocking screw (M3 thread, 8 mm in length) into its designated thread in the mount from below.
 - 4 Fit the mount to the handlebars.
- ⇒ The on-board computer is secured against removal.

6.18.3 Charging the on-board computer battery

Notice

The on-board computer battery discharges when it is not in use. This can cause irreparable damage to the on-board computer battery.

- ▶ Recharge the on-board computer battery for at least 1 hour every 3 months.

- ✓ If the on-board computer battery is low when the on-board computer is switched, ATTACH TO PEDELEC appears on the text display for three seconds. The on-board computer will then switch back off.

There are two options for charging the battery.

6.18.3.1 Charging on the pedelec

- 1 Once a battery has been inserted into the pedelec, place the on-board computer in the on-board computer mount. Press the **On-Off button (battery)**.
- 2 Using the pedelec.

6.18.3.2 Charging using the USB port

- 1 Open the protective flap on the USB port.
 - 2 Connect the USB port to a commercially available USB charger or the USB port on a computer (5 V charge voltage; max. 500 mA charging current), using a suitable USB cable.
- ✓ USB CONNECTED is displayed on the on-board computer.

6.18.4 Using the USB port

Notice

Any moisture penetrating through the USB port may trigger a short circuit in the on-board computer.

- ▶ Regularly check the position of the rubber cover on the USB port and adjust it as necessary.

The USB port can be used to operate external devices which can be connected using a standard micro A/micro B USB 2.0 cable.

- 1 Open the protective flap on the USB port.
- 2 Replace the protective flap after using the USB port.

6.18.5 Switching on the on-board computer

- ▶ Press the **On-Off button (on-board computer)** briefly.

⇒ The electric drive system is switched on.

6.18.6 Switching off the on-board computer

If the on-board computer is not inserted into its mount, it will switch off automatically after one minute to save energy if no button is pressed.

- ▶ Press the **On-Off button (on-board computer)** briefly.

⇒ The electric drive system is switched off.

6.18.7 Using the push assist system



Injury from pedals or wheels

The pedals and the drive wheel turn when the push assist system is used. There is a risk of injury if the wheels are not in contact with the ground when the push assist system is used (e.g. when carrying the pedelec up stairs or when loading it on a bicycle rack).

- ▶ Only use the push assist mode when pushing the pedelec.
- ▶ You must steer the pedelec securely with both hands when using push assist.
- ▶ Allow for enough freedom of movement for the pedals.

The push assist system helps with pushing the pedelec. The speed can be a maximum of 6 km/h in this case.

- ✓ The tractive power of the push assist and its speed can be influenced by the selection of gear. We recommend using first gear for cycling uphill to protect the drive.
 - ✓ The level of assistance OFF must not be selected.
- 1 Press the **push assist button** briefly.
 - 2 Press and hold the **plus button** within 3 seconds to switch on the push assist.
 - 3 Release the **plus button** to shut off the push assist. The push assist system switches off automatically as soon as the wheels are blocked or the speed exceeds 6 km/h.

6.18.8 Using the riding light

- ✓ The drive system needs to be already switched on to turn on the *riding light*.
- ▶ Press the **riding light button**.
- ⇒ The *riding light* is switched on (*riding light symbol* is displayed) or switched off (*riding light symbol* is not displayed).

6.18.9 Selecting the level of assistance

- ▶ Press the **plus button** to increase the level of assistance.
- ▶ Press the **minus button** to reduce the level of assistance.

6.18.10 Journey information

The displayed **journey information** can be changed and partially reset.

If the on-board computer is removed from its mount, all function values are saved and can still be displayed.

6.18.10.1 Switching the displayed journey information

- ▶ Press the **on-board computer info button** or the **operating element info button** repeatedly until the required *journey information* is displayed.

6.18.10.2 Resetting the journey information

- ▶ If you wish to reset the **Trip Distance**, **Trip Time** and **Avg. Speed** switch to one of these three functions. Press the **RESET button** until the indicator is set to zero. This will also reset the readings for the other two functions.
- ▶ If you wish to reset the **Max. speed** journey information, switch to this function. Press the **RESET button** until the indicator is set to zero.
- ▶ If you wish to reset the **Range** journey information, switch to this function. Press the **RESET button** until the indicator is the factory setting value.

6.18.11 Changing the system settings

The *System settings* can be displayed and changed no matter whether the on-board computer is inserted in the mount or not. A few settings are only visible and changeable if the on-board computer is inserted. A few menu options may be missing, depending on the equipment used.

- ▶ Press the **Info button (on-board computer)** and the **RESET button** together.
- ⇒ SETTINGS is displayed on the on-board computer. The *System settings* is opened.
- ▶ Press the **info button (on-board computer)** repeatedly until the system setting which you wish to change is displayed.
- ▶ Press the **plus button** or the **minus button** to change the displayed setting.
- ▶ Press and hold the **RESET button** for 3 seconds to save the changed **system settings** and return to the **journey information**.

Display	Change
- CLOCK +	The current time can be adjusted. If you hold the setting button down, you can change the time more quickly.
- WHEEL CIRCUM +	The value pre-set by the manufacturer can be changed by ± 5%. This menu option is only shown when the display is positioned in its mount.
- ENGLISH +	You can change the language for text messages. You can choose between English, German, French, Dutch, Spanish, Danish, Swedish, Italian and Portuguese.
- UNIT KM/MI +	You can choose whether the speed and distance are displayed in kilometres or miles.
- TIME FORMAT +	You can display the time in 12-hour clock or 24-hour clock format.
- SHIFT RECOM. OFF +	You can turn the gear recommendation indicator on or off.

Table 59: Changing the system settings

6.19 Brake

WARNING

Crash caused by brake failure

Oil or lubricant on the brake disc in a disc brake or on the rim of a rim brake can cause the brake to fail completely. This may cause a crash with serious injuries.

- ▶ Never allow oil or lubricant to come into contact with the brake disc or brake linings or on the rim of a rim brake.
- ▶ If the brake linings have come into contact with oil or lubricant, contact specialist dealer to have the components cleaned or replaced.

If the brakes are applied continuously for a long time (e.g. while riding downhill for a long time), the fluid in the brake system may heat up. This may create a vapour bubble. This will cause air bubbles or water contained in the brake system to expand. This may suddenly make the lever travel wider. This may cause a crash with serious injuries.

- ▶ Release the brake regularly when riding downhill for a longer period of time.

The motor drive force is shut off during the ride as soon as the rider no longer is no longer pedalling. The drive system does not switch off when braking.

- ▶ In order to achieve optimum braking results, do not pedal while braking.

6.19.1 Using the brake lever

Only applies to pedelecs with this equipment

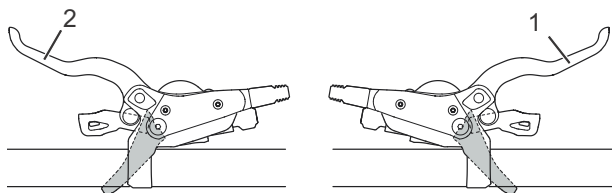


Figure 135: Front (2) and rear (1) brake lever – Shimano brake used as an example

- ▶ Push the left-hand *brake lever* to apply the *front wheel brake*.
- ▶ Push the right-hand *brake lever* to apply the *rear wheel brake*.
- ▶ Turn the setting wheel in an anti-clockwise direction to increase the rebound speed.
- ▶ Turn the setting wheel in a clockwise direction to decrease the rebound speed.

6.19.2 Using the back-pedal brake

Only applies to pedelecs with this equipment

- 1 Move pedals a little beyond the 3 o'clock and 9 o'clock position.
- 2 Pedal in the opposite direction to the *direction of travel* until the desired speed has been reached.

6.20 Suspension and damping

Compression adjuster set to hard

- Causes the suspension fork to move higher within the deflection range. This improves efficiency, maintains momentum and makes it easier to ride over uniformly hilly terrain and around bends.
- Deflection may feel somewhat harder on rugged terrain.

Compression adjuster set to soft

- Causes the fork to deflect quickly and easily. This makes it easier to maintain speed and momentum when riding over uneven rugged terrain.
- Deflection feels somewhat less hard on rugged terrain.



Figure 136: Optimum performance over bumps

When optimally adjusted, the fork deflects quickly and unhindered when the bike hits bumps and absorbs a bump. Traction is retained (blue line).

The fork responds quickly to the bump. The headset and handlebars rise slightly when absorbing a bump (green line).

Threshold

The damping threshold prevents deflection until a medium impact or downward force occurs. Threshold mode increases drive efficiency over level terrain.

The threshold setting can be used to improve pedalling efficiency over flat or hilly terrain. In threshold mode, higher pedelec speeds lead to greater impact force when a pedelec hits a bump, causing the fork to deflect, and the bump is absorbed.

- When the compression adjuster is in the open position (against the stop in an anti-clockwise direction), the suspension fork deflects quickly and unhindered through its entire deflection range when an impact or downward force occurs.
- When the compression adjuster is in the threshold position, the suspension fork counteracts deflection until a medium impact or downward force occurs.
- When the compression adjuster is in the blocked position (against the stop in a clockwise direction), the suspension fork counteracts deflection throughout its deflection range until a strong impact or downward force occurs.

6.20.1 Adjusting the Suntour compression adjuster

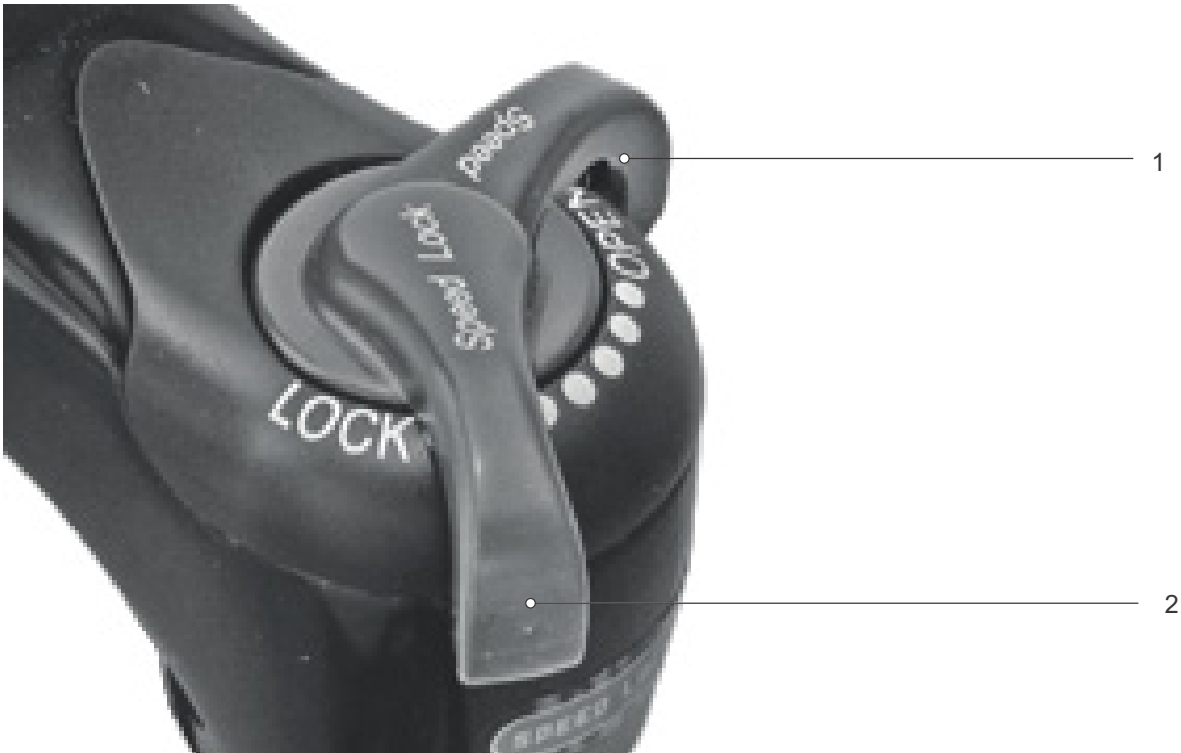


Figure 137: Suntour compression adjuster in open (1) and closed (2) position

► Place **compression adjuster** in the OPEN position.

⇒ The compression adjuster is open.

► Place **compression adjuster** in the LOCK position.

⇒ The compression adjuster is locked.

► Position **compression adjuster** between OPEN and LOCK.

⇒ This position allows you to fine-tune the compression adjuster.

We recommend setting the **compression adjuster** to the OPEN position first.

6.21 Gear shift

The selection of the appropriate gear is a prerequisite for a physically comfortable ride and making sure that the electric drive system functions properly. The ideal pedalling frequency is between 70 and 80 revolutions per minute.

- ▶ Stop pedalling briefly when changing gears. This makes it easier to switch gears and reduces wear on the drivetrain.

6.21.1 Using the derailleur gears

The speed and range can be increased while applying the same force if you select the right gear. Use the derailleur gears.

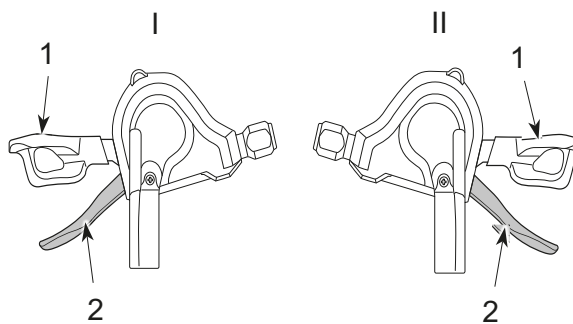


Figure 138: Down shifter (1) and up shifter (2) on the left (I) and right (II) gear shift

- ▶ Select the appropriate gear with the *shifter*.
 - ⇒ The gear shift switches the gear.
 - ⇒ The shifter returns to its original position.
- ▶ Clean and lubricate the rear derailleur if gear changes block.

6.21.2 Using a SHIMANO hub gear

Only applies to pedelecs with this equipment

CAUTION

Crash caused by incorrect use

If the rider applies too much pressure on the pedals during a gear change and activates the shifter or changes several gears at a time, their feet may slip from the pedals. This may cause a crash or flip-over with injuries.

Switching down several gears to a low gear may cause the twist grip outer sleeve to suddenly come off. This will not have an adverse effect on the twist grip's correct functioning since the outer guide returns to its original position after the gear change is complete.

- ▶ Apply little pressure on the pedals while changing gears.
- ▶ Never change more than one gear at a time.

Notice

The interior hub is not completely waterproof. If water gets into the hub, it may rust and the gear switch function may no longer function as a result.

- ▶ Never use the pedelec in places where water may get into the hub.

In rare cases, noises may be heard from the rear derailleur in the hub interior after a gear change. This is normal when gears are changed.

- ▶ Never detach the hub yourself. Contact specialist dealer.

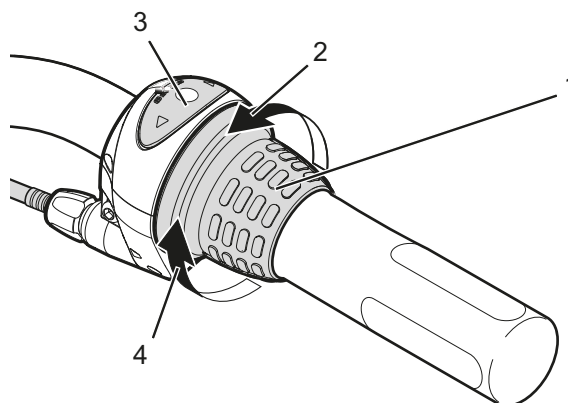


Figure 139: Example: use of SHIMANO Nexus gear shift

- ▶ Turn the twist grip (1) backwards to switch up a gear (4).
- ▶ Turn the twist grip (1) forwards to switch down a gear (2).
- ⇒ The gear shift switches the gear.
- ⇒ The screen display (3) shows the changed gear.

6.21.3 Using eShift

eShift refers to the integration of electronic gear shift systems into the electric drive system.

6.21.3.1 eShift with SHIMANO DI2 automatic hub gears

Only applies to pedelecs with this equipment

The automatic SHIMANO DI2 hub gear can be used in manual or automatic mode. Use the shifter to change gears in manual mode. In automatic mode, the shift system changes gear automatically depending on the speed, pedalling power and pedalling frequency. You will find how to switch from automatic to manual mode, depending on the shifter used, described in your operating instructions on the on-board computer. If you use the shifter when in automatic mode, the gear system will change to the next gear and it will remain in automatic mode. Manual gear changes in automatic mode influence shift behaviour in the gear system and adjust gear changes to riding performance. If the system is switched on for the first time when a new, unused wheel is used, the system will learn the gears first. To do so, the automatic system changes to the highest/most difficult gear and then switches through all gears during the first ride. The new gear is shown briefly on the on-board computer each time it is changed.

Since the motor detects the gear shift and consequently reduces motor assistance briefly, it is possible to switch gears under load or on hills. If the pedelec is brought to a halt from a speed greater than 10 km/h, the system can automatically switch back to a pre-set START GEAR.

- ▶ Set the START GEAR in the system settings if necessary.

6.21.3.2 eShift with manual SHIMANO DI2 hub gears

Only applies to pedelecs with this equipment

The new gear is shown briefly on the on-board computer each time it is changed.

Since the motor detects the gear shift and consequently reduces motor assistance briefly, it is possible to switch gears under load or on hills.

If the pedelec is brought to a halt from a speed greater than 10 km/h, the system can automatically switch back to a pre-set START GEAR.

- ▶ Set the START GEAR in the system settings if necessary.

6.21.3.3 eShift with SHIMANO DI2 automatic hub gears

Only applies to pedelecs with this equipment

Since the motor detects the gear shift and consequently reduces motor assistance briefly, it is possible to switch gears under load or on hills.

- ⇒ The new gear is shown briefly on the on-board computer each time it is changed.

6.21.4 Using an ENVIOLLO gear shift gear

Only applies to pedelecs with this equipment

The selection of the appropriate gear is a prerequisite for a physically comfortable ride and making sure that the electric drive system functions properly. The ideal pedalling frequency is between 70 and 80 revolutions per minute.

- ▶ Stop pedalling briefly when changing gears. This makes it easier to switch gears and reduces wear on the drivetrain.

CAUTION

Crash caused by incorrect use

If the rider applies too much pressure on the pedals during a gear change and activates the shifter or changes several gears at a time, their feet may slip from the pedals. This may cause a crash or flip-over with injuries.

Switching down several gears to a low gear may cause the twist grip outer sleeve to suddenly come off. This will not have an adverse effect on the twist grip's correct functioning since the outer guide returns to its original position after the gear change is complete.

- ▶ Apply little pressure on the pedals while changing gears.
- ▶ Never change more than one gear at a time.

Notice

The interior hub is not completely waterproof. If water gets into the hub, it may rust and the gear switch function may no longer function as a result.

- ▶ Never use the pedelec in places where water may get into the hub.
- ▶ Never detach the hub yourself. Contact specialist dealer.

The hub cannot be switched through its entire transmission range when stationary. As a general rule, 50–70% of the transmission range can be used when switched to stationary. The remaining part of the transmission range can be adjusted when riding.

The automatic ENVIOLLO gear shift includes a twist grip with an indicator.

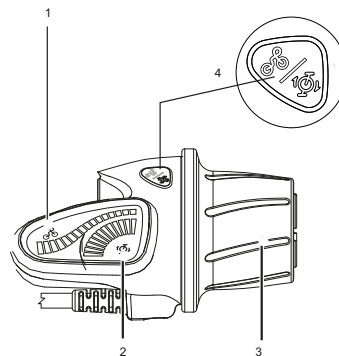


Figure 140: ENVIOLLO twist grip with indicator

- 1 Manual gear shift indicator
- 2 Automatic gear shift indicator
- 3 Twist grip
- 4 Mode button

6.21.4.1 Selecting automatic or manual shift

The gear shift can be used manually or in automatic mode.

- ▶ Press the **mode button**.

⇒ The gear shift switches between the automatic and manual gear option.

6.21.5 Switching gear in automatic mode

In automatic mode, the system automatically adjusts transmission to the desired pedalling frequency.

[Section 6.13.14.5](#) describes how to determine the pedalling frequency.

6.21.5.1 Switching gear manually

Changing down

Switch to a low transmission ratio for setting off or driving uphill.

► Turn the twist grip backwards.

⇒ A hill is shown on the display.

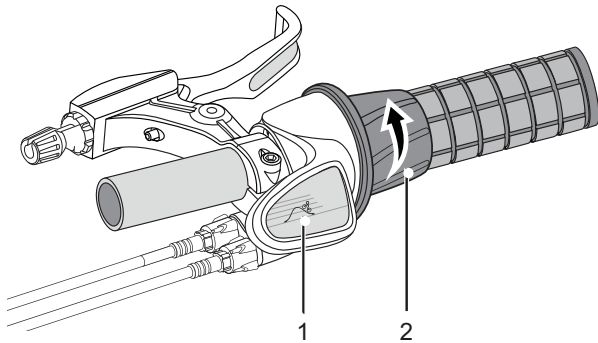


Figure 141: Hill display (1) when changing down (2)

Change up

Switch to a high transmission ratio for higher speeds.

► Turn the twist grip forwards.

⇒ Flat terrain is shown on the display.

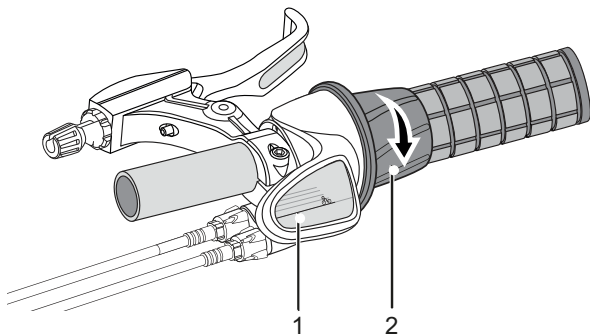


Figure 142: Flat terrain display (1) when changing up (2)

6.21.6 Using a ROHLOFF gear shift

Only applies to pedelecs with this equipment

Pedal 50 to 80 times to change gears.

- ▶ Avoid high stress loads on the crank during a gear change.
- ▶ Switch gear back in good time, e.g. before inclines.

6.21.6.1 Switching gears individually

The rider needs to press buttons on the ROHLOFF E-14 handlebar switch unit to change gears in the ROHLOFF E-14.

There are three buttons on the ROHLOFF E-14 handlebar switch unit:



Figure 143: ROHLOFF E-14 handlebar buttons

- | | |
|---|---------------------------|
| 1 | Plus button (gear shift) |
| 2 | M-button |
| 3 | Minus button (gear shift) |

- ▶ Use the **plus button (gear shift)** shift gear upwards (switch towards gear 14).
 - ▶ Use the **minus button (gear shift)** to shift gear downwards (switch towards gear 1).
- ⇒ The ROHLOFF E-14 gear shift unit shifts up a gear up or down a gear immediately after the first click of the button.

6.21.6.2 Switching through several gears at the same time

! WARNING

Risk of a crash due to switching accidentally

The multi-shift function allows the ROHLOFF E-14 gear shift unit to switch very quickly through low gears. This means pedalling resistance is reduced considerably. This can cause the rider to lose their balance, possibly resulting in a fall.

- ▶ Never leave your finger on the **plus or minus button (gear shift)** while riding as the multi-shift function may be activated accidentally.
-
- ▶ Keep the **plus button (gear shift)** pressed down or
 - ▶ Keep the **minus button (gear shift)** pressed down.
- ⇒ The ROHLOFF E-14 gear shift unit will shift one gear first. The gears are then switched automatically in increments of three until the 14th gear is reached or three gears down until the 1st gear is reached.
- ⇒ There is a pause of half a second each time between the individual groups of increments.

6.21.6.3 Adjusting the start gear

The start gear can be set between gear 1 and gear 9.

- 1 Open <SETTINGS>.
 - 2 Open the <MY EBIKE> menu item.
 - 3 Open the <ESHIFT> sub-menu item.
 - 4 Open <eShift (ROHLOFF)>.
- ⇒ If the start gear is already activated, it is displayed on the on-board computer.
- 5 Enter the required start gear.
 - 6 Save.
- ⇒ If a start gear is set, the Start gear function (auto-downshift) is activated automatically.
- ⇒ If no start gear is set, the function is automatically deactivated.

6.22 Folding

Notice

- ▶ Never crush or bend Bowden cables, electric cables or brake cables when folding.

6.22.1 Folding the pedelec

Only applies to pedelecs with this equipment

The pedelec is folded in eight steps.

- 1 Switch off electric drive system (see [Section 6.17.2](#)).
- 2 Lower kickstand (see [Section 6.23](#)).
- 3 Remove on-board computer (see [Section 6.18.1.1](#)).
- 4 Take out battery (see [Section 6.16.1.1](#), [6.16.2.1](#) or [6.16.3.1](#)).
- 5 Fold pedal up (see [Section 6.22.1.1](#)).
- 6 Fold the stem up (see [Section 6.22.1.2](#) or [6.22.1.3](#)).
- 7 Push in seat post (see [Section 6.22.1.4](#)).
- 8 Fold the frame up (see [Section 6.22.1.5](#)).

6.22.1.1 Folding up the pedal

- 1 Push the pedal against the pedal crank with the foot.

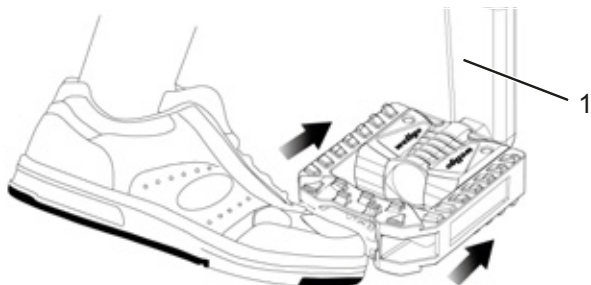


Figure 144: Pushing the pedal against the pedal crank (1)

- 2 Fold the pedal against the pedal crank.

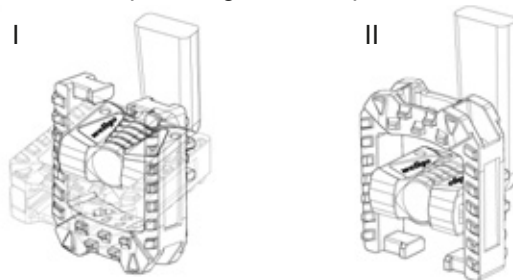


Figure 145: Folding the pedal up (I) or down (II)

6.22.1.2 Folding up the stem, version I

Only applies to pedelecs with this equipment

- 1 Open the clamping lever on the stem quick release.
 - 2 Pull the locking lever on the stem upwards while swivelling it 90° to the right or the left.
- ⇒ You feel the handlebars click into place.
- 3 Push in handlebars.
 - 4 Close clamping lever on the stem quick release.



Figure 146: Opened clamping lever on the stem quick release (3) on the stem (2), version I, with locking lever on the stem (1)

6.22.1.3 Folding up the stem, version II

Only applies to pedelecs with this equipment

- 1 Open the clamping lever on the stem quick release.
- 2 Push the unlocking knob.
- 3 Pivot the handlebars 90° to the right or left.
⇒ You feel the handlebars click into place.
- 4 Close the clamping lever on the stem quick release.



Figure 147: Stem, version II with clamping lever on the stem quick release (1) and unlocking knob (2)

6.22.1.4 Pushing in the seat post

- 1 Open the clamping lever for the quick release on the seat post.
- 2 Push in the saddle to the minimum position.
- 3 Close the clamping lever for the quick release on the seat post.

6.22.1.5 Folding up the frame

- 1 Pivot the frame locking lever upwards.
⇒ The frame clamping lever can be opened freely.
- 2 Open the frame clamping lever.
- 3 Pivot in the frame as far as it will go.

CAUTION

Crash caused by using the opened locking lever incorrectly

The frame will suddenly fold together while the cyclist is riding if the locking lever is open. This will cause a crash with serious injuries.

- ▶ Only use the pedelec with the locking lever closed.



Figure 148: Closed (1) and opened (2) frame locking lever

6.22.2 Preparing the bicycle so that it is ready to ride again

The bicycle is prepared so that it is ready to ride again in eight steps.

- 1 Use your foot to lower kickstand completely before parking.
- 2 Fold out frame (see [Section 6.22.2.1](#)).
- 3 Adjust the stem (see [Section 6.6.3](#)).
- 4 Adjust the saddle (see [Section 6.6.1](#)).
- 5 Fold out pedal (see [Section 6.22.2.2](#)).
- 6 Take out battery (see [Section 6.16.1.2](#), [6.16.2.2](#) or [6.16.3.2](#)).
- 7 Attach on-board computer (see [Section 6.18.1.2](#)).
- 8 Switch on the electric drive system (see [Section 6.17.1](#)).

6.22.2.1 Folding out the frame

- 1 Completely fold out the frame.
 - 2 Close the frame clamping lever.
- ⇒ The frame clamping lever rests on the limit stop. The frame locking lever holds the frame clamping lever. The frame clamping lever is closed.

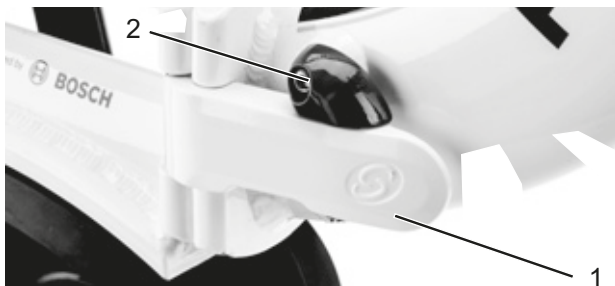


Figure 149: Closed frame clamping lever (1) and closed frame locking lever (2)

6.22.2.2 Folding out the pedal

- 1 Push the pedal against the pedal crank with the foot from the front.

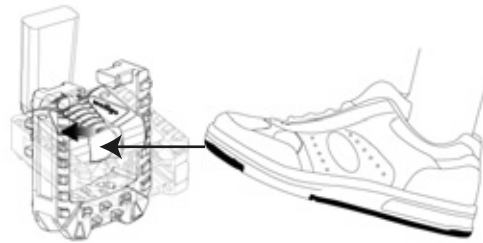


Figure 150: Pushing the pedal against the pedal crank (1)

- 2 Use the foot to fold the pedal up or down.

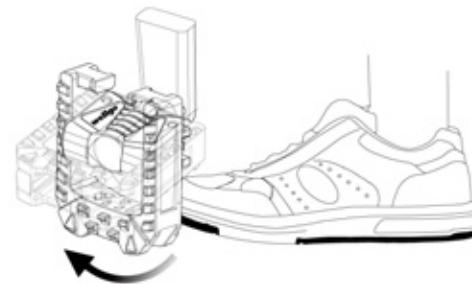


Figure 151: Folding up the pedal

6.23 Parking

Notice

Heat or direct sunlight can cause the *tyre pressure* to increase above the permitted maximum pressure. This can destroy the *tyres*.

- ▶ Never park the pedelec in the sun.
- ▶ On hot days, regularly check the *tyre pressure* and adjust it as necessary.

Moisture penetrating at low temperatures may impair individual functions due to the open structural design.

- ▶ Always keep the pedelec dry and free from frost.
- ▶ If the pedelec is used at temperatures below 3 °C, the specialist dealer must perform an inspection beforehand and prepared it for winter use.

The pedelec's force of weight may cause the kickstand to sink into soft ground, possibly causing the pedelec to topple over as a result.

- ▶ The pedelec must be parked on firm, level ground only.

- 1 Switch off drive system (see [Section 6.17.2](#)).
- 2 After getting off, use your foot to lower the kickstand completely before parking. Ensure that it is stable.
- 3 Park the pedelec carefully and check that it is stable.
- 4 Protect saddle with saddle cover if you park the pedelec outside.
- 5 Lock the pedelec with the bicycle lock.

- 6 Remove the on-board computer (see [Section 6.18.1.1](#)), battery (see [Section 6.16.1.1](#), [6.16.2.1](#) or [6.16.3.1](#)) and mobile phone to protect against theft.
- 7 Clean and service pedelec after every ride; see [Section 7.2](#).

Check list after each ride

Cleaning		
<input type="checkbox"/>	Lights and reflectors	See Section 7.2.5
<input type="checkbox"/>	Brake	See Section 7.2.5
<input type="checkbox"/>	Suspension fork	See Section 7.2.1
<input type="checkbox"/>	Suspension seat post	See Section 7.2.6
<input type="checkbox"/>	Rear frame damper	See Section 7.2.7
<input type="checkbox"/>	Pedal	See Section 7.2.4
Care for		
<input type="checkbox"/>	Suspension fork	See Section 3

7 Cleaning, servicing and maintenance

- Clean, service and maintain pedelec as indicated on check list.
Complying with these measures is the only way to reduce wear on components, increase the operating hours and guarantee safety.

Check list before each ride	
<input type="checkbox"/>	Check everything is sufficiently clean see Section 7.2
<input type="checkbox"/>	Check guards see Section 7.1.1
<input type="checkbox"/>	Check battery to ensure it is firmly in place See Section 6.7.3
<input type="checkbox"/>	Check lights see Section 7.1.13
<input type="checkbox"/>	Check brake see Section 7.1.14
<input type="checkbox"/>	Check suspension seat post see Section 7.1.9
<input type="checkbox"/>	Check pannier rack see Section 7.1.5
<input type="checkbox"/>	Check bell see Section 7.1.10
<input type="checkbox"/>	Check handles see Section 7.1.11
<input type="checkbox"/>	Check rear frame damper see Section 7.1.4
<input type="checkbox"/>	Check wheel concentricity see Section 7.1.7
<input type="checkbox"/>	Check frame see Section 7.1.2
<input type="checkbox"/>	Check quick releases see Section 7.1.8
<input type="checkbox"/>	Check guards see Section 7.1.6
<input type="checkbox"/>	Check USB cover see Section 7.1.12

Check list after each ride	
<input type="checkbox"/>	Clean lights see Section 7.2.1
<input type="checkbox"/>	Clean reflectors see Section 7.2.1
<input type="checkbox"/>	Clean brake see Section 7.2.5
<input type="checkbox"/>	Clean suspension fork see Section 7.2.2
<input type="checkbox"/>	Care for suspension fork see Section 3
<input type="checkbox"/>	Clean suspension seat post see Section 7.2.6
<input type="checkbox"/>	Clean rear frame damper see Section 7.2.7
<input type="checkbox"/>	Clean the pedals see Section 7.2.4

Check list for weekly tasks	
<input type="checkbox"/>	Clean chain see Section 7.3.18
<input type="checkbox"/>	City, folding, cargo and children's bikes and bicycles for young adults When dry: every 10 days In wet conditions: every 2–6 days
<input type="checkbox"/>	Trekking and racing bikes When dry: every 140–200 km In wet conditions: every 100 km
<input type="checkbox"/>	Mountain bikes When dry: every 60–100 km In wet conditions: after every ride
<input type="checkbox"/>	Belt (every 250–300 km) see Section 7.3.17
<input type="checkbox"/>	Care for chain. See Section 7.4.16 and Section 7.4.16.1
<input type="checkbox"/>	City, folding, cargo and children's bikes and bicycles for young adults When dry: every 10 days In wet conditions: every 2–6 days
<input type="checkbox"/>	Trekking and racing bikes When dry: every 140–200 km In wet conditions: every 100 km
<input type="checkbox"/>	Mountain bikes When dry: every 60–100 km In wet conditions: maintain every time
<input type="checkbox"/>	Maintain all-round chain guard. see Section 7.4.16.1
<input type="checkbox"/>	Check tyre pressure (at least once a week) see Section 7.5.1.1
<input type="checkbox"/>	Check tyres (every 10 days) see Section 7.5.1.2
<input type="checkbox"/>	Eightpins seat post Refill oil (every 20 hours) see Section 7.4.18

Check list for monthly tasks	
<input type="checkbox"/>	Cleaning the battery see Section 7.3.2
<input type="checkbox"/>	Clean control panel see Section 7.3.1
<input type="checkbox"/>	Clean on-board computer see Section 7.3.1
<input type="checkbox"/>	Check disc brake linings once a month or after braking 1,000 times see Section 7.5.2.6
<input type="checkbox"/>	Check rim brake brake linings (once a month or after braking 3000 times) see Section 7.5.1.3
<input type="checkbox"/>	Check the rim brake surface. see Section 7.5.2.6
<input type="checkbox"/>	Clean brake lever see Section 7.3.15.1
<input type="checkbox"/>	Clean brake disc see Section 7.3.16
<input type="checkbox"/>	Check brake disc see Section 7.5.2.4
<input type="checkbox"/>	Check brake Bowden cables. see Section 7.5.2.3
<input type="checkbox"/>	Clean pannier rack see Section 7.3.4
<input type="checkbox"/>	Clean handles see Section 7.3.7
<input type="checkbox"/>	Care for handles see Section 7.4.8
<input type="checkbox"/>	Check hand brake see Section 7.5.2.1
<input type="checkbox"/>	Check hydraulic system see Section 7.5.2.2
<input type="checkbox"/>	Clean cassette see Section 7.3.14
<input type="checkbox"/>	Clean chain and all-round chain guard see Section 7.3.18.1
<input type="checkbox"/>	Clean chain wheels see Section 7.3.14
<input type="checkbox"/>	Clean leather handles see Section 7.3.7.1
<input type="checkbox"/>	Care for leather handles see Section 7.4.8.2
<input type="checkbox"/>	Clean the leather saddle see Section 7.3.9.1
<input type="checkbox"/>	Care for leather saddle see Section 7.4.10
<input type="checkbox"/>	Clean handlebars see Section 7.3.6
<input type="checkbox"/>	Cleaning the motor see Section 7.3.3

Check list for monthly tasks	
<input type="checkbox"/>	Clean hub see Section 7.3.12
<input type="checkbox"/>	Cleaning the frame see Section 7.3.4
<input type="checkbox"/>	Clean tyres see Section 7.3.10
<input type="checkbox"/>	Check back-pedal brake see Section 7.5.2.5
<input type="checkbox"/>	Clean saddle see Section 7.3.9
<input type="checkbox"/>	Clean seat post see Section 7.3.8
<input type="checkbox"/>	Care for seat post see Section 7.4.9
<input type="checkbox"/>	Clean shifter see Section 7.3.13.1
<input type="checkbox"/>	Cleaning gear shift see Section 7.3.13
<input type="checkbox"/>	Clean shift cables see Section 7.3.13
<input type="checkbox"/>	Check disc brake see Section 7.5.2.4
<input type="checkbox"/>	Clean mudguard see Section 7.3.4
<input type="checkbox"/>	Clean kickstand see Section 7.3.4
<input type="checkbox"/>	Clean spokes and spoke nipples see Section 7.3.11
<input type="checkbox"/>	Care for spoke nipples see Section 7.4.12
<input type="checkbox"/>	Clean rigid fork see Section 7.3.4
<input type="checkbox"/>	Clean transmission see Section 7.3.13
<input type="checkbox"/>	Clean front derailleur see Section 7.3.14
<input type="checkbox"/>	Clean stem see Section 7.3.5

Check list for tasks every three months	
<input type="checkbox"/>	Check brake pressure point see Section 7.5.2.1
<input type="checkbox"/>	Check rim brake (100 hours trip time or every 2,000 km) see Section 7.5.2.6
<input type="checkbox"/>	Check spokes see Section 7.5.1.3

Check list for tasks to do every six months (or every 1,000 km)	
<input type="checkbox"/>	Check Bowden cables gear shift see Section 7.5.10.2
<input type="checkbox"/>	Care for brake lever see Section 7.4.17.1
<input type="checkbox"/>	Care for carbon seat post see Section 7.4.9.2
<input type="checkbox"/>	Check electric cables in gear shift see Section 7.5.10.1
<input type="checkbox"/>	Care for suspension seat post see Section 7.4.9.1
<input type="checkbox"/>	Care for rims see Section 7.4.13
<input type="checkbox"/>	Check rims see Section 7.5.1.3
<input type="checkbox"/>	Check rim hooks see Section 7.5.1.3
<input type="checkbox"/>	Care for fork see Section 7.4.2
<input type="checkbox"/>	Check gear shift see Section 7.5.10
<input type="checkbox"/>	Care for pannier rack see Section 7.4.3
<input type="checkbox"/>	Check chain see Section 7.5.8
<input type="checkbox"/>	Check derailleur gears See Section 7.5.9.1 and Section 7.5.10.3
<input type="checkbox"/>	Check chain tension see Section 7.5.9
<input type="checkbox"/>	Check wheel see Section 7.5.1
<input type="checkbox"/>	Care for handlebars see Section 7.4.7
<input type="checkbox"/>	Check handlebars see Section 7.5.5
<input type="checkbox"/>	Check light see Section 7.5.3
<input type="checkbox"/>	Care for hub see Section 7.4.11
<input type="checkbox"/>	Check hub gear see Section 7.5.9.2
<input type="checkbox"/>	Check nipple holes see Section 7.5.1.4
<input type="checkbox"/>	Care for pedals see Section 7.4.15
<input type="checkbox"/>	Check pedal see Section 7.5.7
<input type="checkbox"/>	Care for frame see Section 7.4.1
<input type="checkbox"/>	Check belt tension see Section 7.5.9
<input type="checkbox"/>	Check saddle see Section 7.5.6
<input type="checkbox"/>	Care for shifter see Section 7.4.14.2
<input type="checkbox"/>	Care for rear derailleur articulated shaft see Section 7.4.14.1
<input type="checkbox"/>	Care for rear derailleur jockey wheels see Section 7.4.14.1
<input type="checkbox"/>	Care for kickstand see Section 7.4.5
<input type="checkbox"/>	Check kickstand stability see Section 7.5.15

Check list for tasks to do every six months (or every 1,000 km)	
<input type="checkbox"/>	Check steering headset see Section 8.5.6
<input type="checkbox"/>	Servicing the stem see Section 7.4.6
<input type="checkbox"/>	Checking the stem see Section 7.5.4

Yearly or every 2,000 km

<input type="checkbox"/>	Adjust hub with cone bearing see Section 8.5.6
<input type="checkbox"/>	Check nipple well (every 1,000 hours or every 2,000 km) see Section 7.5.1.5

 **WARNING**
Crash caused by brake failure

Oil or lubricant on the brake disc in a disc brake or on the rim of a rim brake can cause the brake to fail completely. This may cause a crash with serious injuries.

- ▶ Never allow oil or lubricant to come into contact with the brake disc or brake linings or on the rim of a rim brake.
- ▶ If the brake linings have come into contact with oil or lubricant, contact specialist dealer to have the components cleaned or replaced.
- ▶ Apply the brakes a few times to test them after cleaning, servicing or repair.

The brake system is not designed for use on a pedelec which is placed on its side or turned upside down. The brake may not function correctly as a result. This can cause a crash, which may result in injuries.

- ▶ If the pedelec is placed on its side or turned upside down, apply the brakes a couple of times before setting off to ensure they work as normal.

The brake seals are unable to withstand high pressures. Damaged brakes can fail and cause an accident with injury.

- ▶ Never clean the pedelec with a pressure washer or compressed air.

Take great care when using a hosepipe. Never point the water jet directly at the seal section.

 **CAUTION**
Crash and falling caused by unintentional activation

There is a risk of injury if the drive system is activated unintentionally.

Remove the battery before cleaning.

Notice

Water may enter the inside of the bearings if you use a steam jet. This dilutes the lubricant inside, the friction increases and, as a result, the bearings are permanently damaged in the long term. Water may also penetrate the electric components and damage them permanently.

- ▶ Never clean pedelec with a pressure washer, water jet or compressed air.

Greased parts, such as the seat post, the handlebars or the stem, may no longer be safely and reliably clamped.

- ▶ Never apply grease or oil to parts which are clamped.

Harsh cleaning agents such as acetone, methylene and trichloroethylene and solvents such as thinners, alcohol and corrosion protection can attack pedelec components and damage them permanently.

- ▶ Use approved bicycle or pedelec cleaning and care products only.

7.1 Before each ride

Complying with these cleaning instructions is the only way to reduce wear on components, increase the operating hours and guarantee safety.

7.1.1 Checking the guards

The chain or belt guards, mudguards or the motor cover can break off and go missing when the pedelec is transported or parked outside.

- ▶ Check that all guards are in place.

7.1.2 Checking the frame

- ▶ Check frame for cracks, warping and damage to the paintwork.
- ▶ If there are any cracks, warping or damage to the paintwork, remove the pedelec from service. Contact specialist dealer.

7.1.3 Checking the fork

- ▶ Check fork for cracks, warping, tarnished components, leaked oil and damage to the paintwork. Also look at hidden parts on the underside.
- ⇒ If there are any cracks, warping, tarnished components, leaked oil or damage to the paintwork, remove the pedelec from service. Contact specialist dealer.

7.1.4 Checking the rear frame damper

- ▶ Check rear frame damper for cracks, warping, tarnished components, leaked oil and damage to the paintwork. Also look at hidden parts on the underside.
- ⇒ If there are any cracks, warping, tarnished components, leaked oil or damage to the paintwork, remove the pedelec from service. Contact specialist dealer.

7.1.5 Checking the pannier rack

- 1 Hold onto pedelec by its frame. Hold onto pannier rack with the other hand.
- 2 Move the pannier rack backwards and forwards to check that all screw connections are firmly in place.
 - ⇒ Tighten loose screws.
 - ⇒ Attach loose baskets permanently with a basket bracket or cable ties.

7.1.6 Checking the guards

- 1 Hold onto pedelec by its frame. Hold onto mudguard rack with the other hand.
- 2 Move the mudguard backwards and forwards to check that all screw connections are firmly in place.
 - ⇒ Tighten loose screws.

7.1.7 Checking wheel concentricity

- ▶ Lift the front and rear wheels one after the other. and spin each wheel when lifted.
- ⇒ If the wheel is loose or is crooked when it turns, take pedelec out of service. Contact specialist dealer.

7.1.8 Checking the quick releases

- ▶ Check quick releases to ensure that all quick releases are firmly in their fully closed end position.
 - ⇒ If a quick release is not firmly in its closed end position, open quick release and place in its end position.
 - ⇒ If the quick release cannot be firmly placed in its end position, take pedelec out of service. Contact specialist dealer.

7.1.9 Checking the suspension seat post

- ▶ Deflect and let the suspension seat post rebound.
 - ⇒ If you hear unusual noises when the suspension seat post deflects and rebounds, or it yields without any resistance, take pedelec out of service. Contact specialist dealer.

7.1.10 Checking the bell

- 1 Press the bell button downwards.
 - 2 Let button spring back.
- ⇒ If you do not hear a clear, distinct ring of the bell, replace bell. Contact specialist dealer.

7.1.11 Checking the handles

- ▶ Check the handles are firmly in place.
- ⇒ Screw loose handles firmly into place.

7.1.12 Checking the USB cover

- ⇒ If featured, check the position of the *cover on the USB port* on a regular basis and adjust if necessary.

7.1.13 Checking the lighting

- 1 Switch light on.
 - 2 Check that the front and rear lights come on.
- ⇒ If the front and rear lights do not come on, take pedelec out of service. Contact specialist dealer.

7.1.14 Checking the brake

- 1 Pull both brake levers when stationary.
 - 2 Push the pedals.
- ⇒ If no resistance is generated in the usual brake lever position, take pedelec out of service. Contact specialist dealer.
- ⇒ If the brake is losing fluid, take pedelec out of service. Contact specialist dealer.

7.2 After each ride

Complying with these cleaning instructions is the only way to reduce wear on components, increase the operating hours and guarantee safety.

The following items should be ready for use to clean the pedelec after each ride:



Tool		Cleaning agent	
 Cloth	 Bucket	 Water	 Dish-washing liquid
 Brush	 Fork oil		

Table 60: Required tools and cleaning agents after each ride

7.2.1 Cleaning the lights and reflectors



- 1 Clean front light, rear light and reflectors with a damp cloth.

7.2.2 Cleaning the suspension fork



- 1 Remove dirt and deposits from the stanchions and deflector seals with a damp cloth. Check the stanchions for dents, scratches, staining or leaking oil.
- 2 Lubricate the dust seals and stanchions with a few drops of silicone spray.
- 3 Care for the suspension fork after cleaning.

7.2.3 Caring for the suspension fork



- ▶ Treat dust seals with fork oil.

7.2.4 Cleaning the pedals



- ▶ Clean pedals with a brush and soapy water.

7.2.5 Cleaning the brake



- ▶ Clean dirt on the rim and brake components with a slightly dampened cloth.

7.2.6 Cleaning the suspension seat post



- ▶ Clean dirt on the articulated joints with a slightly dampened cloth immediately after a ride.

7.2.7 Cleaning the rear frame damper



- ▶ Clean dirt on the articulated joints with a slightly dampened cloth immediately after a ride.

7.3 Basic cleaning

Complying with these basic cleaning instructions is the only way to reduce wear on components, increase the operating hours and guarantee safety.

The following are required for basic cleaning:

Tool		Cleaning agent	
			
Gloves	Toothbrush	Water	Lubricant
			
Cloth	Paintbrush	Dish-washing liquid	Brake cleaner
			
Sponge	Watering can	Degreaser	Leather cleaner
			
Brushes	Bucket		

Table 61: Required tools and cleaning agents for basic cleaning

- ✓ Remove battery and on-board computer before thorough cleaning.

7.3.1 On-board computer and control panel



Notice

If water enters the on-board computer, it will be permanently damaged.

- ▶ Never immerse the on-board computer in water.
 - ▶ Never use a cleaning agent.
-
- ▶ Carefully clean the on-board computer and control panel with a soft, damp cloth.

7.3.2 Rechargeable battery



CAUTION

Risk of fire and explosion due to penetration by water

The battery is only protected from simple spray water. Penetration by water can cause a short circuit. The battery may self-ignite and explode.

- ▶ Keep contacts dry and clean.
- ▶ Never immerse the battery in water.

Notice

- ▶ Never use a cleaning agent.

- 1 Clean the battery electrical connections with a dry cloth or paintbrush only.
- 2 Wipe off the decorative sides with a damp cloth.

7.3.3 Motor



Notice

If water enters the motor, it will be permanently damaged.

- ▶ Never open the motor.
 - ▶ Never immerse the motor in water.
 - ▶ Never use cleaning agents.
-
- ▶ Carefully clean the motor on the outside with a soft, damp cloth.

7.3.4 Frame, fork, pannier rack, guards and kickstand



- 1 Soak the components with dish-washing detergent if the dirt is thick and ingrained.
- 2 After leaving it to soak for a short time, remove the dirt and mud with a sponge, brush and toothbrushes.
- 3 Rinse off the components with water from a watering can.
- 4 Wipe away oil stains with a degreaser.

7.3.5 Stem



- 1 Clean stem with a cloth and soapy water.
- 2 Rinse off component with water from a watering can.

7.3.6 Handlebars



- 1 Clean handlebars, including handles and all gears or twist grips, with a cloth and soapy water.
- 2 Rinse off component with water from a watering can.

7.3.7 Handles



- 1 Clean handles with sponge, water and soapy water.
- 2 Rinse off component with water from a watering can.
- 3 Care for rubber handles after cleaning (see [Section 7.4.8](#)).

7.3.7.1 Leather handles



Leather is a natural product and has similar properties to human skin. Regular cleaning and care help to prevent leather dehydrating, fading or becoming brittle or stained.

- 1 Remove dirt with a soft, damp cloth.
- 2 Remove stubborn stains with a leather cleaner.
- 3 Care for leather handles after cleaning (see [Section 7.4.8.2](#)).

7.3.8 Seat post



- 1 Clean seat post with a cloth and soapy water.
- 2 Rinse off component with water from a watering can.
- 3 Wipe away any grease or assembly paste residue with a cloth and degreaser.

7.3.9 Saddle



- 1 Clean the saddle with lukewarm water and a cloth dampened with soapy water.
- 2 Rinse off component with water from a watering can.

7.3.9.1 Leather saddle



Leather is a natural product and has similar properties to human skin. Regular cleaning and care help to prevent leather dehydrating, fading or becoming brittle or stained.

- 1 Remove dirt with a soft, damp cloth.
- 2 Remove stubborn stains with a leather cleaner.
- 3 Care for leather saddle after cleaning (see [Section 7.4.10](#)).

7.3.10 Tyres



- 1 Clean tyres with a sponge, a brush and soap cleaner.
- 2 Rinse off component with water from a watering can.
- 3 Remove any embedded chips and small stones.

7.3.11 Spokes and spoke nipples

- 1 Clean spokes from the inside to the outside with a sponge, brush and soapy water.
- 2 Clean rim with a sponge.
- 3 Rinse off component with water from a watering can.
- 4 Care for spoke nipples after cleaning (see [Section 7.4.12](#)).

7.3.12 Hub



- 1 Put on protective gloves.
- 2 Remove dirt from hub with a sponge and soapy water.
- 3 Rinse off component with water from a watering can.
- 4 Wipe off oily dirt with a degreaser and a cloth.

7.3.13 Switching elements



- 1 Clean gear shift, shift cables and transmission with water, a brush and dish-washing detergent.
- 2 Rinse off component with water from a watering can.

7.3.13.1 Shifter



- ▶ Carefully clean shifter with a damp, soft cloth.

7.3.14 Cassette, chain wheels and front derailleur



- 1 Put on protective gloves.
- 2 Spray the cassette, the chain wheels and the front derailleur with a degreasing agent.
- 3 Clean coarse dirt with a brush after soaking for a short time.
- 4 Wash down all parts with dish-washing detergent and a toothbrush.
- 5 Rinse off component with water from a watering can.

7.3.15 Brake

7.3.15.1 Brake lever



- ▶ Carefully clean the brake levers with a damp, soft cloth.

7.3.16 Brake disc



Notice

- ▶ Protect brake disc against lubricants and grease from hands.

- 1 Put on protective gloves.
- 2 Spray brake disc with brake disc cleaning spray.
- 3 Wipe with a cloth.

7.3.17 Belt



Notice

- ▶ Never use aggressive (acid-based) cleaners, rust removers or degreasers when cleaning the belt.

- 1 Dampen a cloth with soapy water. Place the cloth on the belt.
- 2 Hold and apply slight pressure while slowly turning the rear wheel, so the belt passes through the cloth.

7.3.18 Chain



Notice

- ▶ Never use aggressive (acid-based) cleaners, rust removers or degreasers when cleaning the chain.
- ▶ Never use gun oil or rust remover spray.
- ▶ Never use chain cleaning devices or chain cleaning baths.
- ▶ Have chain with all-round guard cleaned and cared for during maintenance.

- ✓ Place newspaper or paper towels underneath to collect dirt.

- 1 Slightly dampen a brush with dish-washing liquid. Brush both sides of the chain.
- 2 Dampen a cloth with soapy water. Place the cloth on the chain.
- 3 Hold and apply slight pressure while slowly turning the rear wheel, so the chain passes through the cloth.
- 4 Wipe off oily, dirty chains thoroughly with a cloth and degreaser.
- 5 Care for chain after cleaning (see [Section 7.4.16](#)).

7.3.18.1 Chain with all-round chain guard



Notice

The chain guard must be removed before cleaning. Contact specialist dealer.

- ▶ Clean water hole on the chain guard lower surface.
- ▶ Care for chain after cleaning (see [Section 7.4.16.1](#)).

7.4 Servicing

Complying with these servicing instructions is the only way to reduce wear on components, increase the operating hours and guarantee safety.

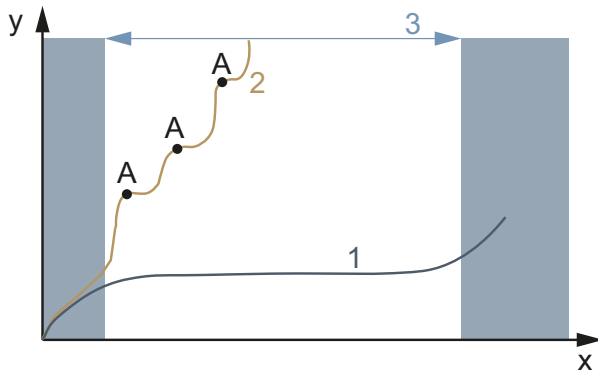


Figure 152: Diagram showing wear, operating hours (x) vs. material erosion (y)

The service life (3) of an optimally serviced drive chain (1) is almost three times as long with lubrication (A) compared to a drive chain (2) lubricated on an irregular basis.

These tools and cleaning agents are required for servicing:












Tool		Cleaning agent	
 Cloth	 Toothbrush	 Frame wax spray	 Silicone or Teflon oil
		 Acid-free lubricating grease	 Fork oil
		 Teflon spray	 Spray oil
		 Chain oil	 Leather care product

Table 62: Required tools and cleaning agents for servicing

7.4.1 Frame



Notice

- ▶ Hard wax polish and protection wax are particularly resistant on gloss paintwork. These car accessory retail products are unsuitable for matt paint finishes.
- ▶ Try wax spray out on a small spot before application.

- 1 Dry frame with a cloth.
- 2 Spray frame with spray wax and leave to dry.
- 3 Wipe away any wax residue with a cloth.

7.4.2 Fork



Notice

- ▶ Hard wax polish and protection wax are particularly resistant on gloss paintwork. These car accessory retail products are unsuitable for matt paint finishes.
- ▶ Try wax spray out on a small spot before application.

- 1 Dry frame with a cloth.
- 2 Spray care oil on frame and leave to dry.
- 3 Wipe away any wax residue with a cloth.

7.4.3 Pannier rack



- 1 Dry pannier rack with a cloth.
- 2 Spray pannier rack with spray wax and leave to dry.
- 3 Wipe pannier rack with a cloth.
- 4 Protect chafing points on panniers with adhesive film. Replace worn adhesive film.
- 5 Care for coil springs with silicone spray or wax spray from time to time.

7.4.4 Mudguard



- ▶ Depending on the mudguard material's requirements, apply hard wax polish, metal polish or plastic care product as per the product instructions.

7.4.5 Servicing the kickstand



- 1 Dry kickstand with a cloth.
- 2 Spray kickstand rack with spray wax and leave to dry.
- 3 Wipe down kickstand with a cloth.
- 4 Lubricate the kickstand joints with spray oil.

7.4.6 Stem



- 1 Spray painted and polished metal surfaces with wax spray and leave to dry.
- 2 Wipe away any wax residue with a cloth.
- 3 Apply silicone or Teflon oil to the stem shaft tube and the quick release lever pivot point with a cloth.
- 4 If you have a Speedlifter Twist, also apply oil to the unlocking bolt using the groove in the Speedlifter body.
- 5 Apply a little acid-free lubricant grease between the stem quick release lever and the sliding piece to reduce the quick release lever operating force.
- 6 If you have a stem with a cone clamp, apply a new protective layer of assembly paste onto the stem and fork steerer contact point once a year.

7.4.7 Handlebars



- 1 Spray painted and polished metal surfaces with wax spray and leave to dry.
- 2 Wipe away any wax residue with a cloth.

7.4.8 Handle

7.4.8.1 Rubber handles

- 1 Apply talcum powder to sticky rubber handles.

Notice

- ▶ Never apply talcum powder to leather or foam handles.

7.4.8.2 Leather handle



Standard leather care products keep leather smooth and resistant, brighten its appearance and improve or replace stain protection.

- 1 Try leather care product out on a less visible spot before use.
- 2 Care for leather handles with a leather care product.

7.4.9 Seat post

- 1 Carefully preserve screw connections with wax spray. In doing so, ensure that no wax is applied to the metal contact surfaces.
- 2 Replace the assembly paste protective layer on the metal contact surfaces on the seat post and seat tube every year.

7.4.9.1 Suspension seat post



- 1 Lubricate articulated joints with spray oil.
- 2 Deflect and let the suspension seat post rebound five times. Remove any surplus lubricant with a clean cloth.

7.4.9.2 Carbon seat post



Notice

If carbon seat posts are used in an aluminium frame without protective assembly paste, rain and puddle water can cause contact corrosion. It may then take a great deal of force to remove the seat post. The carbon seat post may break as a result.

- 1 Take out the carbon seat post.
- 2 Remove old assembly paste with a cloth.
- 3 Apply new assembly paste with a cloth.
- 4 Re-insert the carbon seat post.

7.4.10 Leather saddle



Standard leather care products keep leather smooth and resistant, brighten its appearance and improve or replace stain protection.

- 1 Try leather care product out on a less visible spot before use.
- 2 Care for leather saddle from below with a leather care product. Only care for the top of leather saddles with a leather care product if they are badly worn and dried-out.
- 3 Avoid wearing light-coloured trousers after care due to staining.

7.4.11 Hub



- 1 Apply wax spray especially around the spoke holes. In doing so, ensure that no wax is applied to brake parts.
- 2 Treat rubber seals with a cloth with one or two drops of silicone spray. Never use oil if you have disc brakes.

7.4.12 Spoke nipples



- 1 Apply wax spray onto the spoke nipples from the rim side.
- 2 Treat heavily corroded spoke nipples with a drop of penetrating of special care oil.

7.4.13 Rim



- Care for chrome rims, stainless steel rims and polished aluminium with chrome or metal polish. Never care for the brake surface with polish.

7.4.14 Gear shift

7.4.14.1 Rear derailleur articulated shafts and jockey wheels



- ▶ Treat front and rear derailleur articulated shafts and jockey wheels with Teflon spray.

7.4.14.2 Shifter



Notice

- ▶ Never treat shifters with degreaser or penetrating oil spray.
- ▶ Lubricate articulated joints and mechanical parts which are accessible from outside with a few drops of spray oil or precision mechanics oil.

7.4.15 Pedal



- 1 Treat pedals with spray oil. In doing so, ensure that no lubricant is applied to the pedal surfaces.
- 2 Lubricate seals and mechanical parts sparingly with a few drops of oil.
- 3 Remove any surplus lubricant with a clean cloth.
- 4 Spray metal foot rests with silicone spray.

7.4.16 Caring for the chain



- ✓ Place newspaper or paper towels underneath to collect chain oil.
- 1 Lift rear wheel.
- 2 Turn the crank briskly in an anti-clockwise direction.
- 3 Use slight finger pressure to the chain oil bottle to apply a wafer-thin thread of oil to the chain

links. The faster the crank is turned, the thinner the threads of oil will be.

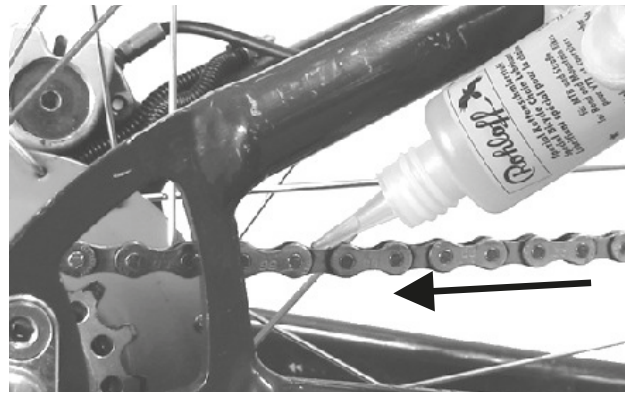


Figure 153: Lubricating the chain

- 4 Remove excessive chain oil with a cloth. If you apply too much oil, it will make the chain all the dirtier at a later point in time.
- 5 Leave chain oil to penetrate into the chain links for a few hours or overnight.

7.4.16.1 Caring for the chain and all-round chain guard



- ✓ Place newspaper or paper towels underneath to collect chain oil.
- 1 Lift rear wheel.
- 2 Turn the crank briskly in an anti-clockwise direction.
- 3 Use slight finger pressure to the chain oil bottle to apply a wafer-thin thread of oil onto the chain links through the oil hole on the upper surface of the chain guard. The faster the crank is turned, the thinner the threads of oil will be.
- 4 Remove excessive chain oil with a cloth. If you apply too much oil, it will make the chain all the dirtier at a later point in time.
- 5 Leave chain oil to penetrate into the chain links for a few hours or overnight.

7.4.17 Caring for the brake

7.4.17.1 Caring for the brake



Notice

- ▶ Never treat brake levers with degreaser or penetrating oil spray.
- ▶ Lubricate articulated joints and mechanical parts which are accessible from outside with a few drops of spray oil or precision mechanics oil.

7.4.18 Lubricating the eightpins seat post tube

- ▶ Use a 2.5 ml syringe to carefully fill eightpins Fluid V3 very slowly into the lubricating nipple on the outer tube.



Figure 154: Lubricating the seat post tube

Notice

- ▶ Fill a maximum of 2.5 ml since otherwise the reservoir inside will overflow and the oil will spill into the frame.

7.5 Maintenance

The following tools are required for maintenance:









	Gloves
	Ring spanners 8 mm, 9 mm, 10 mm, 13 mm, 14 mm and 15 mm
	Torque wrench Working range 5–40 Nm
	by.schulz handlebars: TORX® bits: 4 mm, 5 mm and 6 mm If not: Hexagon bits: 4 mm, 5 mm and 6 mm
	Hexagon socket spanner 2 mm, 2.5 mm, 3 mm, 4 mm, 5 mm, 6 mm and 8 mm
	Spline nut socket T25
	Cross-recess screwdriver
	Slotted-head screwdriver

Table 63: Tools required for maintenance

7.5.1 Wheel

- 1 Hold pedelec.
- 2 Hold onto the front or rear wheel and try to move the wheel sideways. In doing so, check to see if the wheel nuts or quick releases move.
 - ⇒ If the wheel, the wheel nut or quick release moves sideways, take pedelec out of service. Contact specialist dealer.
- 3 Lift pedelec slightly. Turn front or rear wheel. In doing so, check whether the wheel deflects sideways or outwards.
 - ⇒ If the wheel deflects sideways or outwards, take pedelec out of service. Contact specialist dealer.

7.5.1.1 Checking the tyre pressure

Notice

If the tyre pressure is too low in the tyre, the tyre does not achieve its load bearing capacity. The tyre is not stable and may come off the rim.

- ▶ If the tyre pressure is too high, the tyre may burst.

Tyres are wear parts and wear away due to fatigue, storage, environmental influences or mechanical impacts. Only optimum tyre pressure will guarantee effective protection against punctures, lower rolling resistance, a longer service life and greater safety.

Air loss

Even the most airtight tube will lose pressure on a continuous basis since the air pressures in a pedelec tyre are significantly higher and the wall thicknesses significantly finer than in a car tyre. Pressure loss of 1 bar per month can be regarded as normal. During this process, the pressure loss is significantly faster at high pressures and significantly slower at low pressures.

Checking tyre pressure

The permitted pressure range is indicated on the side of the tyre.



Figure 155: Tyre pressure in bar (1) and psi (2)

- ▶ Verify tyre pressure against the value noted in the pedelec pass every 10 days as a minimum.

Dunlop valve

Only applies to pedelecs with this equipment

The tyre pressure cannot be measured on the simple Dunlop valve. The tyre pressure is therefore measured in the filling hose when pumping slowly with the bicycle pump.

✓ It is recommendable to use a bicycle pump with a pressure gauge.

- 1 Unscrew and remove the valve cap.
- 2 Undo the rim nuts.
- 3 Connect the bicycle pump.
- 4 Pump up the tyre slowly and pay attention to the tyre pressure in the process.
- 5 Correct the tyre pressure to meet the specified value in the Pedelec pass.
- 6 If the tyre pressure is too high, unfasten the union nut, let air out and re-tighten the union nut.
- 7 Remove the bicycle pump.
- 8 Screw the valve cap tight.
- 9 Screw the rim nut gently against the rim with the tips of your fingers.

⇒ Correct tyre pressure if necessary (see [Section 6.5.8](#)).

Schrader valve

Only applies to pedelecs with this equipment

✓ It is recommended to use the air pump at a filling station. Older and easy bicycle pumps are unsuitable for filling tyres via a Schrader valve.

- 1 Unscrew and remove the valve cap.
 - 1 Undo the rim nuts.
 - 2 Attach the bicycle pump.
 - 3 Pump up the tyre slowly and pay attention to the tyre pressure in the process.
- ⇒ The tyre pressure has been adjusted as per the specifications.
- 4 Remove the bicycle pump.
 - 5 Screw the valve cap tight.

- 6 Screw the rim nut gently against the rim with the tips of your fingers.

⇒ Correct tyre pressure if necessary (see [Section 6.5.8](#)).

Presta valve

Only applies to pedelecs with this equipment

✓ It is recommendable to use a bicycle pump with a pressure gauge. The operating instructions for the bicycle pump must be adhered to.

- 1 Unscrew and remove the valve cap.
- 2 Open the knurled nut around four turns.
- 3 Carefully apply the bicycle pump so that the valve insert is not bent.
- 4 Pump up the tyre slowly and pay attention to the tyre pressure in the process.
- 5 Correct the tyre pressure as per the specifications on the tyre.
- 6 Remove the bicycle pump.
- 7 Tighten the knurled nut with your fingers.
- 8 Screw the valve cap tight.
- 9 Screw the knurled nut gently against the rim with the tips of your fingers.

⇒ Correct tyre pressure if necessary (see [Section 6.5.8](#)).

7.5.1.2 Checking the tyres

The tread is far less important for bicycle tyres than it is for car tyres, for example. Consequently, tyres can still be used with a worn tread with the exception of tyres on mountain bikes.

- 1 Check the tread wear. The tyre is worn if the anti-puncture protection or the carcass cords are visible.

Since resistance to punctures also depends on the thickness of the tread, it may make sense to change the tyre at an earlier stage.



Figure 156: Tyre without tread which can still be used (1) and tyre with puncture protection showing through (2), which needs to be replaced

- 2 Check the side walls for wear. If there are any cracks or tears, the tyre must be replaced.



Figure 157: Examples of fatigue cracks (1) and ageing cracks (2)

- ⇒ Replacing a wheel requires considerable mechanical expertise. If a tyre is worn, it needs to be replaced at a specialist dealer's.

7.5.1.3 Checking the rims



Crash caused by a worn rim

A worn rim can break and block the wheel. This may cause a crash with serious injuries.

- ▶ Check rim *wear* on a regular basis.
- ▶ Take pedelec out of service if the rim has any cracks or warping. Contact specialist dealer.

Rims are wear parts and wear away due to fatigue, mechanical impacts, environmental influences or due to braking if rim brakes are used.

- ▶ Check the rim well for wear.
 - ⇒ The rims of a rim brake with invisible wear indicator are worn as soon as the wear indicator becomes visible in the area of the rim joint.
 - ⇒ The rims with visible wear indicator are worn as soon as the black, all-round groove on the pad friction surface is no longer visible. We recommend that you also replace the *rims* with every second brake lining replacement.
- ▶ We recommend that you also replace the *rims* at the same time as every second brake lining replacement.

7.5.1.4 Checking the nipple holes

Nipples cause fatigue and stress on the edge of the nipple hole.

- ▶ Check whether there are cracks on the edge of the nipple hole.

If there are cracks on the edge of the nipple hole, contact your specialist dealer.

7.5.1.5 Checking the nipple well

The nipple holes can weaken the tyre bed.

- ▶ Check to see if cracks are emerging from the nipple holes.
 - ⇒ If there are cracks radiating from the nipple hole, contact your specialist dealer.

7.5.1.6 Checking the rim hooks

Mechanical impacts can warp the rim hooks. There is no longer a guarantee that a tyre can be fitted safely if this is the case.

- ▶ Check for twisted rim hooks.
 - ⇒ Replace rims with twisted rim hooks. Never repair the rim with pliers and bend the hook back.

7.5.1.7 Checking the spokes

- ▶ Press spokes slightly together with your thumb and index finger. Check to ensure that the tension is the same for all spokes.
 - ⇒ Contact your specialist dealer if the spokes are loose or are tensioned differently.

7.5.2 Checking the brake system



Crash caused by brake failure

Worn brake discs and brake linings and a lack of hydraulic fluid in the brake line reduce the braking power. This may cause a crash with serious injuries.

- ▶ Check brake disc, brake linings and the hydraulic brake system regularly. Contact specialist dealer.

The maintenance interval for the brake depends on how often it is used and the weather conditions. If the pedelec is used under extreme conditions such as rain, dirt or high mileage, maintenance must be performed more frequently.

7.5.2.1 Checking the hand brake

- 1 Check whether all screws in the handbrake are firmly in place.
 - ⇒ Tighten loose screws.
- 2 Check whether the brake lever is torsionally rigid on the handlebars.
 - ⇒ Tighten loose screws.
- 3 Check that there is a gap of at least 1 cm between the handbrake lever and the handle when the brake lever is fully applied.
 - ⇒ Adjust the grip distance if the gap is too narrow (see [Section 6.5.9.6](#), [Section 6.5.9.7](#) or [Section 6.5.9.8](#)).
- 4 Check the braking effect by pedalling while pulling the brake lever.
 - ⇒ If the braking power is too weak, adjust the brake pressure point (see [Section 6.5.9.9](#)).
 - ⇒ Contact your specialist dealer if the pressure point cannot be reached.

7.5.2.2 Checking the hydraulic system

- 1 Push the brake lever and check whether any brake fluid leaks out of the lines, connections or on the brake linings.
 - ⇒ If any brake fluid leaks from anywhere, take pedelec out of service. Contact specialist dealer.
- 2 Push brake lever and hold several times.
 - ⇒ If you are unable to clearly detect the pressure point and it changes, the brake needs to be bled. Contact specialist dealer.

7.5.2.3 Checking the Bowden cables

- 1 Pull on the brake lever several times. Check whether the Bowden cables get stuck or they make scraping noises.
- 2 Check the physical condition of the Bowden cables for visible damage and check to see if wire strands are broken.
 - ⇒ Have defective Bowden cables replaced. Contact specialist dealer.

7.5.2.4 Checking the disc brake

Only applies to pedelecs with this equipment

Checking the brake linings

- ▶ Check that the brake linings are no less than 1.8 mm wide at any point and there are no less than 2.5 mm between the brake lining and supporting plate.



Figure 158: Checking the brake lining when fitted with the help of the transport safety wear gauge

- 1 Check brake linings for damage and thick dirt.
 - ⇒ Have damaged or very dirty brake linings replaced. Contact specialist dealer.
- 2 Push brake lever and hold.
- 3 In doing so, check whether the transport safety wear gauge can fit between the brake lining supporting plates.
 - ⇒ If the transport safety wear gauge fits between the supporting plates, the brake linings have not reached their wear limit. Contact your specialist dealer if they are worn.

Checking the brake discs

- ✓ Put on gloves as the brake disc is very sharp.
- 1 Take hold of brake disc and joggle it gently to check whether the brake disc is positioned against the wheel free of backlash.
 - 2 Check that the brake linings move uniformly and symmetrically back towards the brake disc when you pull and release the brake lever.
 - ⇒ If the brake disc can be moved or the brake linings move erratically, contact your specialist dealer.
 - 3 Check that the brake disc is no less than 1.8 mm thick at any point.
 - ⇒ If the brake disc is under the wear limit and is less than 1.8 mm thick, the brake disc must be replaced. Contact specialist dealer.

7.5.2.5 Checking the back-pedal brake

Only applies to pedelecs with this equipment

- ✓ There are sharp corners and edges on the back-pedal brake. Wear gloves.
- 1** Hold and check counter support to ensure it is firmly attached to rear frame down tube.
 - ⇒ Tighten screw into the counter support if it is loose.
- 2** Carry out brake test. Listen for noises while doing so.
 - ⇒ If braking with the backpedal makes noises, contact specialist dealer.

7.5.2.6 Checking the rim brake

Only applies to pedelecs with this equipment

Checking the brake linings

- ▶ We recommend that you also replace the *rim*s at the same time as every second brake lining replacement.
- 1 Check whether the brake linings are worn evenly on both sides of the rim.
- 2 Check whether the brake linings are worn to one side.
 - ⇒ If the brake linings are worn unevenly or worn to one side, contact your specialist dealer.
- 3 Check whether the brake lining wear limit has been reached.
 - ⇒ If the brake linings have reached their wear limit, they need to be changed. Contact specialist dealer.
- 4 Check whether the brake linings can be twisted.
 - ⇒ If the brake linings twist, the brake lining bracket is defective and must be replaced. Contact specialist dealer.
- 5 Check that the brake linings move uniformly and symmetrically towards the rim when you pull and release the brake lever.
 - ⇒ If the brake linings move unevenly, contact your specialist dealer.

Checking the rim braking surface for wear

The side wall is more prone to wear in rim brakes. The wear depends on the stress loads during rides. Dirt between the brake lining and rim and strong braking forces can have an impact on the service life.

The rim must be replaced if the wall is less than 0.9 mm thick. If deep grooves are visible, rim hooks will warp towards the outside or the braking power will change, contact your specialist dealer as soon as possible.

- ▶ Replacing a rim requires considerable mechanical expertise. Only a specialist dealer should carry out this task.

7.5.3 Checking the lighting

- 1 Check the cable connections on the front and rear lights for damage and corrosion and ensure they are firmly in position.
- ⇒ If cable connections are damaged or corroded, or are not firmly in positioned. take pedelec out of service. Contact specialist dealer.
- 2 Switch light on.
- 3 Check that the front and rear lights come on.
- ⇒ If the front or rear lights do not come on, take pedelec out of service. Contact specialist dealer.
- 4 Place pedelec 5 m from the wall.
- 5 Stand the pedelec up straight. Hold the handlebars straight with both hands. Do not use the kickstand.

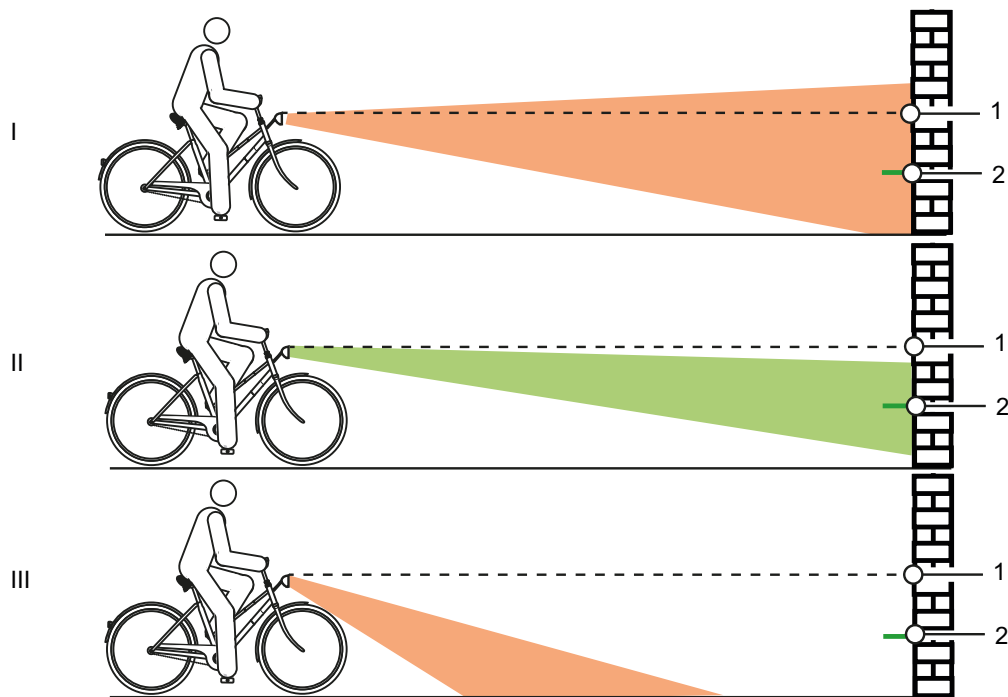


Figure 159: Light positioned too high (1), correctly (2) and too low (3)

- 6 Check the position of the light beam.
- ⇒ If the light is positioned too high or too low, adjust riding light (see [Section 6.5.13](#)).

7.5.4 Checking the stem

- ▶ The stem and quick release system must be inspected at regular intervals. The specialist dealer should adjust them if they require adjustment.
- ▶ If the hexagon socket head screw is also loosened, the headset backlash also needs to be adjusted. Medium-strength thread locker, such as Loctite blue, then needs to be applied to the loosened screws and the screws tightened as per specifications.
- ▶ Check metal contact surfaces on cone, stem clamping screw and fork steerer for corrosion.
- ⇒ Take pedelec out of service if there is any wear or signs of corrosion. Contact specialist dealer.

7.5.5 Check the handlebars

- 1 Take hold of handlebars with both hands on the handles.
 - 2 Move handlebars up and down and press to tilt.
- ⇒ If the handlebars move, contact specialist dealer.
- 3 Place front wheel in position where it can't move sideways (e.g. in a bike stand).
 - 4 Hold handlebars firmly with both hands.
 - 5 Check if the handlebars are able to twist against the front wheel.
- ⇒ If the handlebars can move, contact your specialist dealer.

7.5.6 Checking the saddle

- 1 Hold saddle firmly.
 - 2 Check whether the saddle twists, tilts or can be pushed in one direction or other.
- ⇒ If the saddle twists, tilts or can be pushed in one direction or other, adjust the saddle (see Section xxx).
 - ⇒ Contact your specialist dealer if the saddle cannot be fixed into position.

7.5.7 Checking the seat post

- 1 Take seat post out of the frame.
 - 2 Check seat post for cracks and corrosion.
 - 3 Reinsert seat post.
 - 4 Check pedal.
 - 5 Hold pedal and try to move it sideways toward the inside or outside. In doing so, observe whether the crank arm or bearing move sideways.
- ⇒ If the pedal, crank arm or crank bearing moves sideways, fasten screw on the pedal crank rear.
- 6 Hold pedal and try to move it upwards and downwards vertically. In doing so, observe whether the pedal, crank arm or crank bearing moves vertically.
- ⇒ If the pedal, crank arm or crank bearing moves vertically, fasten screw.

7.5.8 Checking the chain

- ▶ Check chain for rust or warping.
- ⇒ Replace a rusted chain since it will not be able to withstand the tensile loads from the drive. Contact your specialist retailer.

7.5.9 Checking the chain and belt tension

Notice

Excessive chain tension increases wear. If the chain tension is too low, there is a risk that the *chain* will slip off the *chain wheels*.

- ▶ Check the chain tension once a month.

- 7 If a hub gear is fitted, the rear wheel must be pushed backwards and forwards to tighten the chain. Contact specialist dealer.

7.5.9.1 Checking the derailleur gears

The chain is tensioned by the rear derailleur in pedelecs with derailleur gears.

- 1 Place the pedelec on stand.
 - 2 Check to see if the chain is sagging (visual inspection).
 - 3 Gently press the rear derailleur forwards to check whether it moves and whether it goes back into position by itself.
- ⇒ If the chain is sagging or the rear derailleur does not go back into position by itself, contact your specialist dealer.

7.5.9.2 Checking the hub gear

In the case of pedelecs with a hub gear or back-pedal brake, the chain or the belt is tensioned by a eccentric bearing in the bottom bracket axle. Special tools and specialist knowledge are required to tension the chain. Contact specialist dealer.

- ✓ Remove the chain guard on pedelecs with a circumferential chain guard.
- 1 Place the pedelec on stand.
 - 2 Check the chain and belt tension in three or four positions, turning the crank a full revolution.

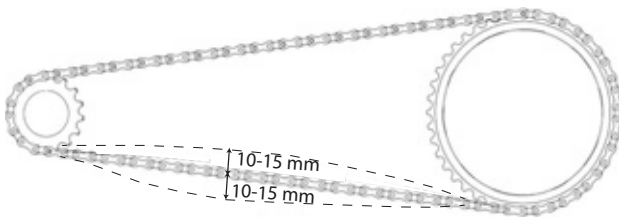


Figure 160: Checking the chain tension

- ⇒ If the chain or the belt can be pushed more than 2 cm, the chain will need to be re-tensioned. Contact specialist dealer.
- ⇒ If the chain or belt can only be pushed up and down less than 1 cm, you will need to the chain or belt slightly. Contact specialist dealer.
- ⇒ The ideal chain and belt tension has been achieved if the chain can be pushed between a maximum of 10 and 15 mm in the middle between the pinion and the toothed wheel. The crank must also turn without resistance.

7.5.10 Checking the gear shift

- 1 Check whether all gear shift components are free of damage.
- 2 Contact your specialist dealer if components are damaged.
- 3 Place the pedelec on stand.
- 4 Turn the pedal crank clockwise.
- 5 Switch through all speeds.
- 6 Check that pedelec can switch through all speeds without making unusual noises.
- 7 Adjust the gear shift if gears can not be changed correctly.

7.5.10.1 Electric gear shift

- 1 Check the cable connections for damage and corrosion and ensure they are firmly in position.
- ⇒ If cable connections are loose, damaged or corroded, contact your specialist dealer.

7.5.10.2 Mechanical gear shift

- 1 Change gear a number of times. Check whether the Bowden cables get stuck or they make scraping noises.
 - 2 Check the physical condition of the Bowden cables for visible damage and check to see if wire strands are broken.
- ⇒ Have defective Bowden cables replaced. Contact specialist dealer.

7.5.10.3 Checking the derailleur gears

- 1 Check that there is clearance between the chain tensioner and spokes.
- ⇒ If there is no clearance or the chain scrapes against the spokes or tyres, contact your specialist dealer.
- 2 Check that there is clearance between the chain or rear derailleur and spokes.
- ⇒ If there is no clearance or the chain scrapes against the spokes, contact your specialist dealer.

7.5.11 Adjusting gear shift

7.5.11.1 ROHLOFF hub

Only applies to pedelecs with this equipment

- 1 Check whether the shift cable tension is set in such a way that there is a perceptible play of around 5 mm when the shift handle is turned.
- 2 Adjust the shift cable tension by turning the tension adjuster.
 - ⇒ Unscrew the tension adjuster to increase the shift cable tension.
 - ⇒ Tighten the tension adjuster to decrease the shift cable tension.

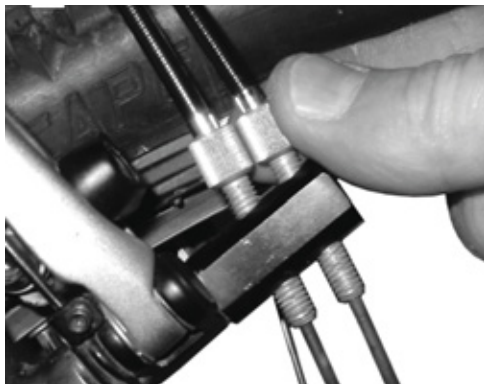


Figure 161: The tension adjuster on Rohloff hub versions with internal switch control is located on the tension counter support



Figure 162: The tension adjuster on Rohloff hub versions with external switch control is located on the cable box positioned on the left-hand side

- 3 If the marking and numbers on the shift handle do no longer coincide after the gear shift is adjusted, tighten one of the tension adjusters and screw out the other tension adjuster to the same extent.

7.5.12 Bowden-cable-operated gear shift, single-cable

Only applies to pedelecs with this equipment

- ▶ Adjust the play on the adjusting sleeves on the shifter housing to ensure a smooth gear shift.

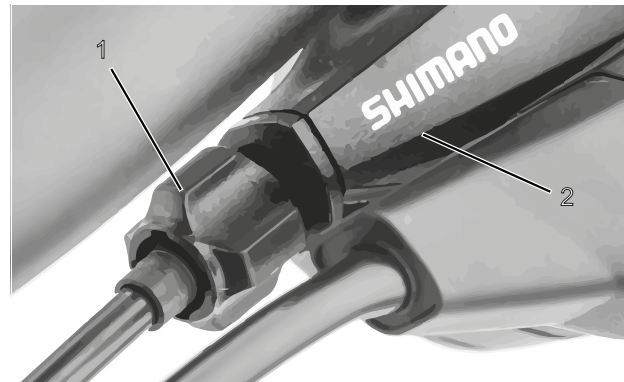


Figure 163: Adjusting sleeve (1) for the single-cable, Bowden-cable-operated gear shift with shifter housing (2), example

7.5.13 Bowden-cable-operated gear shift, dual-cable

Only applies to pedelecs with this equipment

- ▶ For a smooth gear shift, set the adjusting sleeves underneath the chain stay on the frame.
- ▶ The shift cable has around 1 mm play when it is pulled out gently.

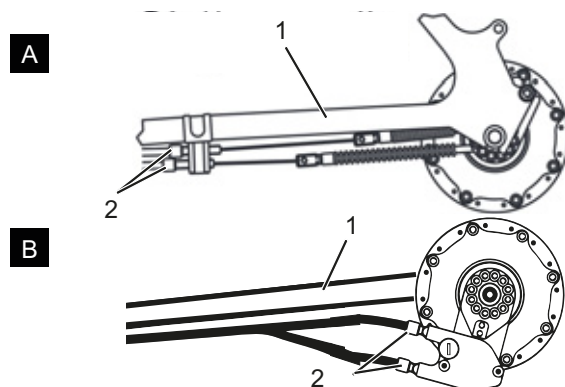


Figure 164: Adjusting sleeves (2) on two alternative versions (A and B) of a dual-cable, Bowden-cable-operated gear shift on the chain stay (1)

7.5.14 Bowden-cable-operated twist grip, dual-cable

Only applies to pedelecs with this equipment

- ▶ For a smooth gear shift, set the adjusting sleeves on the shifter housing.
- ⇒ There is noticeable play of 2 to 5 mm (1/2 gear) when you turn the twist grip.

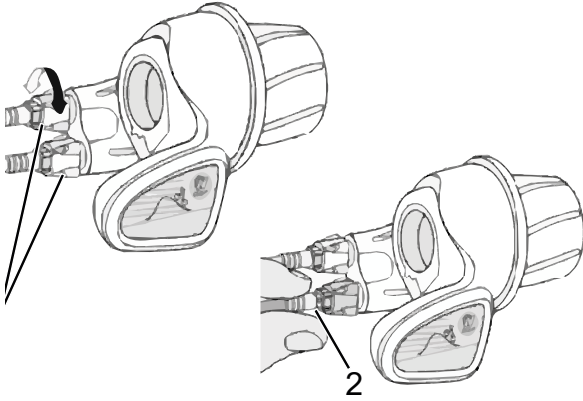


Figure 165: Twist grip with adjusting sleeves (1) and play in the gear shift (2)

7.5.15 Checking kickstand stability

- 1 Place the pedelec on a slight elevation of 5 cm.
 - 2 Extend kickstand.
 - 3 Jolt pedelec to check stability.
- ⇒ If the pedelec topples over, tighten screws or change height of the kickstand.

8 Maintenance

8.1 Initial inspection

After 200 km or 4 weeks after purchase

Vibrations produced while riding can cause screws and springs that were tightened during manufacture of the pedelec to settle or come loose.

- ▶ Arrange an appointment for the initial inspection directly when purchasing the pedelec.
- ▶ Have the initial inspection entered and stamped in the maintenance book.



- ▶ Carrying out the initial inspection, see Section 8.4.

8.2 Maintenance

every six months

You must have your specialist retailer perform maintenance every six months as a minimum. This is the only way to ensure that the pedelec remains safe and fully functional.

Maintenance tasks require technical expertise, special tools and special lubricants. The pedelec may become damaged if the stipulated maintenance intervals and procedures are not carried out. This is why only specialist dealers may carry out maintenance.

- ▶ Contact your specialist dealer and arrange an appointment.
- ▶ Enter and stamp maintenance tasks in the maintenance book.



- ▶ Carry out maintenance.

8.3 Component-specific maintenance tasks

High-quality components require extra maintenance. Maintenance tasks require technical expertise, special tools and special lubricants. The pedelec may become damaged if the stipulated maintenance intervals and procedures are not carried out. This is why only specialist dealers may carry out maintenance.

Correct maintenance on the fork not only guarantees a long service life, but also ensures optimal performance.

Each maintenance interval shows the maximum cycling hours for the required type of maintenance that the component manufacturer recommends.

- ▶ Optimise performance with shorter maintenance intervals, depending on use, terrain and environmental conditions.



- ▶ Enter any components with extra maintenance requirements with their corresponding maintenance intervals into the maintenance book when the pedelec is purchased.
- ▶ Inform the buyer of the additional maintenance schedule.
- ▶ Enter and stamp maintenance tasks in the maintenance book.

Suspension fork maintenance intervals		
Suntour suspension fork		
<input type="checkbox"/>	Maintenance 1	Every 50 hours
<input type="checkbox"/>	Maintenance 2	Every 100 hours
FOX suspension fork		
<input type="checkbox"/>	Maintenance	Every 125 hours or once a year
RockShox suspension fork		
<input type="checkbox"/>	Maintenance of stanchions for: Paragon™, XC™ 28, XC 30, 30™, Judy®, Recon™, Sektor™, 35™*, Bluto™, REBA®, SID®, RS-1™, Revelation™, PIKE®, Lyrik™, Yari™, BoXXer	Every 50 hours
<input type="checkbox"/>	Maintenance of spring and damper unit for: Paragon, XC 28, XC 30,30 (2015 and earlier), Recon (2015 and earlier), Sektor (2015 and earlier), Bluto (2016 and earlier), Revelation (2017 and earlier), REBA (2016 and earlier), SID (2016 and earlier), RS-1 (2017 and earlier), BoXXer (2018 and earlier)	Every 100 hours
<input type="checkbox"/>	Maintenance of spring and damper unit for: 30 (2016+), Judy (2018+), Recon (2016+), Sektor (2016+), 35 (2020+)*, Revelation (2018+), Bluto (2017+), REBA (2017+), SID (2017+), RS-1 (2018+), PIKE (2014+), Lyrik (2016+), Yari (2016+), BoXXer (2019+)	Every 200 hours

Maintenance intervals for suspension seat post		
by.schulz suspension seat post		
<input type="checkbox"/>	Maintenance	After the first 250 km; every 1,500 km after that
Suntour suspension seat post		
<input type="checkbox"/>	Maintenance	Every 100 hours or once a year
Eightpins suspension seat post		
<input type="checkbox"/>	Clean wiper	20 hours
<input type="checkbox"/>	Clean slide bushing	40 hours
<input type="checkbox"/>	Replace slide bushing, wiper and felt strip	100 hours
<input type="checkbox"/>	Seal service for gas pressure spring	200 hours
RockShox suspension seat post		
<input type="checkbox"/>	Venting of remote control lever and/or maintenance of lower seat post unit for: Reverb™ A1/A2/B1, Reverb Stealth A1/A2/B1/C1*	Every 50 hours
<input type="checkbox"/>	Detach lower seat post, clean brass pins, check and replace if necessary and apply new grease for Reverb AXS™ A1*	Every 50 hours
<input type="checkbox"/>	Venting of remote control lever and/or maintenance of lower seat post unit for: Reverb B1, Reverb Stealth B1/C1*, Reverb AXS™ A1*	Every 200 hours
<input type="checkbox"/>	Complete maintenance of seat post for: Reverb A1/A2, Reverb Stealth A1/A2	Every 200 hours
<input type="checkbox"/>	Complete maintenance of seat post for: Reverb B1, Reverb Stealth B1	Every 400 hours
<input type="checkbox"/>	Complete maintenance of seat post for: Reverb AXS™ A1*, Reverb Stealth C1*	Every 600 hours
FOX suspension seat post		
<input type="checkbox"/>	Maintenance	Every 125 hours or once a year
All other suspension seat posts		
<input type="checkbox"/>	Maintenance	Every 100 hours

Maintenance intervals for rear frame damper		
RockShox rear frame damper		
<input type="checkbox"/>	Service air chamber assembly	Every 50 hours
<input type="checkbox"/>	Service damper and spring	Every 200 hours
FOX rear frame damper		
<input type="checkbox"/>	Maintenance	Every 125 hours or once a year
Suntour rear frame damper		
<input type="checkbox"/>	Complete shock absorber service including damper reassembly and air seal replacement	Every 100 hours

Hub maintenance intervals		
SHIMANO 11-speed hub		
<input type="checkbox"/>	Internal oil change and maintenance	1,000 km after start of use, then every 2 years or 2,000 km
All other SHIMANO gear hubs		
<input type="checkbox"/>	Grease internal components	Once a year or every 2,000 km
ROHLOFF Speedhub 500/14		
<input type="checkbox"/>	Clean cable box and grease cable drum interior	Every 500 km
<input type="checkbox"/>	Oil change	Every 5,000 km or at least once a year
Pinion		
<input type="checkbox"/>	Maintenance 1 Check drive elements and replace if necessary Clean cable pulley, slide surfaces and gear box interior, epicyclic wheels, etc. thoroughly and grease generously	Every 500 km
<input type="checkbox"/>	Maintenance 2 Replace chain rings and change oil	Every 10,000 km

 **WARNING**
Injury due to damaged brakes

Special tools and specialist knowledge are required to repair the brakes. Incorrect or unauthorised assembly can damage the brakes. This may lead to an accident with serious injuries.

- ▶ Only specialist dealers may carry out repairs on brakes.
- ▶ Only carry out work or changes, such as dismantling, sanding or painting, which are permitted and described in the brake operating instructions.

Injury to the eyes

Problems may arise if the settings are not made properly and you may sustain serious injuries as a result.

- ▶ Always wear safety glasses during maintenance work.

 **CAUTION**
Crash and falling caused by unintentional activation

There is a risk of injury if the drive system is activated unintentionally.

- ▶ Remove the battery before inspection.

Crash caused by material fatigue

If the service life of a component has expired, the component may suddenly fail. This may cause a crash with injuries.

- ▶ Have the specialist dealer carry out basic cleaning of the pedelec every six months, preferably at the same time as the required servicing work.

 **CAUTION**
Hazard for the environment due to toxic substances

The brake system contains toxic and environmentally harmful oils and lubricants. Such fluids will contaminate if they enter the sewers or groundwater.

- ▶ Dispose of lubricants and oils left over after repairs in an environmentally responsible way in accordance with statutory regulations.

Notice

The motor is maintenance-free and only qualified specialist personnel may open it.

- ▶ Never open the motor.

8.4 Carry out initial inspection

Vibration produced while riding can cause screws and springs that were tightened during manufacture of the pedelec to settle or come loose.

- ▶ Check quick release system is fixed in position.
- ▶ Check all tightening torques of screws and screw connections.

Incorrectly fastened screws may come loose due to impact. The stem may no longer be firmly fixed in its position as a result. This will cause a crash with injuries.

Check the handlebars and the stem quick release system are firmly in position after the first two hours of riding.



8.5 Maintenance instructions

Complying with these maintenance instructions is the only way to reduce wear on components, increase the operating hours and guarantee safety.

Diagnosis and documentation of current status

Components	Fre- quency	Description			Criteria		Measures if rejected
		Inspection	Tests	Maintenance	Accept- ance	Rejection	
Chassis							
Frame	Once a month	Dirt	...	Section 7.3.4	O.K.	Dirt	Cleaning
	6 months	Servicing	...	Section 7.4.1	O.K.	Untreated	Wax
	6 months	Check for damage – fracture, scratches	Section 8.6.1	...	O.K.	Damage detected	Take pedelec out of service, new frame as specified in parts list
Carbon frame (optional)	Once a month	Dirt	Section 7.3.4	...	O.K.	Dirt	Cleaning
	6 months	Servicing	...	Section 7.4.1	O.K.	No wax	Wax
	6 months	Damage to paintwork	Section 8.6.1.1	...	O.K.	Damage to paintwork	Apply paint
	6 months	Damage from impact	Section 8.6.1.1	...	O.K.	Damage from impact	Take pedelec out of service, new frame as specified in parts list
RockShox Rear frame damper (optional)	6 months	Check for damage, corrosion, fracture	See Rock-Shox component maintenance instructions	Maintenance as specified by manufacturer Air chamber assembly group, damper and spring.	O.K.	Damage detected	New rear frame damper as specified in parts list
FOX Rear frame damper (optional)	6 months	Check for damage, corrosion, fracture	...	Send to FOX	O.K.	Damage detected	New rear frame damper as specified in parts list
Suntour Rear frame damper (optional)	6 months	Check for damage, corrosion, fracture	See Suntour component maintenance instructions	Maintenance as specified by manufacturer Complete shock absorber service including damper reassembly and air seal replace-	O.K.	Damage detected	New rear frame damper as specified in parts list
Steering system							
Handlebars	Once a month	Cleaning	...	Section 7.3.6	O.K.	Dirt	Cleaning
	6 months	Wax	...	Section 7.4.7	O.K.	Untreated	Wax
	6 months	Check mount fastening	Section 7.5.5	...	O.K.	Loose, rust	Retighten screws; new handlebars as specified in parts list if necessary
Stem	Once a month	Cleaning	...	Section 7.3.5	O.K.	Dirt	Cleaning
	6 months	Wax	...	Section 7.4.6	O.K.	Untreated	Wax
	6 months	Check mount fastening	Section 7.5.4 and Section 8.6.4	...	O.K.	Loose, rust	Retighten screws; new stem as specified in parts list if necessary



Components	Fre-quency	Description			Criteria		Measures if rejected
		Inspection	Tests	Maintenance	Accept-ance	Rejection	
Handles	Once a month	Cleaning	...	Section 7.3.7	O.K.	Dirt	Cleaning
	Once a month	Care for	Section 7.4.8	...	O.K.	Untreated	Talcum powder
	before each ride	Wear; check if fastened securely	Section 7.1.11	...	O.K.	Missing, wobbles	Retighten screws, new handles and coverings as specified in parts list
Steering headset	6 months	Clean and check for damage	...	Clean, lubricate and adjust	O.K.	Unclean	Clean and lubricate
Fork (rigid)	6 months	Check for damage, corrosion, fracture	Dismount, check, lubricate, refit	...	O.K.	Damage detected	New fork as specified in the parts list
Carbon fork (optional)	6 months	Check for damage, corrosion, fracture	...	Maintenance as specified by manufacturer Lubrication, oil change as specified by manufacturer	O.K.	Damage detected	New fork as specified in the parts list
Suntour suspension fork (optional)	6 months	Check for damage, corrosion, fracture	...	Maintenance as specified by manufacturer Lubrication, oil change as specified by manufacturer	O.K.	Damage detected	New fork as specified in the parts list
FOX suspension fork (optional)	6 months	Check for damage, corrosion, fracture	...	Send to FOX	O.K.	Damage detected	New rear frame damper as specified in parts list
RockShox suspension fork (optional)	6 months	Check for damage, corrosion, fracture	...	Maintenance as specified by manufacturer Lubrication, oil change as specified by manufacturer	O.K.	Damage detected	New fork as specified in the parts list
Spinner suspension fork (optional)	6 months	Check for damage, corrosion, fracture	...	Maintenance as specified by manufacturer Lubrication, oil change as specified by manufacturer	O.K.	Damage detected	New fork as specified in the parts list
Wheel							
Wheel	before each ride	Concentricity	Section 7.1.7	...	O.K.	Not straight	Re-mount wheel
	6 months	Assembly	Section 7.5.1	...	O.K.	Loose	Adjust quick release
Tyres	Once a month	Cleaning	Section 7.3.10	...	O.K.	Dirt	Cleaning
	once a week	Tyre pressure	Section 7.5.1.1	...	O.K.	Tyre pressure too low/too high	Adjust tyre pressure
	10 days	Wear	Section 7.3.10	...	O.K.	Worn profile	New tyre as specified in the parts list



Components	Fre- quency	Description			Criteria		Measures if rejected
		Inspection	Tests	Maintenance	Accept- ance	Rejection	
Rims	6 months	Wax	...	Section 7.4.13	O.K.	Untreated	Wax
	6 months	Wear	Section 7.5.1.3	...	O.K.	Defective rim	New rim as specified in the parts list
	once a month	Wear on brake surface	Section 7.5.2.6	...	O.K.	Worn brake surface	New rim as specified in the parts list
Spokes	Once a month	Cleaning	...	Section 7.3.11	O.K.	Dirt	Cleaning
	3 months	Check tension	Section 7.5.1.3	...	O.K.	Loose, tension varies	Re-tension spokes or new spokes as specified in parts list
	6 months	Check rim hooks	Section 7.5.1.3	...	O.K.	Twisted rim hooks	New rim as specified in the parts list
Spoke nipples	Once a month	Cleaning	...	Section 7.3.11	O.K.	Dirt	Cleaning
	Once a month	Wax	...	Section 7.4.12	O.K.	Untreated	Wax
Nipple holes	6 months	Check for cracks	Section 7.5.1.4	...	O.K.	Cracks	New rim as specified in the parts list
Nipple well	Once a year	Check for cracks	Section 7.5.1.5	...	O.K.	Cracks	New rim as specified in the parts list
Hub	Once a month	Cleaning	...	Section 7.3.12	O.K.	Dirt	Cleaning
	Once a month	Care for	...	Section 7.4.11	O.K.	Untreated	Treat
Hub with cone bearing (optional)	Once a month	Cleaning	...	Section 7.3.12	O.K.	Dirt	Cleaning
	Once a month	Care for	...	Section 7.4.11	O.K.	Untreated	Treat
	6 months	Check mount fastening	#	...	O.K.	Loose, rust	Retighten screws; new handlebars as specified in parts list if necessary
	Once a year	Adjust	...		O.K.	Not adjusted	New position
Hub gear (optional)	Once a month	Cleaning	...	Section 7.3.12	O.K.	Dirt	Cleaning
	Once a month	Care for	...	Section 7.4.11	O.K.	Untreated	Treat
	6 months	Check mount fastening	#	...	O.K.	Loose, rust	Retighten screws; new handlebars as specified in parts list if necessary
	6 months	Functional check	Section 7.5.9.2	...		incorrect switching	Readjust hub
Saddle and seat post							
Saddle	Once a month	Cleaning		Section 7.3.9	O.K.	Dirt	Cleaning
	6 months	Check mount fastening	Section 7.5.6	...	O.K.	Loose	Retighten screws
Leather saddle (optional)	Once a month	Cleaning	...	Section 7.3.9.1	O.K.	Dirt	Cleaning
	6 months	Care for	...	Section 7.4.10	O.K.	Untreated	Leather wax
	6 months	Check mount fastening	Section 7.5.6	...	O.K.	Loose	Retighten screws



Components	Fre- quency	Description			Criteria		Measures if rejected
		Inspection	Tests	Maintenance	Accept- ance	Rejection	
Seat post	Once a month	Cleaning	...	Section 7.3.8	O.K.	Dirt	Cleaning
	6 months	Care for	...		O.K.	Untreated	Leather wax
	6 months	Complete clean, check fastening and paint protection film	...	Section 8.6.8	O.K.	Loose	Tighten screws, new paint protection film
Carbon seat post (optional)	Once a month	Cleaning	...	Section 7.3.8	O.K.	Dirt	Cleaning
	6 months	Care for	...	Section 7.4.9.2	O.K.	Untreated	Assembly paste
	6 months	Complete clean, check fastening and paint protection film	...	Section 8.6.8.1	O.K.	Loose	Tighten screws, new paint protection film; new seat post as specified in parts list if damaged
Suspension seat post (optional)	Once a month	Cleaning	...	#	O.K.	Dirt	Cleaning
	6 months	Care for	...	Section 7.4.9.1	O.K.	Untreated	Oils
	100 hours or 6 months	Complete clean, check fastening and paint protection film	Section 8.6.8	...	O.K.	Loose	Tighten screws, new paint protection film
by.schulz suspension seat post (optional)	After the first 250 km; every 1500 km after that	Complete clean, check fastening and paint protection film, lubricate	Section 8.6.8.2	...	O.K.	Loose	Tighten screws, new paint protection film; new seat post as specified in parts list if damaged
Suntour suspension seat post	Every 100 hours or once a year	Complete clean, check fastening and paint protection film, lubricate	Section 8.6.8.3	...	O.K.	Loose	Tighten screws, new paint protection film; new seat post as specified in parts list if damaged
Eightpins NGS2 Suspension seat post	20 hours	Refill oil	...	Section 7.4.18	O.K.	No oil	Refill oil
	20 hours	Clean wiper	...		O.K.	Dirt	Cleaning
	40 hours	Cleaning the slide bushing	...		O.K.	Dirt	Cleaning
	100 hours	Replace slide bushing, wiper and felt strip	...		O.K.	No replacement	Replace
	200 hours	Seal service for gas pressure spring	...		O.K.	No service	Carry out the service
Eightpins H01 Suspension seat post	20 hours	Refill oil	...	Section 7.4.18	O.K.	No oil	Refill oil
	20 hours	Clean wiper	...		O.K.	Dirt	Cleaning
	40 hours	Cleaning the slide bushing	...		O.K.	Dirt	Cleaning
	100 hours	Replace slide bushing, wiper and felt strip	...		O.K.	No replacement	Replace
	200 hours	Seal service for gas pressure spring	...		O.K.	No service	Carry out the service



Components	Fre- quency	Description			Criteria		Measures if rejected
		Inspection	Tests	Maintenance	Accept- ance	Rejection	
RockShox suspension seat post	50 hours	Venting	...	See manufac- turer	O.K.		
	50 hours	Cleaning	...	See manufac- turer	O.K.		
	200 hours	Venting	...	See manufac- turer	O.K.		
	200 hours	Complete mainte- nance	...	See manufac- turer	O.K.		
	400 hours	Complete mainte- nance	...	See manufac- turer	O.K.		
	600 hours	Complete mainte- nance	...	See manufac- turer	O.K.		
FOX suspen- sion seat post	Every 125 hours or once a year	Complete mainte- nance	See manufac- turer	At the manufac- turer FOX	
Safety guards							
Belt or chain guards	6 months	Attachment	Check mount fastening	...	O.K.	Loose	Retighten screws
Guard	6 months	Attachment	Check mount fastening	...	O.K.	Loose	Retighten screws
Motor cover	6 months	Attachment	Check mount fastening	...	O.K.	Loose	Retighten screws
Brake system							
Brake lever	6 months	Attachment	Check mount fastening	...	O.K.	Loose	Retighten screws
Brake fluid	6 months	Check fluid level	Depending on time of year	...	O.K.	Too little	Top up brake fluid; <i>take Pedelec out of service</i> if damaged; new brake hoses
Brake linings	6 months	Brake linings, brake discs and rims	Check for damage	...	O.K.	Damage detected	New brake linings, brake discs and rims
Back-pedal brake braking armature	6 months	Attachment	Check mount fastening	...	O.K.	Loose	Retighten screws
Brake system	6 months	Attachment	Check mount fastening	...	O.K.	Loose	Retighten screws
Lighting system							
Light cabling	6 months	Connections, correct wiring	Check	...	O.K.	Cable defec- tive, no light	New cabling
Rear light	6 months	Side light	Functional check	...	O.K.	No constant light	New rear light as specified in parts list; replace if necessary
Front light	6 months	Side light, daytime riding light	Functional check	...	O.K.	No constant light	New front light as specified in parts list; replace if necessary
Reflectors	6 months	All complete, state, fastening	Check	...	O.K.	Damaged or not all complete	New reflectors



Components	Fre- quency	Description			Criteria		Measures if rejected
		Inspection	Tests	Maintenance	Accept- ance	Rejection	
Drive/gear shift							
Chain/ cassette/ pinion/chain- ring	6 months	Check for damage	Check for damage	...	O.K.	Damage	Refasten if necessary or replace as speci- fied in parts list
Chain guard/ spoke guard	6 months	Check for damage	Check for damage	...	O.K.	Damage	Replace as specified in parts list
Bottom bracket axle/ crank	6 months	Check mount fastening	Check mount fastening	...	O.K.	Loose	Retighten screws
Pedals	6 months	Check mount fastening	Check mount fastening	...	O.K.	Loose	Retighten screws
Shifter	6 months	Check mount fastening	Check mount fastening	...	O.K.	Loose	Retighten screws
Shift cables	6 months	Check for damage	Check for damage	...	O.K.	Loose and defective	Adjust shift cables; new shift cables if necessary
Front derail- leur	6 months	Check for damage	Check for damage	...	O.K.	Gear shift diffi- cult or not possible	Adjust
Rear derail- leur	6 months	Check for damage	Check for damage	...	O.K.	Gear shift diffi- cult or not possible	Adjust
Electric drive							
On-board computer	6 months	Check for damage	Check for damage	...	O.K.	No screen, defective screen display	Restart, test battery, new software or new on-board computer, <i>decommissioning</i> ,
Electric drive control panel	6 months	Check drive for damage	Check drive for damage	...	O.K.	No response	Restart; contact control panel manu- facturer, new control panel
Tachometer	6 months	Calibration	Speed meas- urement	...	O.K.	Pedelec travel- ling 10 % too fast/slow	Take pedelec out of service until the source of the error is found
Cabling	6 months	Visual inspection	Visual inspec- tion	...	O.K.	Failure in system, damage, kinked cables	New cabling
Recharge- able battery	6 months	First examination	see Section Assembly	...	O.K.	Error message	Contact battery manu- facturer; <i>take out of service</i> , new battery
Battery mount	6 months	Firmly in position, lock, contacts	Check mount fastening	...	O.K.	Loose; lock doesn't close, no contacts	New battery mount
Motor	6 months	Visual inspection and mount	Check mount fastening	...	O.K.	Damage, loose	Refasten motor, contact motor manu- facturer, new motor; <i>take out of service</i>
Software	6 months	Check version	Check soft- ware version	...	In latest version	Not latest version	Import update



Components	Fre- quency	Description			Criteria		Measures if rejected
		Inspection	Tests	Maintenance	Accept- ance	Rejection	
Miscellaneous							
Pannier rack	before each ride	Stability	Section 7.1.5	...	O.K.	Loose	Firm
	Once a month	Dirt	...	Section 7.3.4	O.K.	Dirt	Cleaning
	6 months	Servicing	...	Section 7.4.3	O.K.	Untreated	Wax
	6 months	Check fastening and paint protection film	Section 8.5.2	...	O.K.	Loose	Tighten screws, new paint protection film
Kickstand	Once a month	Dirt	...	Section 7.3.4	O.K.	Dirt	Cleaning
	6 months	Servicing	...	Section 7.4.5	O.K.	Untreated	Wax
	6 months	Attachment	Section 7.5.15	...	O.K.	Loose	Retighten screws
	6 months	Stability	Section 7.5.15	...	O.K.	Tips over	Change kickstand height
Bell	before each ride	Sound	Functional check Section 7.1.10	...	O.K.	No ring, too quiet, missing	New bell as specified in the parts list
Attachments (optional)	6 months	Attachment	Check mount fastening	...	O.K.	Loose	Retighten screws

Technical inspection, checking safety, test ride

Components	Description		Criteria		Measures if rejected
	Assembly/inspection	Tests	Acceptance	Rejection	
Brake system	6 months	Functional check	O.K.	No full braking; braking distance too long	Locate defective part in brake system and correct
Gear shift under operating load	6 months	Functional check	O.K.	Problems when shifting gear	Readjust gear shift
Suspension components (fork, shock absorber, seat post)	6 months	Functional check	O.K.	Suspension too deep or no longer exists	Locate defective component and correct
Electric drive	6 months	Functional check	O.K.	Loose connection, problems when riding, accelerate	Locate defective part in electric drive and correct
Lighting system	6 months	Functional check	O.K.	No continuous light, not bright enough	Locate defective part in lighting system and correct
Test ride	6 months	Functional check	No strange noises	Strange noises	Locate source of noise and correct



8.5.1 Servicing the frame

- 1 Check frame for cracks, warping and damage to the paintwork.
- ⇒ If there are any cracks, warping or damage to the paintwork, remove the pedelec from service. New frame as specified in the parts list.

8.5.1.1 Servicing the carbon frame

You need to distinguish between scratches on the paintwork and impacts if the carbon frame paintwork is damaged.

- ▶ Ask customer what caused the damage.
- ▶ Examine damage with a magnifying glass to see if fibres are permanently damaged.

Damage to paintwork

- 1 Gently sand paintwork damage with 600-grit sandpaper.
- 2 Smooth edges.
- 3 Apply one or two coats of repair paint.

Damage from impact

There may be damage to the laminate beneath the paintwork in the case of impact damage. The frame may break even under light stress.

- 1 Take pedelec out of service.
- 2 Send frame to a fibre composite repair company or purchase new frame as specified in the parts list.

8.5.2 Checking the pannier rack

Scratches, cracks and breaks may appear on the pannier rack caused by the panniers and cargo boxes.

- 1 Examine pannier rack for scratches, cracks and breaks.
- ⇒ Replace damaged pannier racks.
- ⇒ If the paint protection film is missing or has worn away, affix a new paint protection film.

8.5.3 Servicing axle with quick release



Crash caused by unfastened quick release

A faulty or incorrectly installed quick release may become caught in the brake disc and block the wheel. This will cause a crash.

- ▶ Install the front wheel quick release lever on the opposite side to the brake disc.

Crash caused by faulty or incorrectly installed quick release

The brake disc becomes very hot during operation. Parts of the quick release may become damaged as a result. The quick release comes loose. This will cause a crash with injuries.

- ▶ The front wheel quick release lever and the brake disc must be situated on opposite sides.

Crash caused by incorrectly set clamping force

Excessively high clamping force will damage the quick release and cause it to lose its function.

Insufficient clamping force will cause a detrimental transmission of force. The suspension fork or the frame may break. This will cause a crash with serious injuries.

- ▶ Never fasten a quick release using a tool (e.g. hammer or pliers).
- ▶ Only use the clamping lever with the specified set clamping force.

- 1 Undo quick release.
- 2 Fasten quick release.
- 3 Check the position and clamping force of the quick release lever.



- ⇒ The quick release lever is flush with the lower housing.
- ⇒ You should be able to see slight impression on the palm of your hand when you close the quick release lever.



Figure 166: Adjusting the quick release clamping force

- 4 Use a 4 mm hexagon socket spanner to adjust the clamping lever clamping force if required.
- 5 Check the quick release lever position and clamping force again.



Figure 167: Adjusting the quick release clamping force

8.5.4 Maintaining the stem

Incorrectly fastened screws may come loose due to impact. The stem may no longer be firmly fixed in its position as a result. This will cause a crash with injuries.

- ▶ Check the handlebars and the stem's quick release are firmly in position.

8.5.5 Servicing the gear hub

8.5.5.1 Adjusting the hub with cone bearing

In the case of hubs with a cone bearing, the bearing shell fixed in the hub cone body rotates with its larger ball bearing surfaces around the inner bearing cone resting against the fork end. The outer bearing shell rotating around the stationary bearing cone is subject to considerably more evenly distributed loads thanks to its larger ball running surface.

- 1 Attach a small, red colour marking on the lock nut.
 - 2 Turn the wheel axle 40° to 90° every 1,000 to 2,000 km.
- ⇒ The bearing cone is subject to evenly distributed loads.



8.5.6 Servicing the steering headset

- 1 Remove fork.
- 2 Clean steering headset. If it is very dirty, flush the bearing with cleaning agents such as WD-40 or Karamba.
- 3 Check steering headset for damage.
 - ⇒ If the steering headset is damaged, replace steering headset as specified in the parts list.
- 4 Grease steering headset and bearing seat with highly viscous, water-repellent grease (e.g. Dura Ace special grease by SHIMANO).
- 5 Re-fit fork with steering headset as per fork instructions.

8.5.7 Servicing the fork

Only applies to pedelecs with this equipment

WARNING

Injury due to explosion

The air chamber is pressurised. If the air system in a faulty suspension fork is maintained, it can explode and cause serious injury.

- ▶ Wear safety goggles, protective gloves and safety clothing when assembling or carrying out maintenance on the bicycle.
- ▶ Release the air for the air chambers. Detach all air insert fitments.
- ▶ Never service or dismantle a suspension fork if it has not completely rebounded.

CAUTION

Hazard for the environment due to toxic substances

The suspension fork contains toxic and environmentally harmful oils and lubricants. Such fluids will contaminate if they enter the sewers or groundwater.

- ▶ Dispose of lubricants and oils left over after repairs in an environmentally responsible way in accordance with statutory regulations.

- 1 Remove fork.
- 2 Check fork for cracks, warping and damage to the paintwork.
 - ⇒ If there are any cracks, warping or damage to the paintwork, remove the pedelec from service. New fork as specified in the parts list.
- 3 Clean inside and exterior.
- 4 Grease fork.
- 5 Install fork.



8.5.7.1 Servicing the carbon suspension fork

- 1 Remove fork.
- 2 Check fork for cracks, warping and damage to the paintwork.
- 3 You need to distinguish between scratches on the paintwork and impacts if the carbon suspension fork paintwork is damaged.
 - ▶ Ask customer what caused the damage.
 - ▶ Examine damage with a magnifying glass to see if fibres are permanently damaged.

Damage to paintwork

- 1 Gently sand paintwork damage with 600-grit sandpaper.
- 2 Smooth edges.
- 3 Apply one or two coats of repair paint.

Damage from impact

There may be damage to the laminate beneath the paintwork in the case of impact damage. The fork may break even under light stress.

- ▶ Take pedelec out of service. New fork as specified in the parts list.
- ⇒ The fork must be free from any defects.
- 4 Clean inside and exterior.
 - 5 Grease fork.
 - 6 Install fork.

8.5.7.2 Servicing the suspension fork

- 1 Remove fork.
- 2 Check fork for cracks, warping and damage to the paintwork.
 - ⇒ If there are any cracks, warping or damage to the paintwork, remove the pedelec from service. New fork as specified in the parts list.
- 3 Dismantle suspension fork.
- 4 Lubricate dust seals and slide bushings.
- 5 Check torques.
- 6 Clean inside and exterior.
- 7 Grease fork.
- 8 Install fork.
- 9 Adjust suspension fork (see Section 6.3.14).



8.5.8 Servicing seat post



WARNING

Intoxication from lubrication oil

The lubrication oil for Eightpins seat posts is toxic if touched or inhaled.

- ▶ Always wear safety goggles and nitrile gloves when working with lubrication oil.
- ▶ Lubricate seat post in the open air or in a well-ventilated room only.
- ▶ Avoid skin coming into contact with lubrication oil. Wear nitrile gloves when lubricating, cleaning and servicing the vehicle.
- ▶ Use an oil catchment tray under the section where the seat post is serviced.

- 1 Remove seat post from the frame.
- 2 Clean seat post on the inside and outside.
- 3 Examine seat post rack for scratches, cracks and breaks.
 - ⇒ Replaced damaged seat post as specified in the parts list.
 - ⇒ If the paint protection film is missing or has worn away, affix a new paint protection film.
- 4 Fit seat post as per height specifications in the pedelec pass.

8.5.8.1 Servicing the carbon seat post

Only applies to pedelecs with this equipment

You need to distinguish between scratches on the paintwork and impacts if the carbon seat post paintwork is damaged.

- ▶ Ask customer what caused the damage.
- ▶ Examine damage with a magnifying glass to see if fibres are permanently damaged.

Damage to paintwork

- 1 Gently sand paintwork damage with 600-grit sandpaper.
- 2 Smooth edges.
- 3 Apply one or two coats of repair paint.

Damage from impact

There may be damage to the laminate beneath the paintwork in the case of impact damage. The carbon seat post may break even under light stress.

- 1 Take pedelec out of service.
- 2 New carbon seat post as specified in the parts list.



8.5.8.2 by.schulz suspension seat post

Only applies to pedelecs with this equipment

- 1 Remove seat post from the frame.
 - 2 Remove safety and protective cover.
 - 3 Clean seat post on the inside and outside.
 - 4 Examine seat post rack for scratches, cracks and breaks.
- ⇒ Replaced damaged seat post as specified in the parts list.
- ⇒ If the paint protection film is missing or has worn away, affix a new paint protection film.
- 5 Lubricate screws in the parallel suspension.
 - 6 Reinsert seat post as per height specifications in the pedelec pass. Check screws for correct tightening torques.

□	Tightening torque G1 M8 seat clamping screw M5 fixing grub screws	20-24 Nm 3 Nm
---	--	------------------

□	Tightening torque G2 M6 seat clamping screw M5 fixing grub screws	12-14 Nm 3 Nm
---	--	------------------

- 7 Put on safety and protective cover.

8.5.8.3 Suntour suspension seat post

Only applies to pedelecs with this equipment

- 1 Remove seat post from the frame.
 - 2 Remove safety and protective cover.
 - 3 Examine seat post rack for scratches, cracks and breaks.
- ⇒ Replaced damaged seat post as specified in the parts list.
- ⇒ If the paint protection film is missing or has worn away, affix a new paint protection film.
- 4 Undo pre-tensioning adjuster and take out steel spring.
 - 5 Clean seat post on inside and outside.
 - 6 Grease seat post on inside with SR SUNTOUR no. 9170-001.
 - 7 Lubricate pressure roller with bike chain oil.
- ▶ Lubricate articulated joints in parallel suspension with bike chain oil.



Figure 168: SR Suntour suspension seat post lubrication points

- 8 Reinsert seat post as per height specifications in the pedelec pass.
- 9 Check screws for correct tightening torques.

□	Tightening torque Seat clamping screw M5 fixing grub screws	15-18 Nm 3 Nm
---	--	------------------

- 10 Put on safety and protective cover.



8.5.8.4 Eightpins NGS2 seat post

Only applies to pedelecs with this equipment

Removing the seat post

- 1 Use a 2.5 mm hex key to turn the height adjustment 45° anti-clockwise and move to the “Open position”.



Figure 169: Moving height adjustment to the “Open position”

- 2 Activate operating lever. Pull seat post upwards at the same time and remove completely.



Figure 170: Pulling the seat post out

- 3 Activate operating lever. Hold Bowden cable fastener and pull or tilt forwards. Remove outer sleeve from the seat post remote control.



Figure 171: Removing the cartridge

- 4 Use a 5 mm to undo Postpin axle and pull out.



Figure 172: Undoing the Postpin axle

- 5 Pull cartridge from the piston rod while pushing the outer sleeve into the frame at the same time to help.

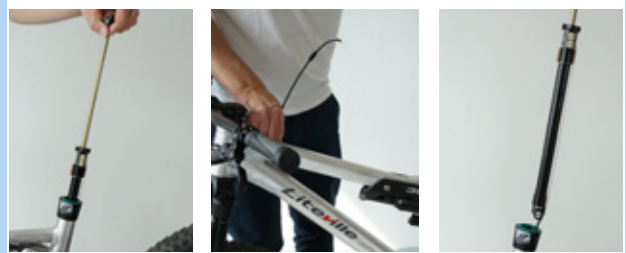


Figure 173: Pulling the cartridge out

- 6 Hold the cartridge with one hand at the height of the mechanism and pull the Bowden cable straight down with the other.

- 7 Hold the white actuating slide in the locking mechanism with your thumb.

- 8 Carefully push the Bowden cable upwards with the other hand and detach it.



Figure 174: Detaching the Bowden cable

Notice

- ▶ Never pull Bowden cable forwards at an angle.

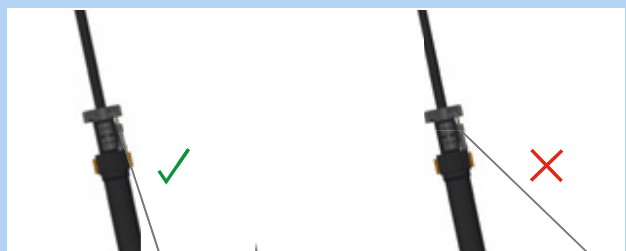


Figure 175: Bowden cable position



- 9 Pull out the outer sleeve end cap from the counter support on the Postpin interface on the seat post.

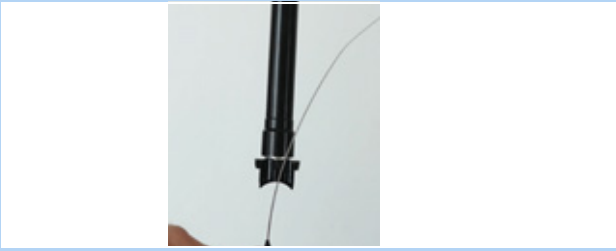


Figure 176: Pulling the end cap out

Removing the outer sleeve and slide bushing

- 1 Use a 3 mm hex spanner to remove attachment screw on the outer sleeve.
- 2 Detach outer sleeve by pulling upwards with your hand.
- 3 Pull slide bushing tube out of the seat tube.



Figure 177: Removing the outer sleeve and slide bushing

Caring for the outer sleeve

- 1 Detach spring washer or outer sealing ring.



Figure 178: Removed spring washer

- 2 Carefully remove the wiper from the groove.



Figure 179: Removing the wiper

- 3 Use a small, sharp object to look for and remove the end of the felt ring.
- 4 Carefully take out the felt ring.
- 5 Remove felt ring.
- 6 Clean or replace felt ring.



Figure 180: Removing the felt ring

- 7 Clean inside of outer sleeve with a cloth.

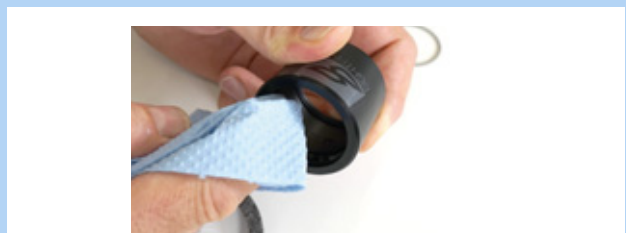


Figure 181: Cleaning the outer sleeve



- 8 Carefully re-insert dry felt ring with one end in the designated groove.
- 9 Unfurl felt ring within the outer sleeve, so that it lies on the groove.
- 10 Carefully press felt ring into the groove by hand. Ensure that both ends are fully pressed in and meet and that they do not overlap and are not twisted.



Figure 182: Inserting the felt ring

- 11 Insert cleaned or new wiper in the upper groove.
- 12 Stretch spring washer over the wiper.

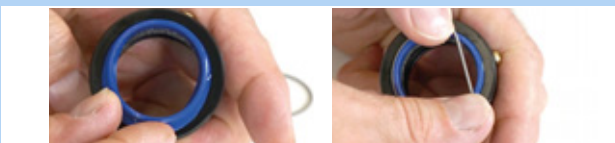


Figure 183: inserting and fastening the wiper

Cleaning the slide bushing

- 1 Clean the slide bushing tube with a damp cloth.

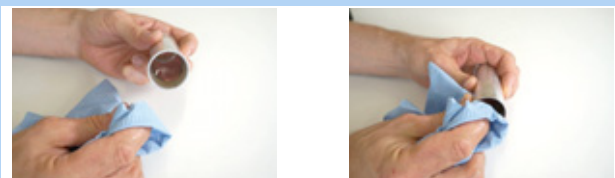


Figure 184: Cleaning the slide bushing tube

Notice

- ▶ Do not squash. The slide bushing tube wall is very thin.

Increasing the air pressure

- 1 Use 3 mm hex spanner to unscrew valve cap.



Figure 185: Unscrewing the valve cap

- 2 Screw valve adapter into mounting interface from below.



Figure 186: Screwing the valve adapter in

- 3 Use compression pump to pump the cartridge up to 24 bar.



Figure 187: Pumping the cartridge up

Notice

Screwing in the valve adapter will not open the valve. No pressure is displayed. The pressure is displayed when you start pumping.

- 4 Unscrew pump and valve adapter.



- Use a 3 mm hex spanner to screw the valve lid back on and tighten with a maximum of 0.5 Nm.



Figure 188: Fastening the cartridge valve lid

Notice

- ▶ The cartridge is not airtight without the valve lid.

Setting the slipper clutch

- Use 3 mm hex spanner to unscrew valve cap.

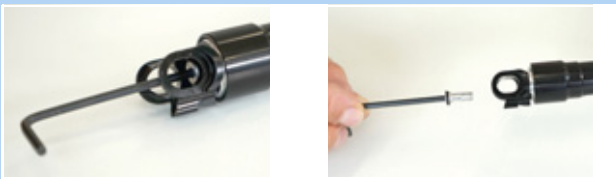


Figure 189: Unscrewing the valve cap

- Secure the mounting interface against twisting with a 24 mm open-end spanner.



Figure 190: Securing against twisting

- Set the torque to 18 Nm with a torque wrench and a 6 mm hex bit with a shaft length of at least 25 mm. Rotate clockwise.



Figure 191: Setting in a clockwise direction

- Use a 3 mm hex spanner to screw the valve lid on and tighten with a maximum of 0.5 Nm.

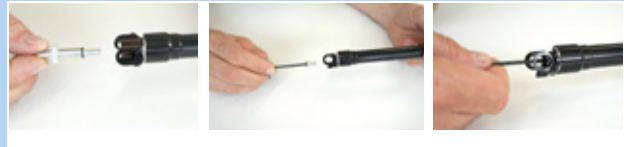


Figure 192: Fastening the cartridge valve lid

Notice

- ▶ The cartridge is not airtight without the valve lid.



installing the outer sleeve and slide bushing

- 1 Carefully push slide bushing tube into the seat tube.
- 2 Press outer sleeve downwards with your hand.
- 3 Use a 3 mm hex spanner to fasten the attachment screw on the outer sleeve.



Figure 193: Fitting the slide bushing and outer sleeve

Fitting the seat post

- 1 Attach the outer sleeve end cap in the counterholder on the seat post frame interface.



Figure 194: Attaching the end cap

- 2 Use both thumbs to push white activation slider downwards and hold with one thumb.



Figure 195: Pushing the white activation slider downwards

- 3 Attach Bowden cable with the nipple to the bracket for the Bowden cable.



Figure 196: Correct and incorrect Bowden cable

Notice

- ▶ Never pull Bowden cable forwards at an angle.

- 4 Carefully push cartridge into the seat tube. Pull the Bowden cable out of the frame to help.



Figure 197: Fastening the cartridge valve lid

Notice

- ▶ Before continuing with installation, ensure that the Bowden cable is fed into the middle of the longitudinal guide. If the Bowden cable is off-centre, it will be pinched by the tube.

- 5 Look at the frame interface through the hole in the Postpin. Push the cartridge down until the Postpin mounting interface on the seat post reaches the Postpin interface on the frame.

- 6 If necessary, turn the seat post slightly and push it to the correct position so that the Postpin axle can be inserted.



Figure 198: Fastening the cartridge valve lid

- 7 Use a 5 mm hex spanner to screw in Postpin axle and fasten slightly.

- 8 Use torque spanner to tighten Postpin axle with 8 Nm.

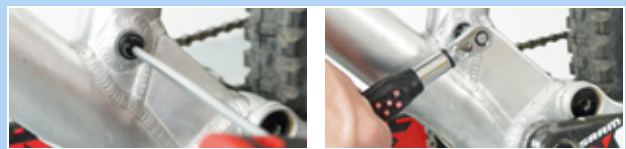


Figure 199: Fastening the Postpin axle



- 9** Carefully insert slide bushing tube into the seat tube.



Figure 200: Inserting the slide bushing tube into the seat tube

- 10** Place outer sleeve on the seat tube and push downwards firmly.



Figure 201: Attaching the outer sleeve

- 11** Turn the outer sleeve so that the outer sleeve mounting hole is aligned with the fastening hole in the frame.
- 12** Use a 3 mm hex spanner to fasten the M5 attachment screw into the outer sleeve.
- 13** Tighten screw gently with a maximum torque of 0.5 Nm.
- ⇒ The screw must easily screw into the outer sleeve without any resistance. If this is not the case, the hole in the frame is not aligned with the mounting hole in the outer sleeve. Turn outer sleeve into the right position.



Figure 202: Fastening the outer sleeve

- 14** Feed height adjustment clamp into the seat tube.

- ⇒ The two height adjustment clamp guides are in the longitudinal grooves inside the seat post.

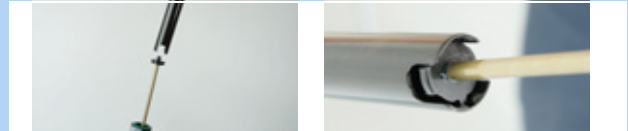


Figure 203: Feeding the height adjustment clamp in

- 15** Push the seat post carefully downwards and feed into the wiper.

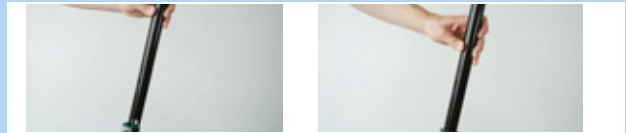


Figure 204: Pushing the seat post downwards

Notice

- ▶ Never let the seat post tube collide with the piston rod. There is a risk of scratches and damage to the piston rod. This will causes loss of air.

- 16** Move operating lever and press seat post downwards to the required height as per the values in the pedelec pass.



Figure 205: Setting the seat post height

- 17** Turn the height adjustment mechanism 45° in a clockwise direction and place in the "Closed position".



Figure 206: Closing the height adjustment



8.5.8.5 Eightpins H01 seat post

Only applies to pedelecs with this equipment

Removing the seat post

- 1 Use a 5 mm hex spanner to unscrew the Postpin axle.

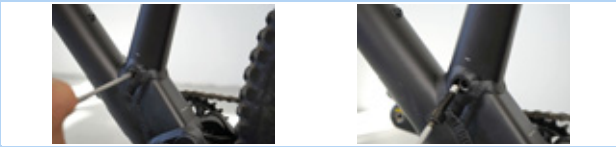


Figure 207: Undoing the seat post

- ▶ Detach Bowden cable from the on-bar remote control on the seat post.
- ▶ Detach the operating lever from the handlebars in the case of under-bar-remote control on the seat post. Activate operating lever. Hold Bowden cable fastener and pull or tilt forwards.

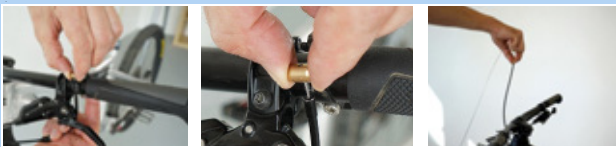


Figure 208: Unfastening the remote control

- 2 Pull seat post slowly out of the frame.

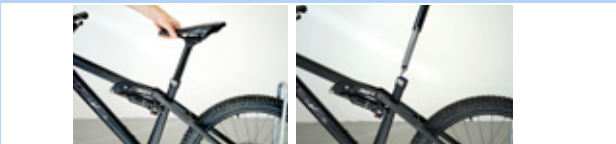


Figure 209: Removing the seat post

- 3 Pull out the special end cap for the outer sleeve from the bracket.
- 4 Detach the Bowden cable head from the hydraulic activation lever bracket.
- 5 If necessary, operate the lever by hand to make more space for detaching it.



Figure 210: Removing the Bowden cable

Removing the outer sleeve and slide bushing

- 1 Use a 3 mm hex spanner to remove attachment screw on the outer sleeve.
- 2 Detach outer sleeve by pulling upwards with your hand.
- 3 Pull slide bushing tube out of the seat tube.



Figure 211: Removing the outer sleeve and slide bushing

Caring for the outer sleeve

- 1 Push the blue wiper towards the edge.
- 2 Detach the seal lip ring.



Figure 212: Detaching the seal lip ring

- 3 Detach spring washer or outer sealing ring.



Figure 213: Removed spring washer



- 4 Carefully remove the wiper from the groove.



Figure 214: Removing the wiper

- 5 Use a small, sharp object to look for and remove the end of the felt ring.
 6 Carefully take out the felt ring.
 7 Remove felt ring.
 8 Clean or replace felt ring.



Figure 215: Removing the felt ring

- 9 Clean inside of outer sleeve with a cloth.

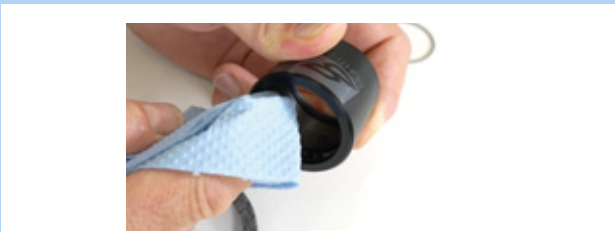


Figure 216: Cleaning the outer sleeve

- 10 Carefully re-insert dry felt ring with one end in the designated groove.
 11 Unfurl felt ring within the outer sleeve, so that it lies on the groove.
 12 Carefully press felt ring into the groove by hand. Ensure that both ends are fully pressed in and meet and that they do not overlap and are not twisted.



Figure 217: Inserting the felt ring

- 13 Insert cleaned or new wiper in the upper groove.

- 14 Stretch spring washer over the wiper.

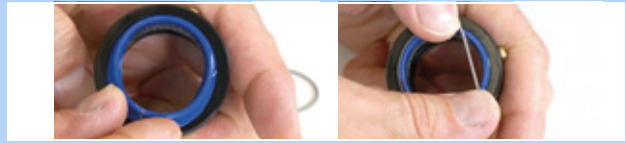


Figure 218: inserting and fastening the wiper



Clean slide bushing

- 1 Clean the slide bushing tube with a damp cloth.

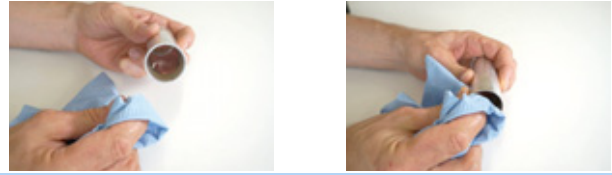


Figure 219: Cleaning the slide bushing tube

Notice

- ▶ Do not squash. The slide bushing tube wall is very thin.

Cleaning and lubricating the guide grooves

- 1 Push the operating lever forwards.



Figure 220: Opening the height adjustment

- 2 Pull seat post out with your hand until it will go no further.

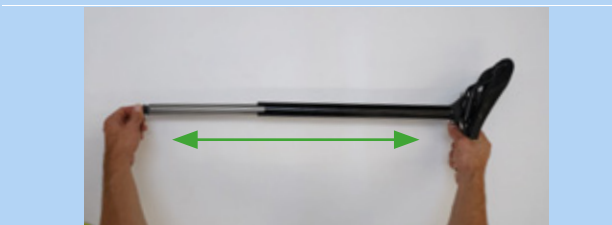


Figure 221: Pulling the seat post out

- 3 Clean the seat post longitudinal grooves with a damp cloth.



Figure 222: Cleaning the longitudinal groove

- 4 Apply grease into the longitudinal groove and on both cross-pieces.



Figure 223: Applying grease

- 5 Push seat post together.

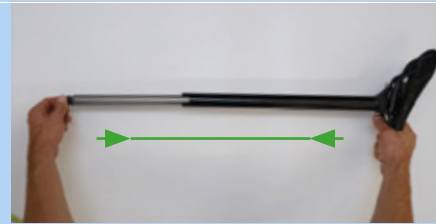


Figure 224: Pushing the seat post together

- 6 Push the height adjustment operating lever backwards.



Figure 225: Closing the height adjustment



installing the outer sleeve and slide bushing

- 1 Carefully push slide bushing tube into the seat tube.
- 2 Press outer sleeve downwards with your hand.
- 3 Use a 3 mm hex spanner to fasten the attachment screw on the outer sleeve.



Figure 226: Fitting the slide bushing and outer sleeve

Fitting the seat post

- 1 Attach Bowden cable head to the hydraulic activation lever bracket.
- 2 Push special end cap for the outer sleeve into the holder on the mounting interface.
- 3 Carefully push the seat post into the frame. In doing so, ensure that the wiper and the slide bushing do not become damaged.



Figure 227: Attaching and pushing in the seat post

- 4 Hold the Bowden cable firmly on the handlebars while feeding it in. Carefully pull the end of the Bowden cable from the frame so that the seat post slides downwards unhindered.



Figure 228: Attaching the end cap

- 5 Look at the frame interface through the hole in the Postpin. Push the seat post down until the Postpin mounting interface on the seat post reaches the Postpin interface on the frame.



Figure 229: Hole in the Postpin interface

- 6 If necessary, turn the seat post slightly and push it to the correct position so that the Postpin axle can be inserted.
- 7 Use a 5 mm hex spanner to screw in Postpin axle and fasten slightly.
- 8 Straighten saddle.
- 9 Use torque spanner to tighten Postpin axle with 8 Nm.

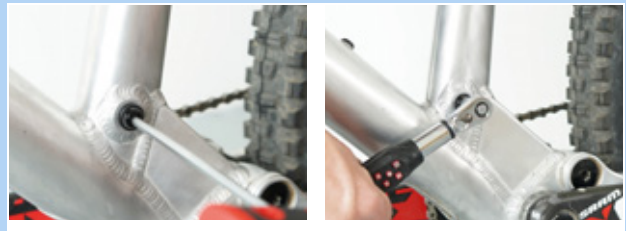


Figure 230: Screwing the seat post into position



8.5.9 Rear frame damper

Only applies to pedelecs with this equipment

WARNING

Injury due to explosion

The air chamber is pressurised. If the air system is serviced in a rear frame damper, it can explode and cause serious injury.

- ▶ Wear safety goggles, protective gloves and safety clothing when assembling or carrying out maintenance on the bicycle.
- ▶ Release the air for the air chambers. Detach all air insert fitments.
- ▶ Never service or dismantle a rear frame damper if it has not completely rebounded.

Intoxication from suspension oil

Suspension oil is poisonous to the touch, irritates respiratory tracts and causes cancer, sterility and mutation in germ cells.

- ▶ Always wear safety goggles and nitrile gloves when carrying suspension oil.
- ▶ Never perform maintenance when you are pregnant.
- ▶ Use an oil catchment tray under the section where the rear frame damper is being serviced.

Intoxication from lubrication oil

The lubrication oil for Eightpins seat posts is toxic if touched or inhaled.

- ▶ Always wear safety goggles and nitrile gloves when working with lubrication oil.
- ▶ Lubricate seat post in the open air or in a well-ventilated room only.
- ▶ Avoid skin coming into contact with lubrication oil. Wear nitrile gloves when lubricating, cleaning and servicing the vehicle.
- ▶ Use an oil catchment tray under the section where the seat post is serviced.

CAUTION

Hazard for the environment due to toxic substances

The rear frame damper contains toxic and environmentally harmful oils and lubricants. Such fluids will contaminate if they enter the sewers or groundwater.

- ▶ Dispose of lubricants and oils left over after repairs in an environmentally responsible way in accordance with statutory regulations.

- 1 Dismantle the rear frame damper.
- 2 Clean and inspect its interior and exterior.
- 3 Recondition air springs.
- 4 Replace airtight seals on air springs.
- 5 Change oil.
- 6 Replace dust wipers.



8.5.9.1 FOX component-specific maintenance

FOX Service must perform maintenance on suspension forks, rear frame dampers and suspension seat posts.

- ▶ Maintenance includes a complete inspection of interiors/exterior.
- ▶ All dampers are reconditioned.
- ▶ The airtight seals are replaced in air suspension forks.
- ▶ The air spring is reconditioned.
- ▶ The oil is changed.
- ▶ The dust wipers are replaced.

More information at:

www.foxracingshox.de/service

9 Troubleshooting, fault clearance and repair

9.1 Troubleshooting and fault clearance

The components of the drive system are constantly checked automatically. If an error is detected, an error message appears on the *on-board computer*. The drive may be shut off automatically, depending on the type of error.

9.1.1 Drive system or on-board computer does not start up

If the on-board computer and/or the drive system do not start up, proceed as follows:

- 1 Check whether the battery is switched on. If not, start the battery.
⇒ Contact specialist dealer if the LEDs on the battery level indicator do not light up.
- 2 If the LEDs on the battery level indicator light up, but the drive system does not start up, remove the battery.
- 3 Insert the battery.
- 4 Start the drive system.
- 5 If the drive system does not start up, remove the battery.
- 6 Clean all the contacts with a soft cloth.
- 7 Insert the battery.
- 8 Start the drive system.
- 9 If the drive system does not start up, remove the battery.
- 10 Fully charge the battery.
- 11 Insert the battery.
- 12 Start the drive system.
- 13 If the drive system does not start up, remove the on-board computer.
- 14 Fasten on-board computer.
- 15 Start the drive system.
- 16 Contact your specialist dealer if the drive system does not start up.

9.1.2 Error message

If an error message is displayed, run through the following actions:

- 1 Make a note of the system message. There is a table containing all system messages in [Section 6.3.1](#).
- 2 Shut off and re-start the drive system.
- 3 If the system message is still displayed, remove the battery and then re-insert.
- 4 Re-start the drive system.
- 5 If the system message is still displayed, contact your specialist dealer.

9.1.3 Assistance function errors

Symptom	Cause	Remedy
Assistance is not available.	Is the battery charged sufficiently?	<ol style="list-style-type: none"> 1 Check battery is charged. 2 Recharge the battery if it is almost flat.
	Riding up long inclines in summer weather or riding with a heavy load for a long time. The battery may be too hot.	<ol style="list-style-type: none"> 1 Switch off the drive system. 2 Wait a moment and then check again.
	The rechargeable battery, the on-board computer or the assistance switch may be connected incorrectly, or one or more of them may have a problem.	▶ Contact specialist dealer.
	Is the speed too high?	▶ Check on-board computer indicators. The electronic gear assistance only works up to a maximum speed of 25 km/h.
Assistance is not available.	Are the pedals being pushed?	▶ The pedelec is not a motorbike. Push the pedals.
	Is the assistance mode set to [OFF]?	<ol style="list-style-type: none"> 1 Set the assistance mode to a different level of assistance than [OFF]. 2 Contact your specialist dealer if you still feel that the no assistance is being supplied.
	Is the system switched on?	▶ Press the battery on-off button to switch it on again.
The assisted journey distance is too short.	The journey distance can be shorter depending on the road conditions, the gear level and the entire light usage time.	<ol style="list-style-type: none"> 1 Check battery is charged. 2 Recharge the battery if it is almost flat.
	The battery does not perform as well in winter weather.	This does not indicate a problem.
	The battery is a consumable. Repeated charging and long periods of use cause the battery to degrade (loss of power).	▶ If the distance you can cover with one single charge is very short, replace the battery with a new one.
	Is the battery fully charged?	▶ If the distance covered with a fully charged battery has become shorter, the battery may be affected. Replace the battery with a new one.
It is difficult to pedal.	Are the tyres pumped to an adequate pressure?	▶ Pump up tyres.
	Is the assistance mode set to OFF?	<ol style="list-style-type: none"> 1 Set level of assistance to [BOOST]. 2 Contact your specialist dealer if you still feel that the no assistance is being supplied.
	The battery charge might be low.	▶ Check how powerful assistance is again after charging the battery. If there is still no assistance, contact your specialist dealer.
	Have you switched on the system with your foot on the pedal?	<ol style="list-style-type: none"> 1 Switch system on again without applying pressure to the pedal. If assistance is still not supplied, contact your specialist dealer.

Table 64: Level of assistance error solution

9.1.4 Battery error

Symptom	Cause	Remedy
The battery discharges quickly.	The battery may be at the end of its useful life.	► Replace old battery with new one.
The battery cannot be recharged.	Is the charger mains plug firmly connected to the socket?	<ol style="list-style-type: none"> 1 Disconnect the charger mains plug and plug it in again. 2 Repeat charging process. 3 If the battery still won't recharge, contact your specialist dealer.
	Is the charger plug firmly connected to battery?	<ol style="list-style-type: none"> 1 Disconnect the charger mains plug and plug it in again. 2 Repeat charging process. 3 If the battery still won't recharge, contact your specialist dealer.
	Is the adapter firmly connected to the charger plug or the battery's charging port?	<ol style="list-style-type: none"> 1 Connect the adapter firmly to the charger plug or the battery charging port. 2 Start the charging process again. 3 If the battery still won't recharge, contact your specialist dealer.
	Is the battery, the connection terminal for the battery charger, the charger adapter or the battery dirty?	<ol style="list-style-type: none"> 1 Wipe with a dry cloth to clean the connection terminals. 2 Repeat charging process. 3 If the battery still won't recharge, contact your specialist dealer.
The battery does not start charging when the charger is connected.	The battery may be at the end of its useful life.	► Replace old battery with new one.
The battery and charger become hot.	The temperature of the battery or the charger may have exceeded the operating temperature range.	<ol style="list-style-type: none"> 1 Interrupt charging process. 2 Wait a moment. 3 Repeat charging process. 4 If the battery is too hot to touch, there might be a problem with the battery. Contact specialist dealer.
The charger is hot.	If the charger is used continuously to charge batteries, it may become hot.	<ol style="list-style-type: none"> 1 Wait a moment. 2 Start the charging process again.
The LED on the charger does not light up.	Is the charger plug firmly connected to battery?	<ol style="list-style-type: none"> 1 Check connection for any contaminants. 2 Insert charger plug again. 3 Contact your specialist dealer if there is no change.
	Is the battery fully charged?	<ol style="list-style-type: none"> 1 The LED on the charger will go out when the battery is fully charged. This is not a malfunction. 2 Disconnect charger mains plug. 3 Insert mains plug again. 4 Repeat charging process. 5 Contact your specialist dealer if the LED on the charger still doesn't light up. Contact specialist dealer.
The battery cannot be removed.		► Contact your specialist retailer.
The battery cannot be inserted.		► Contact your specialist dealer.
Fluid is leaking from the battery.		► Observe all the warnings in Section 2 Safety.

Table 65: Error solution for battery

Symptom	Cause	Remedy
There is an unusual smell.		<ol style="list-style-type: none"> 1 Remove from the battery immediately. 2 Contact the fire service immediately. 3 Observe all the warnings in Section 2 Safety.
Fumes are emitted from the battery.		<ol style="list-style-type: none"> 1 Remove from the battery immediately 2 Contact the fire service immediately. 3 Observe all the warnings in Section 2 Safety.

Table 65: Error solution for battery

9.1.5 On-board computer error

Symptom	Cause	Remedy
No data are shown on the monitor when you press the on-off button on the battery.	The battery may not be charged enough.	<ol style="list-style-type: none"> 1 Charge the battery. 2 Switch on the power.
	Is the power switched on?	▶ Press the on-off button to switch the power on.
	Is the battery charged?	▶ If the battery is fitted to the pedelec and is being charged, it cannot be switched on. Interrupt charging.
	Is the connector fitted to the power cable correctly?	▶ Check that the power cable connector has not been disconnected. Contact your specialist dealer if this is not the case.
	A component may be connected which the system is unable to recognise.	▶ Contact specialist dealer.
The gear level is not shown on the on-board computer.	The gear level is only shown if the electronic gear shift is used.	▶ Check that the power cable connector has not been disconnected. Contact your specialist dealer if this is not the case.
The settings menu cannot be opened while you are pedalling.	The product is designed in such a way that the settings menu cannot be opened if the system detects that someone is riding the pedelec. This is not a malfunction.	▶ Stop pedelec and change settings.
The time display is flashing "0:00".	The on-board computer battery has come to the end of its service life.	▶ Contact specialist dealer.

Table 66: On-board computer error solution

9.1.6 Lighting does not work

Symptom	Cause	Remedy
The front light or rear light does not go on, even when the switch is pressed.	The basic settings in the electric drive system have probably been configured incorrectly. The light is defective.	<ol style="list-style-type: none"> 1 Take pedelec out of service immediately. 2 Contact specialist dealer.

Table 67: Lighting error solution

9.1.7 Other drive system errors

Symptom	Cause	Remedy
Two beeps will sound if a switch is pressed but the switch cannot be operated.	Pressed switch mode has been deactivated.	▶ This is not a malfunction.
Three beeps are sounded.	A fault or warning has occurred.	▶ This occurs when a warning or an error is shown on the on-board computer. Follow the instructions for the code in Section 6.2 System Messages.
If an electronic gear shift is used, pedal assistance becomes weaker when the gear is changed.	This is because the computer sets the pedal assistance to the optimum level.	▶ This is not a malfunction.
A noise can be heard after switching.		▶ Contact specialist dealer.
It is normal to hear a noise coming from the rear wheel when cycling as normal.	The gear shift setting may not have been made properly.	▶ Contact specialist dealer.
If the pedelec is brought to a stop, gear transmission does not switch to the position pre-configured in the functional feature.	You may have applied too much pressure on the pedals.	▶ It is easier to change gears if you press onto the pedals gently.

Table 68: Other drive system errors

9.1.8 Suntour suspension fork

9.1.8.1 Rebound too fast

The suspension fork rebounds too quickly, producing a "pogo stick" effect, where the wheel lifts from the ground in an uncontrolled way. This impairs traction and control (blue line).

Fork head and handlebars are deflected upwards if the wheel bounces back from the ground. Body weight may be thrown up and back in an uncontrolled way (green line).

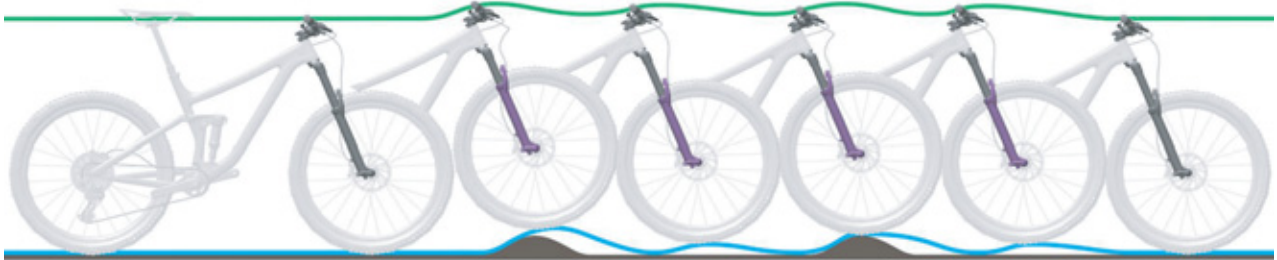


Figure 231: Suspension fork rebounding too quickly

Solution

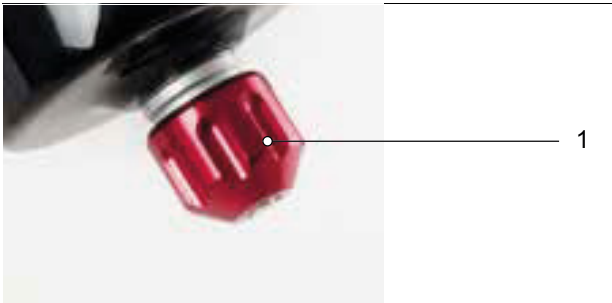


Figure 232: Suntour rebound screw (1)

- ▶ Turn **rebound screw** in a clockwise direction.
- ⇒ The rebound speed is decreased (slower return).

9.1.8.2 Rebounding too slowly

The fork does not rebound quickly enough after absorbing a bump. The fork also remains deflected over subsequent bumps, which reduces deflection and increases the hardness of impacts. Available deflection, traction and control decrease (blue line).

The fork remains in a deflected state, causing the headset and handlebars to move to a lower position. Body weight is shifted forward after the impact (green line).



Figure 233: Suspension fork rebounding too slowly

Solution



Figure 234: Suntour rebound screw (1)

- ▶ Turn **rebound screw** in an anti-clockwise direction.
- ⇒ The rebound speed is increased (faster return).

9.1.8.3 Suspension too soft on inclines

The fork deflects at a low point in the terrain. The deflection is quickly used up, body weight shifts forward and the pedelec loses some momentum.

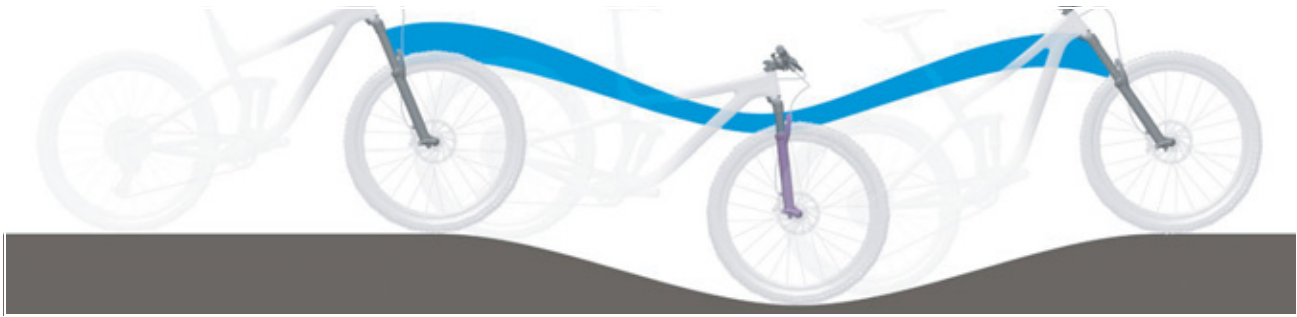


Figure 235: Excessively soft suspension in the suspension fork on hilly terrain

Solution



Figure 236: Changing compression adjuster to a harder setting

- ▶ Turn **compression adjuster** in a clockwise direction towards **LOCK**.
- ⇒ The damping and compression hardness are increased and the deflection stroke speed. Efficiency on hilly and flat terrain is improved.

9.1.8.4 Excessively hard damping on bumps

When the bike hits a bump, the fork deflects too slowly and the wheel lifts up from the bump. Traction decreases when the wheel no longer touches the ground.

The headset and handlebars are deflected upwards significantly, which can impair control.

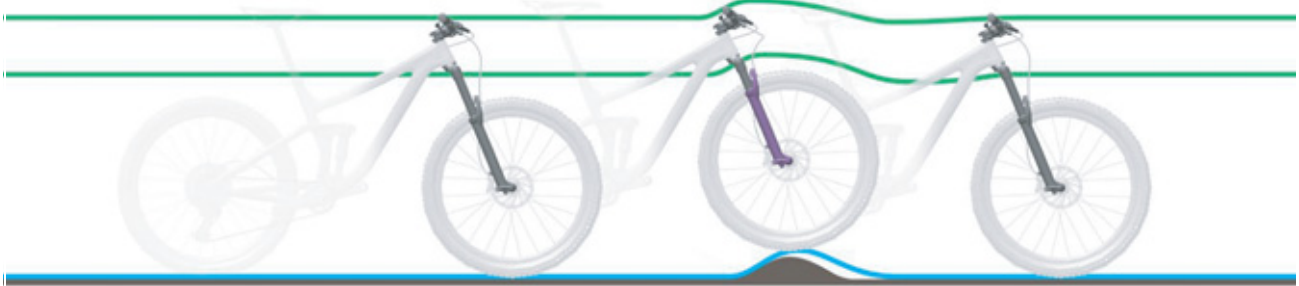


Figure 237: Excessively hard damping in the suspension fork on bumps

Solution

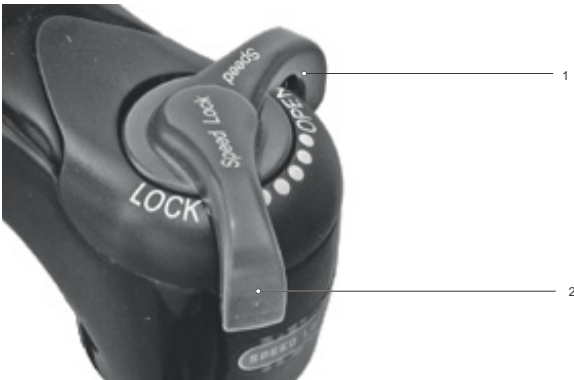


Figure 238: Changing compression adjuster to a softer setting

- ▶ Turn **compression adjuster** in a clockwise direction towards OPEN.
- ⇒ The damping and compression hardness reduces and the deflection stroke speed is reduced. Sensitivity to small bumps is increased.

9.2 Repair

Special expertise and tools are required for many repairs. For this reason, repairs may only be carried out at a specialist dealer. These include:

- Replacing tyres and rims
- Replacing rims, brake linings and brake discs
- Replacing and tensioning the chain.

9.2.1 Original parts and lubricants

The individual pedelec parts have been carefully selected and matched to one other.

Only original parts and lubricants must be used for maintenance and repair.

The constantly updated accessory approval and parts lists are in Section 11, Documents and Drawings.

- ▶ Follow the operating instructions for the new components.

9.2.2 Replacing the lighting

- ▶ Only use components of the respective power class for replacement.

9.2.3 Setting the front light

- ▶ The *front light* must be set so that its light beam shines on the road 10 m in front of the pedelec.

9.2.4 Checking tyre clearance

The tyre needs to be checked each time a suspension fork tyre is changed to another size.

- 1 Release pressure from the fork.
- 2 Press fork together fully.
- 3 Measure the gap between the top of the tyre and the crown's lower surface. The gap must not be less than 10 mm. If the tyre is too large, the tyre will touch the crown's lower surface if the fork is fully pressed together.
- 4 Release pressure on fork and pump it up again if it is an air suspension fork.
- 5 Take into account the fact that the gap will be smaller if there is a guard. Check again to ensure that there is sufficient clearance for the tyre.

10 Recycling and disposal



This device is marked according to the European Directive 2012/19/EU on waste electrical and electronic equipment – WEEE and the European



Directive 2006/66/EC on accumulators. The directive provides the framework for the return and recycling of used devices

across the EU. Consumers are legally required to return all used batteries of any type. It is forbidden to dispose of batteries in domestic waste.

The battery manufacturer is legally obliged to take back used and old batteries free of charge according to Section 9 German Batteries Act. The pedelec frame, battery, motor, on-board computer and charger are recyclable materials. You must dispose of and recycle them separately from the domestic waste in compliance with applicable statutory regulations. Separate collection and

recycling saves reserves of raw materials and ensures that all the regulations for protection of health and the environment are adhered to when recycling the product and/or the battery.

- ▶ Never dismantle the pedelec, battery or charger for disposal.

The pedelec, on-board computer, the unopened and undamaged battery and the charger can be returned to any specialist dealer free of charge. Further disposal options may be available, depending on the region.

- ▶ Store the individual parts of the decommissioned pedelec in a dry place, free from frost, where they are protected from direct sunlight.

10.1 Removal of waste guidelines

Waste type	Disposal
Non-hazardous waste	
Recycling	
Waste paper, cardboard	Return paper collection bin, paper container, undamaged transport packaging to suppliers
Scrap metal and aluminium	Take to municipal collection points or have collected by waste disposal companies
Tyres, tubes	Tyre manufacturers' collection points, collection forms and fax templates available from tyre manufacturers Otherwise, residual waste bin (grey bin)
Fibre composite components (e.g. carbon, GRP)	Large carbon components such as defective frames and carbon rims can be sent to special collection points for recycling; see www.cfk-recycling.de/index.php?id=57
Dual system sales packaging made of plastic, metal and composite material, lightweight packaging	Collection by waste disposal firm where applicable; return transport packaging to suppliers Plastic waste bin (yellow bin)
CDs, DVDs	Take to municipal collection points since they are made of high-grade plastic and are easy to recycle Otherwise, residual waste bin (grey bin)

Dispose of

Table 69: Removal of waste guidelines


Waste type	Disposal
Residual waste	Residual waste bin (grey bin)
Biodegradable lubricants Biodegradable oils Biodegradable cleaning cloths daubed in oil	Residual waste bin (grey bin)
Filament lamps, halogen lamps	Residual waste bin (grey bin)
Hazardous waste	
 Recycling	
Batteries, rechargeable batteries	Return to the battery manufacturer.
Electric devices: Motor Display Control panel Wiring	Take to a municipal collection point for electronic waste.
Dispose of	
Waste oil Cleaning cloths daubed in oil Lubrication oil Gear oil Lubricating grease Cleaning fluids Kerosene White spirit Hydraulic fluid Brake fluid	<p>Never mix different oil fluids. Store in original container.</p> <p>Small quantities (usually <30 kg) Take to municipal collection points for hazardous waste (e.g. mobile toxic waste collection service)</p> <p>Larger quantities (>30 kg) Collection by waste disposal companies</p>
Paints Varnishes Thinners	Take to municipal collection points for hazardous waste (e.g. mobile toxic waste collection service).
Neon lights, energy-saving lamps	Take to municipal collection points for hazardous waste (e.g. mobile toxic waste collection service).

Table 69: Removal of waste guidelines



11 Documents

11.1 Assembly report

Date:

Frame number:

Components	Description		Criteria		Measures if rejected
	Assembly/inspection	Tests	Acceptance	Rejection	
Front wheel	Assembly		O.K.	Loose	Adjust quick release
Kickstand	Check mount fastening	Functional check	O.K.	Loose	Retighten screws
Tyres		Tyre pressure check	O.K.	Tyre pressure too low/ too high	Adjust tyre pressure
Frame	Check for damage – fracture, scratches		O.K.	Damage detected	<i>Take out of operation</i> , new frame
Handles, coverings	Check mount fastening		O.K.	Not provided	Retighten screws, new handles and coverings as specified in parts list
Handlebars, stem	Check mount fastening		O.K.	Loose	Retighten screws; new stem as specified in parts list if necessary
Steering headset	Check for damage	Functional check	O.K.	Loose	Retighten screws
Saddle	Check mount fastening		O.K.	Loose	Retighten screws
Seat post	Check mount fastening		O.K.	Loose	Retighten screws
Guard	Check mount fastening		O.K.	Loose	Retighten screws
Pannier rack	Check mount fastening		O.K.	Loose	Retighten screws
Attachments	Check mount fastening		O.K.	Loose	Retighten screws
Bell		Functional check	O.K.	No ring, too quiet, missing	New bell as specified in the parts list
Suspension elements					
Fork, suspension fork	Check for damage		O.K.	Damage detected	New fork as specified in the parts list
Rear frame damper	Check for damage		O.K.	Damage detected	New fork as specified in the parts list
Suspension seat post	Check for damage		O.K.	Damage detected	New fork as specified in the parts list
Brake system					
Brake lever	Check mount fastening		O.K.	Loose	Retighten screws
Brake fluid	Check fluid level		O.K.	Too little	Refill with brake fluid; new brake hoses if damaged
Brake linings	Check brake linings, brake discs and rims for damage		O.K.	Damage detected	New brake linings, brake discs and rims
Back-pedal brake braking armature	Check mount fastening		O.K.	Loose	Retighten screws
Light system					
Rechargeable battery	First examination		O.K.	Error message	<i>Take out of service</i> ; contact battery manufacturer, new battery
Light cabling	Connections, correct wiring		O.K.	Cable defective, no light	New cabling
Rear light	Side light	Functional check	O.K.	No constant light	<i>Take out of service</i> ; new rear light as specified in parts list; replace if necessary
Front light	Side light, daytime riding light	Functional check	O.K.	No constant light	<i>Take out of service</i> ; new front light as specified in parts list; replace if necessary



Components	Description		Criteria	Measures if rejected
Reflectors	All complete, state, fastening		O.K.	Damaged or not all complete New reflectors
Drive/gear shift				
Chain/cassette/pinion/chainring	Check for damage		O.K.	Damage Refasten if necessary or replace as specified in parts list
Chain guard/spoke guard	Check for damage		O.K.	Damage Replace as specified in parts list
Bottom bracket axle/crank	Check mount fastening		O.K.	Loose Retighten screws
Pedals	Check mount fastening		O.K.	Loose Retighten screws
Shifter	Check mount fastening	Functional check	O.K.	Loose Retighten screws
Shift cables	Check for damage	Functional check	O.K.	Loose and defective Adjust shift cables; new shift cables if necessary
Front derailleur	Check for damage	Functional check	O.K.	Gear shift difficult or not possible Adjust
Rear derailleur	Check for damage	Functional check	O.K.	Gear shift difficult or not possible Adjust
Electric drive				
On-board computer	Check for damage	Functional check	O.K.	No screen, defective screen display Restart, test battery, new software or new on-board computer, <i>decommissioning</i>
Electric drive control panel	Drive Check for damage	Functional check	O.K.	No response Restart; contact control panel manufacturer, new control panel
Tachometer		Speed measurement	O.K.	Pedelec travelling 10 % too fast/slow Take pedelec out of service until the source of the error is found
Cabling	Visual inspection		O.K.	Failure in system, damage, kinked cables New cabling
Battery mount	Firmly in position, lock, contacts	Functional check	O.K.	Loose; lock doesn't close, no contacts New battery mount
Motor	Visual inspection and mount		O.K.	Damage, loose Refasten motor, contact motor manufacturer, new motor
Software	Check version		In latest version	Not latest version Import update

Technical inspection, checking safety, test ride

Components	Description		Criteria		Measures if rejected
	Assembly/inspection	Tests	Acceptance	Rejection	
Brake system		Functional check	O.K.	No full braking; braking distance too long	Locate defective part in brake system and correct
Gear shift under operating load		Functional check	O.K.	Problems when shifting gear	Readjust gear shift
Suspension components (fork, shock absorber, seat post)		Functional check	O.K.	Suspension too deep or no longer exists	Locate defective component and correct
Electric drive		Functional check	O.K.	Loose connection, problems when riding, accelerate	Locate defective part in electric drive and correct
Lighting system		Functional check	O.K.	No continuous light, not bright enough	Locate defective part in lighting system and correct
Test ride			No strange noises	Strange noises	Locate source of noise and correct

Date:	
Fitter's name:	
Final inspection by workshop manager	



11.2 Maintenance instructions

Diagnosis and documentation of current status

Date:

Frame number:

Components	Frequency	Description			Criteria		Measures if rejected
		Inspection	Tests	Maintenance	Acceptance	Rejection	
Front wheel	6 months	Assembly			O.K.	Loose	Adjust quick release
Kickstand	6 months	Check mount fastening	Functional check		O.K.	Loose	Retighten screws
Tyres	6 months		Tyre pressure check		O.K.	Tyre pressure too low/ too high	Adjust tyre pressure
Frame	6 months	Check for damage – fracture, scratches			O.K.	Damage detected	Take pedelec out of service, new frame
Handles, coverings	6 months	Wear; check if fastened securely			O.K.	Not provided	Retighten screws, new handles and coverings as specified in parts list
Handlebars, stem	6 months	Check mount fastening			O.K.	Loose	Retighten screws; new stem as specified in parts list if necessary
Steering headset	6 months	Check for damage	Functional check	Lubricating and adjustment	O.K.	Loose	Retighten screws
Saddle	6 months	Check mount fastening			O.K.	Loose	Retighten screws
Seat post	6 months	Check mount fastening			O.K.	Loose	Retighten screws
Guard	6 months	Check mount fastening			O.K.	Loose	Retighten screws
Pannier rack	6 months	Check mount fastening			O.K.	Loose	Retighten screws
Attachments	6 months	Check mount fastening			O.K.	Loose	Retighten screws
Bell	6 months		Functional check		O.K.	No ring, too quiet, missing	New bell as specified in the parts list
Suspension elements							
Fork, suspension fork	To manufacturer's specifications*	Check for damage, corrosion, fracture		Maintenance as specified by manufacturer Lubrication, oil change as specified by manufacturer	O.K.	Damage detected	New fork as specified in the parts list
Rear frame damper	To manufacturer's specifications*	Check for damage, corrosion, fracture		Maintenance as specified by manufacturer Lubrication, oil change as specified by manufacturer	O.K.	Damage detected	New fork as specified in the parts list
Suspension seat post	To manufacturer's specifications*	Check for damage		Maintenance as specified by manufacturer	O.K.	Damage detected	New fork as specified in the parts list
Brake system							
Brake lever	6 months	Check mount fastening			O.K.	Loose	Retighten screws
Brake fluid	6 months	Check fluid level		Depending on time of year	O.K.	Too little	Top up brake fluid; take <i>Pedelec out of service</i> if damaged; new brake hoses
Brake linings	6 months	Check brake linings, brake discs and rims for damage			O.K.	Damage detected	New brake linings, brake discs and rims
Back-pedal brake braking armature	6 months	Check mount fastening			O.K.	Loose	Retighten screws
Brake system	6 months	Check mount fastening		Functional check	O.K.	Loose	Retighten screws
* see Section 8.1							



Components	Frequency	Description			Criteria		Measures if rejected
		Inspection	Tests	Maintenance	Acceptance	Rejection	
Lighting system							
Rechargeable battery	6 months	First examination			O.K.	Error message	Contact battery manufacturer; <i>take out of service</i> , new battery
Light cabling	6 months	Connections, correct wiring			O.K.	Cable defective, no light	New cabling
Rear light	6 months	Side light	Functional check		O.K.	No constant light	New rear light as specified in parts list; replace if necessary
Front light	6 months	Side light, daytime riding light	Functional check		O.K.	No constant light	New front light as specified in parts list; replace if necessary
Reflectors	6 months	All complete, state, fastening			O.K.	Damaged or not all complete	New reflectors
Drive/gear shift							
Chain/cassette/pinion/chainring	6 months	Check for damage			O.K.	Damage	Refasten if necessary or replace as specified in parts list
Chain guard/spoke guard	6 months	Check for damage			O.K.	Damage	Replace as specified in parts list
Bottom bracket axle/crank	6 months	Check mount fastening			O.K.	Loose	Retighten screws
Pedals	6 months	Check mount fastening			O.K.	Loose	Retighten screws
Shifter	6 months	Check mount fastening	Functional check		O.K.	Loose	Retighten screws
Shift cables	6 months	Check for damage	Functional check		O.K.	Loose and defective	Adjust shift cables; new shift cables if necessary
Front derailleur	6 months	Check for damage	Functional check		O.K.	Gear shift difficult or not possible	Adjust
Rear derailleur	6 months	Check for damage	Functional check		O.K.	Gear shift difficult or not possible	Adjust
Electric drive							
On-board computer	6 months	Check for damage	Functional check		O.K.	No screen, defective screen display	Restart, test battery, new software or new on-board computer, <i>decommissioning</i> ,
Electric drive control panel	6 months	Drive Check for damage	Functional check		O.K.	No response	Restart; contact control panel manufacturer, new control panel
Tachometer	6 months		Speed measurement		O.K.	Pedelec travelling 10 % too fast/slow	Take pedelec out of service until the source of the error is found
Cabling	6 months	Visual inspection			O.K.	Failure in system, damage, kinked cables	New cabling
Battery mount	6 months	Firmly in position, lock, contacts	Functional check		O.K.	Loose; lock doesn't close, no contacts	New battery mount
Motor	6 months	Visual inspection and mount			O.K.	Damage, loose	Refasten motor, contact motor manufacturer, new motor; <i>take out of service</i>
Software	6 months	Check version			In latest version	Not latest version	Import update



Technical inspection, checking safety, test ride

Components	Description		Criteria		Measures if rejected
	Assembly/inspection	Tests	Acceptance	Rejection	
Brake system	6 months	Functional check	O.K.	No full braking; braking distance too long	Locate defective part in brake system and correct
Gear shift under operating load	6 months	Functional check	O.K.	Problems when shifting gear	Readjust gear shift
Suspension components (fork, shock absorber, seat post)	6 months	Functional check	O.K.	Suspension too deep or no longer exists	Locate defective component and correct
Electric drive	6 months	Functional check	O.K.	Loose connection, problems when riding, accelerate	Locate defective part in electric drive and correct
Lighting system	6 months	Functional check	O.K.	No continuous light, not bright enough	Locate defective part in lighting system and correct
Test ride	6 months	Functional check	No strange noises	Strange noises	Locate source of noise and correct

Date:	
Fitter's name:	
Final inspection by workshop manager	



Notes

11.3 Parts list

11.3.1 E-Imperial I-10

22-P-0010, 22-P-0011

Fork	SR Suntour, NEX-E25, 63 mm deflection, adjustable, advanced,
Damper	...
Steering headset	Integrated, tapered
Handlebars	ZECURE, HD, 31.8 mm, 20 mm high, 35° handle bracket
Handles	ERGO, with integrated clamping
Stem	Ahead stem, adjustable
Saddle	SELLE BASSANO, Superma, City
Seat post	ZECURE, HD001, aluminium, 300 mm, Ø31.6 mm
Saddle clamp	QR, black
Crank set	SAMOX, EC38, 170
Pedals	MARWI, SP828, aluminium
Rear derailleur	SHIMANO, Deore M5120, 10 gears
Shifter	SHIMANO, Deore SL-M4100, shifter
Front derailleur	#
Cassette/cassette sprocket	SHIMANO, Deore CS-M4100, 11-42T
Chain	KMC, X10E, chain
Belt	...
Front brake	SHIMANO, MT410; hydraulic disc brake
Rear brake	SHIMANO, MT410; hydraulic disc brake
Brake lever, front/rear	SHIMANO, BL-MT402, shifter
Disc, front	SHIMANO, SM-RT54, 180 mm
Disc, rear	SHIMANO, SM-RTC60, 180 mm
Wheel set	...
Rim, front/rear	RYDE, Andra 40, 28"
Hub, front	#
Hub, rear	SHIMANO, FH-M4050, cassette hub, quick release, centre lock, 10 speeds
Spokes	Stainless steel, 2 mm
Tyres	SCHWALBE, Marathon Plus, Performance Line, SmartGuard, 47-559
Hose	SCHWALBE, AV 17, #
Front light	Hercules, FH 100, LED, up to 100 lux
Rear lamp	Ivalo, #, LED, integrated into the pannier rack
Dynamo	...
Pannier rack	Racktime, with SnapIt system, aluminium, with integrated rear light
Guards	SKS, A53, plastic
Chain guard	HORN, Catena 08, #
Lock	ABUS, Pro Shield 5850, with simultaneous locking battery lock
Stand/stand mount	PLETSCHER, Comp Flex 40, #
Motor	BOSCH, Performance Line, BDU363, 250 watt, 65 Nm
Battery manufacturer name	BOSCH, PowerTube 625, 625 Wh
On-board computer	BOSCH, Intuvia, BUI255, with Intuvia control panel
Charger	BOSCH, Compact Charger, BCS230, 2 A

...not available

Not yet available when the instructions were produced

11.3.2 E-Imperial I-F5

22-P-0008, 22-P-0009

Fork	SR Suntour, NEX-E25, 63 mm deflection, adjustable, advanced,
Damper	...
Steering headset	Integrated, tapered
Handlebars	ZECURE, HD, 31.8 mm, 20 mm high, 35° handle bracket
Handles	ERGON, GP-1, #
Stem	Ahead stem, adjustable
Saddle	SELLE BASSANO, Superma, City
Seat post	ZECURE, HD001, aluminium, 300 mm, Ø31.6 mm
Saddle clamp	QR, black
Crank set	SAMOX, EC38, 170
Pedals	MARWI, SP828, aluminium
Rear derailleur	...
Shifter	SHIMANO, Deore SL-M6000, shifter
Front derailleur	...
Cassette/cassette sprocket	GATES, CDX, 28T
Chain	...
Belt	GATES, CDX, belt
Front brake	SHIMANO, MT410; hydraulic disc brake
Rear brake	SHIMANO, MT410; hydraulic disc brake
Brake lever, front/rear	SHIMANO, BL-MT402, shifter
Disc, front	SHIMANO, SM-RT54, 180 mm
Disc, rear	SHIMANO, SM-RTC60, 180 mm
Wheel set	...
Rim, front/rear	RYDE, Andra 40, 28"
Hub, front	#
Hub, rear	SHIMANO, Nexus SG-C7000-5D, gear hub, 5 speeds
Spokes	Stainless steel, 2 mm
Tyres	SCHWALBE, Marathon Plus, Performance Line, SmartGuard, 47-559
Hose	SCHWALBE, AV 17, #
Front light	Hercules, FH 100, LED, up to 100 lux
Rear lamp	Ivalo, #, LED, integrated into the pannier rack
Dynamo	...
Pannier rack	Racktime, with SnapIt system, aluminium, with integrated rear light
Guards	SKS, A53, plastic
Chain guard	HORN, Catena 08, #
Lock	ABUS, Pro Shield 5850, with simultaneous locking battery lock
Stand/stand mount	PLETSCHER, Comp Flex 40, #
Motor	BOSCH, Performance Line, BDU363, 250 watt, 65 Nm
Battery manufacturer name	BOSCH, PowerTube 625, 625 Wh
On-board computer	BOSCH, Intuvia, BUI255, with Intuvia control panel
Charger	BOSCH, Compact Charger, BCS230, 2 A

...not available

Not yet available when the instructions were produced

11.3.3 E-Imperial I-R5

22-P-0006, 22-P-0007

Fork	SR Suntour, NEX-E25, 63 mm deflection, adjustable, advanced,
Damper	...
Steering headset	Integrated, tapered
Handlebars	ZECURE, HD, 31.8 mm, 20 mm high, 35° handle bracket
Handles	ERGON, GP-1, #
Stem	Ahead stem, adjustable
Saddle	SELLE BASSANO, Superma, City
Seat post	ZECURE, HD001, aluminium, 300 mm, Ø31.6 mm
Saddle clamp	QR, black
Crank set	SAMOX, EC38, 170
Pedals	MARWI, SP828, aluminium
Rear derailleur	...
Shifter	SHIMANO, #, Revoshift twist grip
Front derailleur	...
Cassette/cassette sprocket	GATES, CDX, 28T
Chain	...
Belt	GATES, CDX, belt
Front brake	SHIMANO, MT410; hydraulic disc brake
Rear brake	SHIMANO, MT410; hydraulic disc brake
Brake lever, front/rear	SHIMANO, BL-MT402, shifter
Disc, front	SHIMANO, SM-RT54, 160 mm
Disc, rear	SHIMANO, SM-RTC60, 180 mm
Wheel set	...
Rim, front/rear	RYDE, Andra 40, 28"
Hub, front	#
Hub, rear	SHIMANO, Nexus SG-C7050-5C, gear hub, back-pedal brake, 5 speeds
Spokes	Stainless steel, 2 mm
Tyres	SCHWALBE, Marathon Plus, Performance Line, SmartGuard, 47-559
Hose	SCHWALBE, AV 17, #
Front light	Hercules, FH 100, LED, up to 100 lux
Rear lamp	Ivalo, #, LED, integrated into the pannier rack
Dynamo	...
Pannier rack	Racktime, with SnapIt system, aluminium, with integrated rear light
Guards	SKS, A53, plastic
Chain guard	HORN, Catena 08, #
Lock	ABUS, Pro Shield 5850, with simultaneous locking battery lock
Stand/stand mount	PLETSCHER, Comp Flex 40, #
Motor	BOSCH, Performance Line, BDU363, 250 watt, 65 Nm
Battery manufacturer name	BOSCH, PowerTube 625, 625 Wh
On-board computer	BOSCH, Intuvia, BUI255, with Intuvia control panel
Charger	BOSCH, Compact Charger, BCS230, 2 A

...not available

Not yet available when the instructions were produced

11.3.4 E-Imperial 180 S F5

22-P-0014, 22-P-0015

Fork	SR Suntour, NEX-E25, 63 mm deflection, adjustable, advanced,
Damper	...
Steering headset	Integrated, tapered
Handlebars	ZECURE, HD, aluminium, 31.8, 20 mm high, 15° handle angle
Handles	ERGO, with integrated clamping
Stem	Ahead stem, adjustable
Saddle	SELLE BASSANO, Superma, City
Seat post	ZECURE, HD001, aluminium, 350 mm, Ø30.9 mm
Saddle clamp	QR, black
Crank set	FSA, CK-220, 170
Pedals	MARWI, SP828, aluminium
Rear derailleur	...
Shifter	SHIMANO EZ-FIRE Plus ST-EF41, shifter
Front derailleur	...
Cassette/cassette sprocket	Shimano, #, 27T
Chain	KMC, Z610, chain
Belt	...
Front brake	MAGURA, HS-22, hydraulic rim brake
Rear brake	MAGURA, HS-22, hydraulic rim brake
Brake lever, front/rear	MAGURA, HS-22, shifter
Disc, front	...
Disc, rear	...
Wheel set	...
Rim, front/rear	RYDE, Andra 40, 28"
Hub, front	SHIMANO, HB-MT400, front wheel hub, 15 mm quick release axle, centre lock
Hub, rear	SHIMANO, Nexus SG-C7000-5D, gear hub, 5 speeds
Spokes	Stainless steel, 2 mm
Tyres	SCHWALBE, Marathon Plus, Performance Line, SmartGuard, 47-559
Hose	SCHWALBE, DV 17, #
Front light	Hercules, FH 40, LED, up to 40 lux
Rear lamp	BUSCH & MÜLLER, 2C, pannier rack rear LED light
Dynamo	...
Pannier rack	i-Rack, integrated into the frame, spring flap, with battery mount
Guards	SKS, A53, plastic
Chain guard	HORN, Catena 18, #
Lock	AXA, Victory, with simultaneous locking battery lock
Stand/stand mount	PLETSCHER, Comp Flex 40, #
Motor	BOSCH, Performance Line, BDU363, 250 watt, 65 Nm
Battery manufacturer name	BOSCH, PowerPack 500, BBR275, 500 Wh
On-board computer	BOSCH, Intuvia, BUI255, with Intuvia control panel
Charger	BOSCH, Compact Charger, BCS230, 2 A

...not available

Not yet available when the instructions were produced

11.3.5 E-Imperial 180 S R5

22-P-0012, 22-P-0013

Fork	SR Suntour, NEX-E25, 63 mm deflection, adjustable, advanced,
Damper	...
Steering headset	Integrated, tapered
Handlebars	ZECURE, HD, aluminium, 31.8, 20 mm high, 15° handle angle
Handles	ERGO, with integrated clamping
Stem	Ahead stem, adjustable
Saddle	SELLE BASSANO, Superma, City
Seat post	ZECURE, HD001, aluminium, 350 mm, Ø30.9 mm
Saddle clamp	QR, black
Crank set	FSA, CK-220, 170
Pedals	MARWI, SP828, aluminium
Rear derailleur	...
Shifter	SHIMANO, Altus SL-M310, Rapidfire Plus shifter
Front derailleur	...
Cassette/cassette sprocket	Shimano, #, 27T
Chain	KMC, Z610, chain
Belt	...
Front brake	MAGURA, HS-22, hydraulic rim brake
Rear brake	MAGURA, HS-22, hydraulic rim brake
Brake lever, front/rear	MAGURA, HS-22, shifter
Disc, front	...
Disc, rear	...
Wheel set	...
Rim, front/rear	RYDE, Andra 40, 28"
Hub, front	SHIMANO, HB-MT400, front wheel hub, 15 mm quick release axle, centre lock
Hub, rear	SHIMANO, Nexus SG-C7050-5C, gear hub, back-pedal brake, 5 speeds
Spokes	Stainless steel, 2 mm
Tyres	SCHWALBE, Marathon Plus, Performance Line, SmartGuard, 47-559
Hose	SCHWALBE, DV 17, #
Front light	Hercules, FH 40, LED, up to 40 lux
Rear lamp	BUSCH & MÜLLER, 2C, pannier rack rear LED light
Dynamo	...
Pannier rack	i-Rack, integrated into the frame, spring flap, with battery mount
Guards	SKS, A53, plastic
Chain guard	HORN, Catena 18, #
Lock	AXA, Victory, with simultaneous locking battery lock
Stand/stand mount	PLETSCHER, Comp Flex 40, #
Motor	BOSCH, Performance Line, BDU363, 250 watt, 65 Nm
Battery manufacturer name	BOSCH, PowerPack 500, BBR275, 500 Wh
On-board computer	BOSCH, Intuvia, BUI255, with Intuvia control panel
Charger	BOSCH, Compact Charger, BCS230, 2 A

...not available

Not yet available when the instructions were produced

11.3.6 E-Imperial 180 S 10

22-P-0016, 22-P-0017

Fork	SR Suntour, NEX-E25, 63 mm deflection, adjustable, advanced,
Damper	...
Steering headset	Integrated, tapered
Handlebars	ZECURE, HD, aluminium, 31.8, 20 mm high, 15° handle angle
Handles	ERGO, with integrated clamping
Stem	Ahead stem, adjustable
Saddle	SELLE BASSANO, Superma, City
Seat post	ZECURE, HD001, aluminium, 350 mm, Ø30.9 mm
Saddle clamp	QR, black
Crank set	FSA, CK-220, 170
Pedals	MARWI, SP828, aluminium
Rear derailleur	SHIMANO, Deore M5120, 10 gears
Shifter	SHIMANO, SLX SL-M7100, shifter
Front derailleur	#
Cassette/cassette sprocket	SHIMANO, Deore CS-M4100, 11-42T
Chain	KMC, X10E, chain
Belt	...
Front brake	SHIMANO, MT410; hydraulic disc brake
Rear brake	SHIMANO, MT410; hydraulic disc brake
Brake lever, front/rear	SHIMANO, BL-MT402, shifter
Disc, front	SHIMANO, SM-RT54, 180 mm
Disc, rear	SHIMANO, SM-RTC60, 180 mm
Wheel set	...
Rim, front/rear	RYDE, Andra 40, 28"
Hub, front	SHIMANO, HB-MT400, front wheel hub, 15 mm quick release axle, centre lock
Hub, rear	SHIMANO, FH-M3050, cassette hub, quick release, centre lock, 10 speeds
Spokes	Stainless steel, 2 mm
Tyres	SCHWALBE, Marathon Plus, Performance Line, SmartGuard, 47-559
Hose	SCHWALBE, DV 17, #
Front light	Hercules, FH 40, LED, up to 40 lux
Rear lamp	BUSCH & MÜLLER, 2C, pannier rack rear LED light
Dynamo	...
Pannier rack	i-Rack, integrated into the frame, spring flap, with battery mount
Guards	SKS, A53, plastic
Chain guard	HORN, Catena 18, #
Lock	AXA, Victory, with simultaneous locking battery lock
Stand/stand mount	PLETSCHER, Comp Flex 40, #
Motor	BOSCH, Performance Line CX, BDU450CX, 250 watt, 85 Nm
Battery manufacturer name	BOSCH, PowerPack 500, BBR275, 500 Wh
On-board computer	BOSCH, Intuvia, BUI255, with Intuvia control panel
Charger	BOSCH, Compact Charger, BCS230, 2 A

...not available

Not yet available when the instructions were produced

11.3.7 Futura Comp I-F5

22-Q-0026, 22-Q-0027

Fork	SR SUNTOUR, NEX-E25 HLO, 63 mm spring stiffness, adjustable, lockout
Damper	...
Steering headset	Integrated, tapered
Handlebars	Trekking, aluminium, 31.8 mm
Handles	ERGON, GP-1, #
Stem	Ahead stem, adjustable
Saddle	SELLE Bassano, Volare Icon, #
Seat post	KALLOY, SP-383, suspension seat post, aluminium 350 mm, Ø30.9 mm deflection 45 mm
Saddle clamp	QR, black
Crank set	FSA, CK-320, 170
Pedals	MARWI, SP828, aluminium
Rear derailleur	...
Shifter	SHIMANO EZ-FIRE Plus ST-EF41, shifter
Front derailleur	...
Cassette/cassette sprocket	GATES, CDX, 32T
Chain	...
Belt	GATES, CDX, belt
Front brake	SHIMANO, BR-MT200
Rear brake	SHIMANO, BR-MT200
Brake lever, front/rear	SHIMANO, BL-MT200, shifter
Disc, front	SHIMANO, SM-RT10, 180 mm
Disc, rear	SHIMANO, RT-EM300, 160 mm, lockring
Wheel set	...
Rim, front/rear	RODI, WEB 19, 28"
Hub, front	SHIMANO, HB-RM35, front wheel hub, disc brake, with quick release, centre lock
Hub, rear	SHIMANO, Nexus SG-C7050-5C, gear hub, back-pedal brake, 5 speeds
Spokes	Stainless steel, 2 mm
Tyres	SCHWALBE, Marathon, Performance Line, GreenGuard, 50-622
Hose	SCHWALBE, AV 17, #
Front light	Hercules, FH 40, LED, up to 40 lux
Rear lamp	BUSCH & MÜLLER, 2C, pannier rack rear LED light
Dynamo	...
Pannier rack	i-Rack, system carrier, R series, with spring flap
Guards	CURANA, Apollo 60, aluminium
Chain guard	HORN, Catena A08, #
Lock	ABUS, #, battery lock, with Plus cylinder
Stand/stand mount	PLETSCHER, Comp Flex 40, #
Motor	BOSCH, Performance Line CX, BDU450CX, 250 watt, 85 Nm
Battery manufacturer name	BOSCH, PowerTube 625, 625 Wh
On-board computer	BOSCH, Intuvia, BUI255, with Intuvia control panel
Charger	BOSCH, Compact Charger, BCS230, 2 A

...not available

Not yet available when the instructions were produced

11.3.8 Futura Comp I-11

22-Q-0028, 22-Q-0029, 22-Q-0030

Fork	SR SUNTOUR, NCX- D LO, 63 mm deflection, air-suspended, lockout
Damper	...
Steering headset	Integrated, tapered
Handlebars	Trekking, aluminium, 31.8 mm
Handles	ERGO, with integrated clamping
Stem	Ahead stem, adjustable
Saddle	SELLE Bassano, Volare Icon, #
Seat post	KALLOY, SP-383, suspension seat post, aluminium 350 mm, Ø30.9 mm deflection 45 mm
Saddle clamp	QR, black
Crank set	FSA, CK-320, 170
Pedals	MARWI, SP828, aluminium
Rear derailleur	SHIMANO, Deore RD-M5100, 11 gears
Shifter	SHIMANO, #, Revoshift twist grip
Front derailleur	#
Cassette/cassette sprocket	SHIMANO, Deore CS-M5100, 11-51T
Chain	KMC, X11E, chain
Belt	...
Front brake	SHIMANO, BR-MT200
Rear brake	SHIMANO, BR-MT200
Brake lever, front/rear	SHIMANO, BL-MT201, shifter
Disc, front	SHIMANO, SM-RT10, 180 mm
Disc, rear	SHIMANO, RT-EM300, 160 mm, lockring
Wheel set	...
Rim, front/rear	RODI, WEB 19, 28"
Hub, front	#
Hub, rear	SHIMANO, FH-RM35, freewheel hub, quick release, centre lock, 11 speeds
Spokes	Stainless steel, 2 mm
Tyres	SCHWALBE, Energizer Plus, Performance Line, GreenGuard, 50-622, wired tyre
Hose	SCHWALBE, AV 17, #
Front light	Hercules, FH 40, LED, up to 40 lux
Rear lamp	BUSCH & MÜLLER, 2C, pannier rack rear LED light
Dynamo	...
Pannier rack	i-Rack, system carrier, R series, with spring flap
Guards	CURANA, Apollo 60, aluminium
Chain guard	HORN, Catena 18, #
Lock	ABUS, #, battery lock, with Plus cylinder
Stand/stand mount	PLETSCHER, Comp Flex 40, #
Motor	BOSCH, Performance Line CX, BDU450CX, 250 watt, 85 Nm
Battery manufacturer name	BOSCH, PowerTube 625, 625 Wh
On-board computer	BOSCH, Intuvia, BUI255, with Intuvia control panel
Charger	BOSCH, Compact Charger, BCS230, 2 A

...not available

Not yet available when the instructions were produced

11.3.9 Futura Comp I-12

22-Q-0023, 22-Q-0024, 22-Q-0025

Fork	SR SUNTOUR, Mobie 25 DS LOR Air, air suspension fork, lockout, 15 mm quick release axle
Damper	...
Steering headset	Integrated, tapered
Handlebars	Trekking, aluminium, 31,8 mm, 15° handle bracket
Handles	ERGO, with integrated clamping
Stem	Ahead stem, adjustable
Saddle	SELLE BASSANO, Superma 3Zone, Man
Seat post	BY.SCHULZ, G2, suspension seat post, aluminium, 350 mm, Ø30.9 mm, deflection 30 mm
Saddle clamp	QR, black
Crank set	FSA, CK-220, 170
Pedals	MARWI, SP828, aluminium
Rear derailleur	...
Shifter	SHIMANO EZ-FIRE Plus ST-EF41, shifter
Front derailleur	...
Cassette/cassette sprocket	GATES, CDX, 28T
Chain	...
Belt	GATES, CDX, belt
Front brake	SHIMANO, MT410; hydraulic disc brake
Rear brake	SHIMANO, MT410; hydraulic disc brake
Brake lever, front/rear	SHIMANO, BL-MT401, shifter
Disc, front	SHIMANO, SM-RT30, 180 mm
Disc, rear	SHIMANO, RT-EM300, 180 mm, lockring
Wheel set	...
Rim, front/rear	RYDE, Andra 40, 28"
Hub, front	#
Hub, rear	SHIMANO, Nexus SG-C7050-5C, gear hub, back-pedal brake, 5 speeds
Spokes	Stainless steel, 2 mm
Tyres	SCHWALBE, Marathon E-Plus, Performance Line, SmartDualGuard, 55-622
Hose	SCHWALBE, DV 19, #
Front light	HERCULES, FH 100, LED, up to 100 lux
Rear lamp	BUSCH & MÜLLER, 2C, pannier rack rear LED light
Dynamo	...
Pannier rack	i-Rack, system carrier, R series, with spring flap
Guards	SKS, EDGE AL C 66 R, #
Chain guard	HORN, Catena 17, #
Lock	ABUS, IT3 XPlus, battery lock, with Plus cylinder
Stand/stand mount	PLETSCHER, Comp Flex 40, #
Motor	BOSCH, #, # new BOSCH motor MY22
Battery manufacturer name	BOSCH, #, # new BOSCH battery MY22
On-board computer	BOSCH,# KIOX300, # new BOSCH display MY22
Charger	BOSCH, standard charger, BCS220, 4 A

...not available

Not yet available when the instructions were produced

11.3.10 Futura Compact F5

22-Q-0094, 22-Q-0105

Fork	Rigid fork aluminium, 1.5"
Damper	...
Steering headset	Integrated
Handlebars	KALLOY, HB-TR-2, 31.8 mm, handle angle 25°
Handles	ERGO, with integrated clamping
Stem	SATORI, UP2+, adjustable, 90 mm, with "All Up" height adjustment, 150 mm
Saddle	VELO, LookIn Relaxed, #
Seat post	KALLOY, SP-DC1, aluminium, 350 mm, Ø27.2 mm
Saddle clamp	QR, black
Crank set	FSA, CK-220, 170
Pedals	WELLGO, #, #
Rear derailleur	...
Shifter	SHIMANO, #, Revoshift twist grip
Front derailleur	...
Cassette/cassette sprocket	GATES, CDX, 32T
Chain	...
Belt	GATES, CDX, belt
Front brake	SHIMANO, BR-MT200
Rear brake	SHIMANO, BR-MT200
Brake lever, front/rear	SHIMANO, BL-MT201, shifter
Disc, front	SHIMANO, SM-RT10, 180 mm
Disc, rear	SHIMANO, SM-RTC60, 160 mm
Wheel set	...
Rim, front/rear	#, DDM-1, 24"
Hub, front	#
Hub, rear	SHIMANO, Nexus SG-C7050-5C, gear hub, back-pedal brake, 5 speeds
Spokes	Stainless steel, #, FW: 2 mm RW: 2.34 mm
Tyres	SCHWALBE, Big Ben Performance, RaceGuard, 55-507
Tube	SCHWALBE, DV 10, #
Front light	Hercules, FH 40, LED, up to 40 lux
Rear lamp	BUSCH & MÜLLER, 2C, pannier rack rear LED light
Dynamo	...
Pannier rack	i-Rack, system carrier, with spring flap
Guards	SKS, B60, plastic
Chain guard	HORN, Catena 18, #
Lock	ABUS, #, battery lock, with Plus cylinder
Stand/stand mount	Standwell, #, #
Motor	BOSCH, Performance Line, BDU363, 250 watt, 65 Nm
Battery manufacturer name	BOSCH, PowerPack 500, BBS275, 500 Wh
On-board computer	BOSCH, Intuvia, BUI255, with Intuvia control panel
Charger	BOSCH, Compact Charger, BCS230, 2 A

...not available

Not yet available when the instructions were produced

11.3.11 Futura Compact F8

22-Q-0095, 22-Q-0108

Fork	Rigid fork aluminium, 1.5"
Damper	...
Steering headset	Integrated
Handlebars	KALLOY, HB-TR-2, 31.8 mm, handle angle 25°
Handles	ERGO, with integrated clamping
Stem	SATORI, UP2+, adjustable, 90 mm, with "All Up" height adjustment, 150 mm
Saddle	BROOKS, LookIn Relaxed, #
Seat post	KALLOY, SP-DC1, aluminium, 350 mm, Ø27.2 mm
Saddle clamp	QR, black
Crank set	FSA, CK-220, 170
Pedals	MARWI, #, #
Rear derailleur	...
Shifter	SHIMANO, #, Revoshift twist grip
Front derailleur	...
Cassette/cassette sprocket	Shimano, #, 18T
Chain	KMC, Z1EHX, chain
Belt	...
Front brake	SHIMANO, BR-MT200
Rear brake	SHIMANO, BR-MT200
Brake lever, front/rear	SHIMANO, BL-MT201, shifter
Disc, front	SHIMANO, SM-RT10, 180 mm
Disc, rear	SHIMANO, SM-RTC60, 160 mm
Wheel set	...
Rim, front/rear	#, DDM-1, 20"
Hub, front	#
Hub, rear	SHIMANO, Nexus SG-C6061-8D, gear hub, 8 speeds
Spokes	Stainless steel, #, FW: 2 mm RW: 2.34 mm
Tyres	SCHWALBE, Big Ben Performance, RaceGuard, 55-406
Tube	SCHWALBE, DV 7, #
Front light	Hercules, FH 40, LED, up to 40 lux
Rear lamp	BUSCH & MÜLLER, 2C, pannier rack rear LED light
Dynamo	...
Pannier rack	i-Rack, system carrier, with spring flap
Guards	SKS, B60, plastic
Chain guard	HORN, Catena 17, #
Lock	ABUS, #, battery lock, with Plus cylinder
Stand/stand mount	Standwell, #, #
Motor	BOSCH, Active Line Plus, BDU350, 250 Watt, 50 Nm
Battery manufacturer name	BOSCH, PowerPack 400, BBS265, 400 Wh
On-board computer	BOSCH, Intuvia, BUI255, with Intuvia control panel
Charger	BOSCH, Compact Charger, BCS230, 2 A

...not available

Not yet available when the instructions were produced

11.3.12 Futura Compact R5

22-Q-0104

Fork	Rigid fork aluminium, 1.5"
Damper	...
Steering headset	Integrated
Handlebars	KALLOY, HB-TR-2, 31.8 mm, handle angle 25°
Handles	ERGO, with integrated clamping
Stem	SATORI, UP2+, adjustable, 90 mm, with "All Up" height adjustment, 150 mm
Saddle	VELO, LookIn Relaxed, #
Seat post	KALLOY, SP-DC1, aluminium, 350 mm, Ø27.2 mm
Saddle clamp	QR, black
Crank set	FSA, CK-220, 170
Pedals	WELLGO, #, #
Rear derailleur	...
Shifter	SHIMANO, #, Revoshift twist grip
Front derailleur	...
Cassette/cassette sprocket	GATES, CDX, 28T
Chain	...
Belt	GATES, CDX, belt
Front brake	SHIMANO, BR-MT200
Rear brake	SHIMANO, BR-MT200
Brake lever, front/rear	SHIMANO, BL-MT201, shifter
Disc, front	SHIMANO, SM-RT10, 180 mm
Disc, rear	SHIMANO, SM-RTC60, 160 mm
Wheel set	...
Rim, front/rear	#, DDM-1, 20"
Hub, front	#
Hub, rear	SHIMANO, Nexus SG-C7050-5C, gear hub, back-pedal brake, 5 speeds
Spokes	Stainless steel, #, FW: 2 mm RW: 2.34 mm
Tyres	SCHWALBE, Big Ben Performance, RaceGuard, 55-406
Tube	SCHWALBE, DV 7, #
Front light	Hercules, FH 40, LED, up to 40 lux
Rear lamp	BUSCH & MÜLLER, 2C, pannier rack rear LED light
Dynamo	...
Pannier rack	i-Rack, system carrier, with spring flap
Guards	SKS, B60, plastic
Chain guard	HORN, Catena 18, #
Lock	ABUS, #, battery lock, with Plus cylinder
Stand/stand mount	Standwell, #, #
Motor	BOSCH, Performance Line, BDU363, 250 watt, 65 Nm
Battery manufacturer name	BOSCH, PowerPack 500, BBS275, 500 Wh
On-board computer	BOSCH, Intuvia, BUI255, with Intuvia control panel
Charger	BOSCH, Compact Charger, BCS230, 2 A

...not available

Not yet available when the instructions were produced

11.3.13 Futura Compact R8

22-Q-0106, 22-Q-0107

Fork	Rigid fork aluminium, 1.5"
Damper	...
Steering headset	Integrated
Handlebars	KALLOY, HB-TR-2, 31.8 mm, handle angle 25°
Handles	ERGO, with integrated clamping
Stem	SATORI, UP2+, adjustable, 90 mm, with "All Up" height adjustment, 150 mm
Saddle	VELO, LookIn Relaxed, #
Seat post	KALLOY, SP-DC1, aluminium, 350 mm, Ø27.2 mm
Saddle clamp	QR, black
Crank set	FSA, CK-220, 170
Pedals	WELLGO, #, #
Rear derailleur	...
Shifter	SHIMANO, #, Revoshift twist grip
Front derailleur	...
Cassette/cassette sprocket	Shimano, #, 20T
Chain	KMC, Z1EHX, chain
Belt	...
Front brake	SHIMANO, BR-MT200
Rear brake	SHIMANO, BR-MT200
Brake lever, front/rear	SHIMANO, BL-MT201, shifter
Disc, front	SHIMANO, SM-RT10, 180 mm
Disc, rear	SHIMANO, SM-RTC60, 160 mm
Wheel set	...
Rim, front/rear	#, DDM-1, 24"
Hub, front	#
Hub, rear	SHIMANO, Nexus SG-C6001-8C, gear hub, back-pedal brake, 8 speeds
Spokes	Stainless steel, #, FW: 2 mm RW: 2.34 mm
Tyres	SCHWALBE, Big Ben Performance, RaceGuard, 55-507
Tube	SCHWALBE, DV 10, #
Front light	Hercules, FH 40, LED, up to 40 lux
Rear lamp	BUSCH & MÜLLER, 2C, pannier rack rear LED light
Dynamo	...
Pannier rack	i-Rack, system carrier, with spring flap
Guards	SKS, B60, plastic
Chain guard	HORN, Catena 18, #
Lock	ABUS, #, battery lock, with Plus cylinder
Stand/stand mount	Standwell, #, #
Motor	BOSCH, Active Line Plus, BDU350, 250 Watt, 50 Nm
Battery manufacturer name	BOSCH, PowerPack 400, BBS265, 400 Wh
On-board computer	BOSCH, Intuvia, BUI255, with Intuvia control panel
Charger	BOSCH, Compact Charger, BCS230, 2 A

...not available

Not yet available when the instructions were produced

11.3.14 Futura Compact 10

22-Q-0096

Fork	Rigid fork aluminium, 1.5"
Damper	...
Steering headset	Integrated
Handlebars	KALLOY, HB-TR-2, 31.8 mm, handle angle 25°
Handles	ERGO, with integrated clamping
Stem	SATORI, UP2+, adjustable, 90 mm, with "All Up" height adjustment, 150 mm
Saddle	BROOKS, LookIn Relaxed, #
Seat post	KALLOY, SP-DC1, aluminium, 350 mm, Ø27.2 mm
Saddle clamp	QR, black
Crank set	FSA, CK-220, 170
Pedals	MARWI, #, #
Rear derailleur	SHIMANO, Deore M5120, 10 gears
Shifter	SHIMANO, #, Revoshift twist grip
Front derailleur	#
Cassette/cassette sprocket	SHIMANO, Deore CS-M4100, 11-42T
Chain	KMC, E10S, chain
Belt	...
Front brake	SHIMANO, BR-MT200
Rear brake	SHIMANO, BR-MT200
Brake lever, front/rear	SHIMANO, BL-MT201, shifter
Disc, front	SHIMANO, SM-RT10, 180 mm
Disc, rear	SHIMANO, RT-EM300, 160 mm, lockring
Wheel set	...
Rim, front/rear	#, DDM-1, 24"
Hub, front	#
Hub, rear	SHIMANO, FH-RM35, freewheel hub, with quick release, centre lock, 10 speeds
Spokes	Stainless steel, #, FW: 2 mm RW: 2.34 mm
Tyres	SCHWALBE, Big Ben Performance, RaceGuard, 55-507
Tube	SCHWALBE, DV 10, #
Front light	Hercules, FH 40, LED, up to 40 lux
Rear lamp	BUSCH & MÜLLER, 2C, pannier rack rear LED light
Dynamo	...
Pannier rack	i-Rack, system carrier, with spring flap
Guards	SKS, B60, plastic
Chain guard	HORN, Catena 18, #
Lock	ABUS, #, battery lock, with Plus cylinder
Stand/stand mount	Standwell, #, #
Motor	BOSCH, Performance Line, BDU363, 250 watt, 65 Nm
Battery manufacturer name	BOSCH, PowerPack 500, BBS275, 500 Wh
On-board computer	BOSCH, Intuvia, BUI255, with Intuvia control panel
Charger	BOSCH, Compact Charger, BCS230, 2 A

...not available

Not yet available when the instructions were produced

11.3.15 Futura Fold Carbon I-10

22-Y-0002

Fork	Rigid fork, carbon, 1.5"
Damper	...
Steering headset	Integrated
Handlebars	Trekking, aluminium, 31,8 mm, 15° handle bracket
Handles	ERGO, with integrated clamping
Stem	Aluminium, height-adjustable, 90 mm, with "All Up" height adjustment, 150 mm
Saddle	SELLE ROYAL, LookIn Relaxed, #
Seat post	KALLOY, SP-DC1, aluminium, 350 mm, Ø27.2 mm
Saddle clamp	QR, black
Crank set	FSA, CK-8658-1, Carbon, 170
Pedals	VP, VP-F55, foldable
Rear derailleur	SHIMANO, ZEE, 10 speeds
Shifter	SHIMANO, #, Revoshift twist grip
Front derailleur	#
Cassette/cassette sprocket	SHIMANO, CS-HG50, 11-36T
Chain	KMC, X10E, chain
Belt	...
Front brake	SHIMANO, BR-MT200
Rear brake	SHIMANO, BR-MT200
Brake lever, front/rear	SHIMANO, BL-MT201, shifter
Disc, front	SHIMANO, SM-RT10, 160 mm
Disc, rear	SHIMANO, SM-RT10, 160 mm
Wheel set	...
Rim, front/rear	MACH1, 650, 20"
Hub, front	SHIMANO, HB-TX505, front wheel hub, disc brake, quick release, centre lock
Hub, rear	SHIMANO, FH-MT400, freewheel hub, with quick release axle 12 mm, centre lock, 10 speeds
Spokes	Stainless steel, 2 mm
Tyres	SCHWALBE, Big Apple, Performance Line, RaceGuard, 50-406
Tube	SCHWALBE, AV 7, #
Front light	BUSCH MÜLLER, ILU, up to 30 Lux, integrated into front guard
Rear lamp	BUSCH & MÜLLER, ILU jr, integrated into rear guard
Dynamo	...
Pannier rack	i-Rack, system carrier, with spring flap
Guards	CURANA, C-Lite 60, aluminium
Chain guard	FSA, W1086, #
Lock	ABUS, #, battery lock, with Plus cylinder
Stand/stand mount	MASSLOAD, CL-KA56, two-leg stand
Motor	FAZUA, Evation, 250 watt, 60 Nm
Battery manufacturer name	FAZUA, Fazua Intube, 252 Wh
On-board computer	FAZUA, remote controller, ...
Charger	FAZUA, charger, 2 A

...not available

Not yet available when the instructions were produced

11.3.16 Futura Fold I-F5 Belt

22-Y-0004

Fork	AL 6061, rigid, 1.5"
Damper	...
Steering headset	Integrated
Handlebars	Trekking, aluminium, 31,8 mm, 15° handle bracket
Handles	ERGO, with integrated clamping
Stem	Aluminium, height-adjustable, 90 mm, with "All Up" height adjustment, 150 mm
Saddle	SELLE BASSANO, LookIn Relaxed, #
Seat post	KALLOY, SP-DC1, aluminium, 350 mm, Ø27.2 mm
Saddle clamp	QR, black
Crank set	SAMOX, EC38, 170
Pedals	VP, VP-F55, foldable
Rear derailleur	...
Shifter	SHIMANO, SL-M315, Rapidfire Plus shifter
Front derailleur	...
Cassette/cassette sprocket	GATES, CDX, 32T
Chain	...
Belt	GATES, CDX, belt
Front brake	SHIMANO, BR-MT200
Rear brake	SHIMANO, BR-MT200
Brake lever, front/rear	SHIMANO, BL-MT201, shifter
Disc, front	SHIMANO, SM-RT10, 160 mm
Disc, rear	SHIMANO, SM-RT10, 160 mm
Wheel set	...
Rim, front/rear	MACH1, 650, 20"
Hub, front	#
Hub, rear	SHIMANO, Nexus SG-C7050-5C, gear hub, back-pedal brake, 5 speeds
Spokes	Stainless steel, 2 mm
Tyres	SCHWALBE, Big Apple, Performance Line, RaceGuard, 50-406
Tube	SCHWALBE, AV 7, #
Front light	Hercules, FH 40, LED, up to 40 lux
Rear lamp	R121, pannier rack rear light, LED
Dynamo	...
Pannier rack	i-Rack, system carrier, with spring flap
Guards	CURANA, Apollo 60, aluminium
Chain guard	GATES, #, trouser guard
Lock	ABUS, #, battery lock, with Plus cylinder
Stand/stand mount	MASSLOAD, CL-KA56, two-leg stand
Motor	BOSCH, Performance Line, BDU363, 250 watt, 65 Nm
Battery manufacturer name	BOSCH, PowerTube 500, 500 Wh
On-board computer	BOSCH, Intuvia, BUI255, with Intuvia control panel
Charger	BOSCH, Compact Charger, BCS230, 2 A

...not available

Not yet available when the instructions were produced

11.3.17 Futura Fold I-F8

22-Y-0006

Fork	AL 6061, rigid, 1.5"
Damper	...
Steering headset	Integrated
Handlebars	Trekking, aluminium, 31,8 mm, 15° handle bracket
Handles	ERGO, with integrated clamping
Stem	Aluminium, height-adjustable, 90 mm, with "All Up" height adjustment, 150 mm
Saddle	SELLE BASSANO, LookIn Relaxed, #
Seat post	KALLOY, SP-DC1, aluminium, 350 mm, Ø27.2 mm
Saddle clamp	QR, black
Crank set	SAMOX, EC38, 170
Pedals	VP, VP-F55, foldable
Rear derailleur	...
Shifter	ENVILOLO, CA, mechanical
Front derailleur	...
Cassette/cassette sprocket	Shimano, #, 18T
Chain	KMC, Z610, chain
Belt	...
Front brake	SHIMANO, BR-MT200
Rear brake	SHIMANO, BR-MT200
Brake lever, front/rear	SHIMANO, BL-MT201, shifter
Disc, front	SHIMANO, SM-RT10, 160 mm
Disc, rear	SHIMANO, SM-RT10, 160 mm
Wheel set	...
Rim, front/rear	MACH1, 650, 20"
Hub, front	#
Hub, rear	SHIMANO, Nexus SG-C6061-8D, gear hub, 8 speeds
Spokes	Stainless steel, 2 mm
Tyres	SCHWALBE, Big Apple, Performance Line, RaceGuard, 50-406
Tube	SCHWALBE, AV 7, #
Front light	Hercules, FH 40, LED, up to 40 lux
Rear lamp	R121, pannier rack rear light, LED
Dynamo	...
Pannier rack	i-Rack, system carrier, with spring flap
Guards	CURANA, Apollo 60, aluminium
Chain guard	Hebie, #, #
Lock	ABUS, #, battery lock, with Plus cylinder
Stand/stand mount	MASSLOAD, CL-KA56, two-leg stand
Motor	BOSCH, Active Line Plus, BDU350, 250 Watt, 50 Nm
Battery manufacturer name	BOSCH, PowerTube 500, 500 Wh
On-board computer	BOSCH, Intuvia, BUI255, with Intuvia control panel
Charger	BOSCH, Compact Charger, BCS230, 2 A

...not available

Not yet available when the instructions were produced

11.3.18 Futura Fold I-F8 Belt

21-Y-0006

Fork	AL 6061, rigid, 1.5"
Damper	...
Steering headset	Integrated
Handlebars	Trekking, aluminium, 31,8 mm, 15° handle bracket
Handles	ERGO, with integrated clamping
Stem	Aluminium, height-adjustable, 90 mm, with "All Up" height adjustment, 150 mm
Saddle	SELLE ROYAL, LookIn Relaxed, #
Seat post	KALLOY, SP-DC1, aluminium, 350 mm, Ø27.2 mm
Saddle clamp	QR, black
Crank set	SAMOX, EC38, 170
Pedals	VP, VP-F55, foldable
Rear derailleur	...
Shifter	SHIMANO, Deore SL-M4100, shifter
Front derailleur	...
Cassette/cassette sprocket	GATES, CDX, 22T
Chain	...
Belt	GATES, CDX, belt
Front brake	SHIMANO, BR-MT200
Rear brake	SHIMANO, BR-MT200
Brake lever, front/rear	SHIMANO, BL-MT201, shifter
Disc, front	SHIMANO, SM-RT10, 160 mm
Disc, rear	SHIMANO, SM-RT10, 160 mm
Wheel set	...
Rim, front/rear	MACH1, 650, 20"
Hub, front	SHIMANO, HB-TX505, front wheel hub, disc brake, quick release, centre lock
Hub, rear	SHIMANO, Nexus SG-C6061-8D, gear hub, 8 speeds
Spokes	Stainless steel, 2 mm
Tyres	SCHWALBE, Big Apple, Performance Line, RaceGuard, 50-406
Hose	SCHWALBE, AV 7, #
Front light	Hercules, FH 40, LED, up to 40 lux
Rear lamp	R121, pannier rack rear light, LED
Dynamo	...
Pannier rack	i-Rack, system carrier, with spring flap
Guards	CURANA, Apollo 60, aluminium
Chain guard	GATES, #, trouser guard
Lock	ABUS, #, battery lock, with Plus cylinder
Stand/stand mount	MASSLOAD, CL-KA56, two-leg stand
Motor	BOSCH, Active Line Plus, BDU350, 250 Watt, 50 Nm
Battery manufacturer name	BOSCH, PowerTube 400, 400 Wh
On-board computer	BOSCH, Intuvia, BUI255, with Intuvia control panel
Charger	BOSCH, Compact Charger, BCS230, 2 A

...not available

Not yet available when the instructions were produced

11.3.19 Futura Fold I-R8

22-Y-0005

Fork	AL 6061, rigid, 1.5"
Damper	...
Steering headset	Integrated
Handlebars	Trekking, aluminium, 31,8 mm, 15° handle bracket
Handles	ERGO, with integrated clamping
Stem	Aluminium, height-adjustable, 90 mm, with "All Up" height adjustment, 150 mm
Saddle	SELLE BASSANO, LookIn Relaxed, #
Seat post	KALLOY, SP-DC1, aluminium, 350 mm, Ø27.2 mm
Saddle clamp	QR, black
Crank set	SAMOX, EC38, 170
Pedals	VP, VP-F55, foldable
Rear derailleur	...
Shifter	ENVILOLO, CA, mechanical
Front derailleur	...
Cassette/cassette sprocket	Shimano, #, 18T
Chain	KMC, Z610, chain
Belt	...
Front brake	SHIMANO, BR-MT200
Rear brake	SHIMANO, BR-MT200
Brake lever, front/rear	SHIMANO, BL-MT201, shifter
Disc, front	SHIMANO, SM-RT10, 160 mm
Disc, rear	SHIMANO, SM-RT10, 160 mm
Wheel set	...
Rim, front/rear	MACH1, 650, 20"
Hub, front	#
Hub, rear	SHIMANO, Nexus SG-C6001-8C, gear hub, back-pedal brake, 8 speeds
Spokes	Stainless steel, 2 mm
Tyres	SCHWALBE, Big Apple, Performance Line, RaceGuard, 50-406
Tube	SCHWALBE, AV 7, #
Front light	Hercules, FH 40, LED, up to 40 lux
Rear lamp	R121, pannier rack rear light, LED
Dynamo	...
Pannier rack	i-Rack, system carrier, with spring flap
Guards	CURANA, Apollo 60, aluminium
Chain guard	Hebie, #, #
Lock	ABUS, #, battery lock, with Plus cylinder
Stand/stand mount	MASSLOAD, CL-KA56, two-leg stand
Motor	BOSCH, Active Line Plus, BDU350, 250 Watt, 50 Nm
Battery manufacturer name	BOSCH, PowerTube 500, 500 Wh
On-board computer	BOSCH, Intuvia, BUI255, with Intuvia control panel
Charger	BOSCH, Compact Charger, BCS230, 2 A

...not available

Not yet available when the instructions were produced

11.3.20 Futura Fold I-R8 Belt

21-Y-0005

Fork	AL 6061, rigid, 1.5"
Damper	...
Steering headset	Integrated
Handlebars	Trekking, aluminium, 31,8 mm, 15° handle bracket
Handles	ERGO, with integrated clamping
Stem	Aluminium, height-adjustable, 90 mm, with "All Up" height adjustment, 150 mm
Saddle	SELLE ROYAL, LookIn Relaxed, #
Seat post	KALLOY, SP-DC1, aluminium, 350 mm, Ø27.2 mm
Saddle clamp	QR, black
Crank set	SAMOX, EC38, 170
Pedals	VP, VP-F55, foldable
Rear derailleur	...
Shifter	SHIMANO, Deore SL-M4100, shifter
Front derailleur	...
Cassette/cassette sprocket	GATES, CDX, 22T
Chain	...
Belt	GATES, CDX, belt
Front brake	SHIMANO, BR-MT200
Rear brake	SHIMANO, BR-MT200
Brake lever, front/rear	SHIMANO, BL-MT201, shifter
Disc, front	SHIMANO, SM-RT10, 160 mm
Disc, rear	SHIMANO, SM-RT10, 160 mm
Wheel set	...
Rim, front/rear	MACH1, 650, 20"
Hub, front	SHIMANO, HB-TX505, front wheel hub, disc brake, quick release, centre lock
Hub, rear	SHIMANO, Nexus SG-C6001-8C, gear hub, back-pedal brake, 8 speeds
Spokes	Stainless steel, 2 mm
Tyres	SCHWALBE, Big Apple, Performance Line, RaceGuard, 50-406
Hose	SCHWALBE, AV 7, #
Front light	Hercules, FH 40, LED, up to 40 lux
Rear lamp	R121, pannier rack rear light, LED
Dynamo	...
Pannier rack	i-Rack, system carrier, with spring flap
Guards	CURANA, Apollo 60, aluminium
Chain guard	GATES, #, trouser guard
Lock	ABUS, #, battery lock, with Plus cylinder
Stand/stand mount	MASSLOAD, CL-KA56, two-leg stand
Motor	BOSCH, Active Line Plus, BDU350, 250 Watt, 50 Nm
Battery manufacturer name	BOSCH, PowerTube 400, 400 Wh
On-board computer	BOSCH, Intuvia, BUI255, with Intuvia control panel
Charger	BOSCH, Compact Charger, BCS230, 2 A

...not available

Not yet available when the instructions were produced

11.3.21 Futura HD I-F360

22-P-0001, 22-P-0002

Fork	SR SUNTOUR, Mobie 25 DS LOR Air, air suspension fork, lockout, 15 mm quick release axle
Damper	...
Steering headset	Integrated, tapered
Handlebars	ZECURE, trekking, aluminium, 31.8 mm, 15° handle bracket
Handles	ERGON, GP-1, #
Stem	ZECURE, UP2+, adjustable
Saddle	SELLE BASSANO, Superma 3Zone, Man
Seat post	BY.SCHULZ, G2, suspension seat post, aluminium, 350 mm, Ø30.9 mm, deflection 30 mm
Saddle clamp	QR, black
Crank set	FSA, CK-320, 170
Pedals	MARWI, SP828, aluminium
Rear derailleur	...
Shifter	SHIMANO, #, Revoshift twist grip
Front derailleur	...
Cassette/cassette sprocket	GATES, CDX, 22T
Chain	...
Belt	GATES, CDX, belt
Front brake	SHIMANO, BR-MT420; hydraulic disc brake
Rear brake	SHIMANO, MT410; hydraulic disc brake
Brake lever, front/rear	SHIMANO, BL-MT402, shifter
Disc, front	SHIMANO, SM-RT54ME, 180 mm
Disc, rear	SHIMANO, SM-RT54, 180 mm, 6-hole
Wheel set	...
Rim, front/rear	RYDE, Andra 40, 28"
Hub, front	#
Hub, rear	ENVILOLO, TR, gear hub for disc brake, continuously variable
Spokes	Stainless steel, 2 mm
Tyres	SCHWALBE, Marathon E-Plus, Performance Line, SmartDualGuard, 50-622
Hose	SCHWALBE, AV 19, #
Front light	Hercules, FH 100, LED, up to 100 lux
Rear lamp	BUSCH & MÜLLER, 2C, pannier rack rear LED light
Dynamo	...
Pannier rack	i-Rack, system carrier, R series, with spring flap
Guards	CURANA, Apollo 60, aluminium
Chain guard	HORN, Catena A08, #
Lock	ABUS, #, battery lock, with Plus cylinder
Stand/stand mount	PLETSCHER, Comp Flex 40, #
Motor	BOSCH, Performance Line CX, BDU450CX, 250 watt, 85 Nm
Battery manufacturer name	BOSCH, PowerTube 625, 625 Wh
On-board computer	BOSCH, Intuvia, BUI255, with Intuvia control panel
Charger	BOSCH, Compact Charger, BCS230, 2 A

...not available

Not yet available when the instructions were produced

11.3.22 Futura Pro I-F14

22-Q-0010, 22-Q-0011

Fork	SR SUNTOUR, NCX- D LO, 63 mm deflection, air-suspended, lockout, 15 mm quick release axle
Damper	...
Steering headset	Integrated, tapered
Handlebars	Trekking, aluminium, 31.8 mm
Handles	ERGON, GP-1, #
Stem	Ahead stem, adjustable
Saddle	SELLE Bassano, Volare Icon, #
Seat post	SR SUNTOUR, NCX, suspension seat post, aluminium 350 mm, Ø30.9 mm deflection 45 mm
Saddle clamp	QR, black
Crank set	FSA, CK-320, 170
Pedals	MARWI, SP828, aluminium
Rear derailleur	...
Shifter	SHIMANO, SHIMANO Doere SL-M4100-IR, shifter
Front derailleur	...
Cassette/cassette sprocket	GATES, CDX, 22T
Chain	...
Belt	GATES, CDX, belt
Front brake	SHIMANO, Deore BR-T6000, hydraulic disc brake
Rear brake	SHIMANO, Deore BR-T6000, hydraulic disc brake
Brake lever, front/rear	SHIMANO, BL-T6000, shifter
Disc, front	SHIMANO, SM-RT54ME, 180 mm
Disc, rear	SHIMANO, #, 180 mm, for ROHLOFF hub
Wheel set	...
Rim, front/rear	RODI, WEB 19, 28"
Hub, front	#
Hub, rear	ROHLOFF, E-14, gear hub, 14 speeds
Spokes	Stainless steel, 2 mm
Tyres	SCHWALBE, Marathon E-Plus, Performance Line, SmartDualGuard, 50-622
Hose	SCHWALBE, AV 17, #
Front light	Hercules, FH 100, LED, up to 100 lux
Rear lamp	BUSCH & MÜLLER, 2C, pannier rack rear LED light
Dynamo	...
Pannier rack	i-Rack, system carrier, R series, with spring flap
Guards	CURANA, Apollo 60, aluminium
Chain guard	HORN, Catena A08, #
Lock	ABUS, #, battery lock, with Plus cylinder
Stand/stand mount	PLETSCHER, Comp Flex 40, #
Motor	BOSCH, Performance Line CX, BDU450CX, 250 watt, 85 Nm
Battery manufacturer name	BOSCH, PowerTube 625, 625 Wh
On-board computer	BOSCH, Intuvia, BUI255, with Intuvia control panel
Charger	BOSCH, Compact Charger, BCS230, 2 A

...not available

Not yet available when the instructions were produced

11.3.23 Futura Pro I-F360+

22-Q-0015, 22-Q-0016

Fork	SR SUNTOUR, NCX- D LO, 63 mm deflection, air-suspended, lockout, 15 mm quick release axle
Damper	...
Steering headset	Integrated, tapered
Handlebars	Trekking, aluminium, 31.8 mm
Handles	ERGON, GP-1, #
Stem	Ahead stem, adjustable
Saddle	SELLE Bassano, Volare Icon, #
Seat post	SR SUNTOUR, NCX, suspension seat post, aluminium 350 mm, Ø30.9 mm deflection 45 mm
Saddle clamp	QR, black
Crank set	FSA, CK-320, 170
Pedals	MARWI, SP828, aluminium
Rear derailleur	...
Shifter	SHIMANO, #, Revoshift twist grip
Front derailleur	...
Cassette/cassette sprocket	GATES, CDX, 22T
Chain	...
Belt	GATES, CDX, belt
Front brake	SHIMANO, Deore BR-T6000, hydraulic disc brake
Rear brake	SHIMANO, Deore BR-T6000, hydraulic disc brake
Brake lever, front/rear	SHIMANO, BL-T6000, shifter
Disc, front	SHIMANO, SM-RT54ME, 180 mm
Disc, rear	SHIMANO, SM-RT56, 160 mm, 6-hole
Wheel set	...
Rim, front/rear	RODI, WEB 19, 28"
Hub, front	FORMULA, OV-31, with quick release
Hub, rear	ENVILOLO, TR, gear hub for disc brake, automatic, continuously variable
Spokes	Stainless steel, 2 mm
Tyres	SCHWALBE, Energizer Plus, Performance Line, GreenGuard, 50-622, wired tyre
Hose	SCHWALBE, AV 17, #
Front light	HERCULES, FH 100, LED, up to 100 lux
Rear lamp	BUSCH & MÜLLER, 2C, pannier rack rear LED light
Dynamo	...
Pannier rack	i-Rack, system carrier, R series, with spring flap
Guards	CURANA, Apollo 60, aluminium
Chain guard	HORN, Catena A08, #
Lock	ABUS, #, battery lock, with Plus cylinder
Stand/stand mount	PLETSCHER, Comp Flex 40, #
Motor	BOSCH, Performance Line CX, BDU450CX, 250 watt, 85 Nm
Battery manufacturer name	BOSCH, PowerTube 625, 625 Wh
On-board computer	BOSCH, Intuvia, BUI255, with Intuvia control panel
Charger	BOSCH, Compact Charger, BCS230, 2 A

...not available

Not yet available when the instructions were produced

11.3.24 Futura Sport I-10

22-Q-0031, 22-Q-0032, 22-Q-0033

Fork	SR Suntour, NEX-E25, 63 mm spring stiffness, adjustable
Damper	...
Steering headset	Integrated, tapered
Handlebars	Trekking, aluminium, 31.8 mm
Handles	ERGO, with integrated clamping
Stem	Ahead stem, adjustable
Saddle	SELLE Bassano, Volare Icon, #
Seat post	KALLOY, SP-383, suspension seat post, aluminium 350 mm, Ø30.9 mm deflection 45 mm
Saddle clamp	QR, black
Crank set	FSA, CK-320, 170
Pedals	MARWI, SP828, aluminium
Rear derailleur	SHIMANO, Deore RD-M5120, 10 gears
Shifter	ROHLOFF, shift handle, electronic, shifter
Front derailleur	#
Cassette/cassette sprocket	SHIMANO, Deore CS-M6100, 10-51T
Chain	KMC, X10E, chain
Belt	...
Front brake	SHIMANO, BR-MT200
Rear brake	SHIMANO, BR-MT200
Brake lever, front/rear	SHIMANO, BL-MT201, shifter
Disc, front	SHIMANO, SM-RT10, 180 mm
Disc, rear	SHIMANO, RT-EM300, 160 mm, lockring
Wheel set	...
Rim, front/rear	RODI, WEB 19, 28"
Hub, front	#
Hub, rear	SHIMANO, FH-RM35, freewheel hub, quick release, centre lock, 10 speeds
Spokes	Stainless steel, 2 mm
Tyres	SCHWALBE, Energizer Plus, Performance Line, GreenGuard, 50-622, wired tyre
Hose	SCHWALBE, AV 17, #
Front light	Hercules, FH 40, LED, up to 40 lux
Rear lamp	BUSCH & MÜLLER, 2C, pannier rack rear LED light
Dynamo	...
Pannier rack	i-Rack, system carrier, R series, with spring flap
Guards	CURANA, Apollo 60, aluminium
Chain guard	HORN, Catena 17, #
Lock	ABUS, #, battery lock, with Plus cylinder
Stand/stand mount	PLETSCHER, Comp Flex 40, #
Motor	BOSCH, Performance Line CX, BDU450CX, 250 watt, 85 Nm
Battery manufacturer name	BOSCH, horizontal or vertical PowerTube 500, 500 Wh
On-board computer	BOSCH, Intuvia, BUI255, with Intuvia control panel
Charger	BOSCH, Compact Charger, BCS230, 2 A

...not available

Not yet available when the instructions were produced

11.3.25 Montfoort F7

22-Q-0089

Fork	SR Suntour, NEX-E25, 63 mm spring stiffness, adjustable
Damper	...
Steering headset	Integrated
Handlebars	#, check touring, aluminium, 25.4 mm
Handles	ERGO, with integrated clamping
Stem	Adjustable
Saddle	SELLE ROYAL, Freeway, City
Seat post	KALLOY, SP-383, suspension seat post, aluminium 300 mm, Ø30.9 mm deflection 45 mm
Saddle clamp	QR, black
Crank set	FSA, CK-220, 170
Pedals	MARWI, SP827, #
Rear derailleur	...
Shifter	SHIMANO, Deore XT SL-M8100, shifter
Front derailleur	...
Cassette/cassette sprocket	Shimano, #, 19T
Chain	KMC, Z610, chain
Belt	...
Front brake	MAGURA, HS-11, hydraulic rim brake
Rear brake	MAGURA, HS-11, hydraulic rim brake
Brake lever, front/rear	MAGURA, HS-11, #
Disc, front	...
Disc, rear	...
Wheel set	...
Rim, front/rear	RYDE, Zac 19 SL, 28"
Hub, front	SHIMANO, HB-RM35, front wheel hub, with quick release, centre lock
Hub, rear	SHIMANO, Nexus SG-C3001-7D, gear hub, 7 speeds
Spokes	Stainless steel, #, 2.34 mm
Tyres	SCHWALBE, Energizer Life, K-Guard, 40-622
Tube	SCHWALBE, DV 17, #
Front light	Hercules, FH 40, LED, up to 40 lux
Rear lamp	BUSCH & MÜLLER, 2C, pannier rack rear LED light
Dynamo	...
Pannier rack	i-Rack, with battery mount, tightening strap
Guards	SKS, #, plastic
Chain guard	HESLING, Ride 1.3, #
Lock	AXA, Solid Plus, with keyed-alike battery lock
Stand/stand mount	PLETSCHER, Comp Flex 40, #
Motor	BOSCH, Active Line Plus, BDU350, 250 Watt, 50 Nm
Battery manufacturer name	BOSCH, PowerPack 400, BBR265, 400 Wh
On-board computer	BOSCH, Intuvia, BUI255, with Intuvia control panel
Charger	BOSCH, Compact Charger, BCS230, 2 A

...not available

Not yet available when the instructions were produced

11.3.26 Montfoort F7 Belt

22-Q-0088

Fork	SR Suntour, NEX-E25, 63 mm spring stiffness, adjustable
Damper	...
Steering headset	Semi-integrated
Handlebars	KALLOY, Tour, aluminium, 660 mm, 31.8 mm, 37° handle angle
Handles	ERGO, with integrated clamping
Stem	SATORI, EZ3-Q, adjustable without tools
Saddle	DDK, Freeway, City
Seat post	KALLOY, SP-383, suspension seat post, 10 mm drift, deflection 45 mm
Saddle clamp	QR, black
Crank set	FSA, CK-220, 170
Pedals	WELLGO, C-157, non-slip
Rear derailleur	...
Shifter	SHIMANO, Deore XT SL-M8100, shifter
Front derailleur	...
Cassette/cassette sprocket	GATES, CDX, 22T
Chain	...
Belt	GATES, CDX, belt
Front brake	MAGURA, HS-11, hydraulic rim brake
Rear brake	MAGURA, HS-11, hydraulic rim brake
Brake lever, front/rear	MAGURA, HS-11, #
Disc, front	...
Disc, rear	...
Wheel set	...
Rim, front/rear	RYDE, Zac 19 SL, 28"
Hub, front	#
Hub, rear	SHIMANO, Nexus SG-C3001-7D, gear hub, 7 speeds
Spokes	Stainless steel, 2 mm
Tyres	SUPERO, Optima safe, 44-622, puncture protection
Tube	CST, #, 40 mm
Front light	Hercules, FH 40, LED, up to 40 lux
Rear lamp	BUSCH & MÜLLER, 2C, pannier rack rear LED light
Dynamo	...
Pannier rack	i-Rack, system carrier with fastener strap
Guards	SKS, #, plastic
Chain guard	HORN, Catena 18, #
Lock	AXA, Solid Plus, with keyed-alike battery lock
Stand/stand mount	PLETSCHER, Comp Flex 40, #
Motor	BOSCH, Active Line Plus, BDU350, 250 Watt, 50 Nm
Battery manufacturer name	BOSCH, PowerPack 400, BBR265, 400 Wh
On-board computer	BOSCH, Intuvia, BUI255, with Intuvia control panel
Charger	BOSCH, Compact Charger, BCS230, 2 A

...not available

Not yet available when the instructions were produced

11.3.27 Pasero Comp I-12

22-P-0003, 22-P-0004, 22-P-0005

Fork	SR SUNTOUR NCX- D, air suspension fork, 63 mm deflection, lockout, 15 mm quick release axle
Damper	...
Steering headset	Integrated, tapered
Handlebars	SATORI, Wien, aluminium, 31.8 mm, 15° handle bracket
Handles	ERGON, GP-10, #
Stem	Ahead stem, adjustable
Saddle	COMODORO saddle, trekking, hydro-foam
Seat post	KALLOY, SP-383, suspension seat post, aluminium 300 mm, Ø30.9 mm deflection 45 mm
Saddle clamp	QR, black
Crank set	FSA, CK-745, 170
Pedals	MARWI, SP828, aluminium
Rear derailleur	SHIMANO, Deore RD-M6100, 12 gears
Shifter	SHIMANO, Deore SL-M4100, shifter
Front derailleur	#
Cassette/cassette sprocket	SHIMANO, Deore CS-M6100, 10-51T
Chain	SHIMANO, CN-M6100, chain
Belt	...
Front brake	SHIMANO, MT410; hydraulic disc brake
Rear brake	SHIMANO, MT410; hydraulic disc brake
Brake lever, front/rear	SHIMANO, BL-MT402, shifter
Disc, front	SHIMANO, SM-RT30, 180 mm
Disc, rear	SHIMANO, RT-EM300, 180 mm, lockring
Wheel set	...
Rim, front/rear	RYDE, Taurus 2000, 28"
Hub, front	#
Hub, rear	SHIMANO, FH-MT410, freewheel hub, quick release axle, centre lock, 12 speeds
Spokes	Stainless steel, #, FW: 2 mm RW: 2.34 mm
Tyres	SUPERO, Optima safe, 50-622
Hose	CST, #, #
Front light	Hercules, FH 40, LED, up to 40 lux
Rear lamp	COMUS, RZ-100EB, LED, pannier rack rear light
Dynamo	...
Pannier rack	i-Rack, with spring flap
Guards	SKS, PET A60, plastic
Chain guard	HORN, Catena 17, #
Lock	ABUS, #, battery lock
Stand/stand mount	PLETSCHER, Comp Flex 40, #
Motor	BROSE, S-MAG Pro FIT, 250 watt, 90 Nm
Battery manufacturer name	BMZ, UltraCore FIT, 740 Wh
On-board computer	FIT, remote controller, with Compact 2.0 centre display, 2"
Charger	FIT, Fast Charger, 0660, 4 A

...not available

Not yet available when the instructions were produced

11.3.28 Rob Fold F5

22-Y-0008

Fork	Rigid fork aluminium, 1.5"
Damper	...
Steering headset	Integrated
Handlebars	Trekking, aluminium, 31.8 mm, 28 mm high, handle angle 37°
Handles	ERGO, with integrated clamping
Stem	Aluminium, height-adjustable, 90 mm, with "All Up" height adjustment, 150 mm
Saddle	BROOKS, LookIn Relaxed, #
Seat post	KALLOY, SP-DC1, aluminium, 400 mm, Ø27.2 mm
Saddle clamp	QR, black
Crank set	FSA, CK-220, 170
Pedals	MARWI, #, #
Rear derailleur	...
Shifter	SHIMANO, #, Revoshift twist grip
Front derailleur	...
Cassette/cassette sprocket	GATES, CDX, 28T
Chain	...
Belt	GATES, CDX, belt
Front brake	SHIMANO, BR-MT200
Rear brake	SHIMANO, BR-MT200
Brake lever, front/rear	SHIMANO, BL-MT201, shifter
Disc, front	SHIMANO, SM-RT10, 180 mm
Disc, rear	SHIMANO, SM-RT10, 160 mm
Wheel set	...
Rim, front/rear	#, DDM-1, 20"
Hub, front	#
Hub, rear	SHIMANO, Nexus SG-C7050-5C, gear hub, back-pedal brake, 5 speeds
Spokes	Stainless steel, #, FW: 2 mm RW: 2.34 mm
Tyres	SCHWALBE, Big Apple, Performance Line, RaceGuard, 55-406
Tube	SCHWALBE, DV 7, #
Front light	Hercules, FH 40, LED, up to 40 lux
Rear lamp	BUSCH & MÜLLER, 2C, pannier rack rear LED light
Dynamo	...
Pannier rack	i-Rack, system carrier, with spring flap
Guards	SKS, B60, plastic
Chain guard	HERRMANS®, Sillyde, #
Lock	ABUS, #, battery lock, with Plus cylinder
Stand/stand mount	MASSLOAD, CL-KA47, two-leg stand
Motor	BOSCH, Performance Line, BDU363, 250 watt, 65 Nm
Battery manufacturer name	BOSCH, PowerPack 500, BBS275, 500 Wh
On-board computer	BOSCH, Intuvia, BUI255, with Intuvia control panel
Charger	BOSCH, Compact Charger, BCS230, 2 A

...not available

Not yet available when the instructions were produced

11.3.29 Rob Fold F8

22-Y-0010

Fork	Rigid fork aluminium, 1.5"
Damper	...
Steering headset	Integrated
Handlebars	Trekking, aluminium, 31.8 mm, 28 mm high, handle angle 37°
Handles	ERGO, with integrated clamping
Stem	Aluminium, height-adjustable, 90 mm, with "All Up" height adjustment, 150 mm
Saddle	BROOKS, LookIn Relaxed, #
Seat post	KALLOY, SP-DC1, aluminium, 400 mm, Ø27.2 mm
Saddle clamp	QR, black
Crank set	FSA, CK-220, 170
Pedals	MARWI, #, #
Rear derailleur	...
Shifter	SHIMANO, #, Revoshift twist grip
Front derailleur	...
Cassette/cassette sprocket	Shimano, #, 18T
Chain	KMC, Z1EHX, chain
Belt	...
Front brake	SHIMANO, BR-MT200
Rear brake	SHIMANO, BR-MT200
Brake lever, front/rear	SHIMANO, BL-MT201, shifter
Disc, front	SHIMANO, SM-RT10, 180 mm
Disc, rear	SHIMANO, SM-RTC60, 160 mm
Wheel set	...
Rim, front/rear	#, DDM-1, 20"
Hub, front	#
Hub, rear	SHIMANO, Nexus SG-C6001-8C, gear hub, back-pedal brake, 8 speeds
Spokes	FW: Stainless steel 2 mm RW: Stainless steel 2.34 mm
Tyres	SCHWALBE, Big Apple, Performance Line, RaceGuard, 55-406
Tube	SCHWALBE, DV 7, #
Front light	Hercules, FH 40, LED, up to 40 lux
Rear lamp	BUSCH & MÜLLER, 2C, pannier rack rear LED light
Dynamo	...
Pannier rack	i-Rack, system carrier, with spring flap
Guards	SKS, B60, plastic
Chain guard	HERRMANS®, Sillyde, #
Lock	ABUS, #, battery lock, with Plus cylinder
Stand/stand mount	MASSLOAD, CL-KA47, two-leg stand
Motor	BOSCH, Active Line Plus, BDU350, 250 Watt, 50 Nm
Battery manufacturer name	BOSCH, PowerPack 400, BBS265, 400 Wh
On-board computer	BOSCH, Intuvia, BUI255, with Intuvia control panel
Charger	BOSCH, Compact Charger, BCS230, 2 A

...not available

Not yet available when the instructions were produced

11.3.30 Rob Fold R5

22-Y-0007

Fork	Rigid fork aluminium, 1.5"
Damper	...
Steering headset	Integrated
Handlebars	Trekking, aluminium, 31.8 mm, 28 mm high, handle angle 37°
Handles	ERGO, with integrated clamping
Stem	Aluminium, height-adjustable, 90 mm, with "All Up" height adjustment, 150 mm
Saddle	BROOKS, LookIn Relaxed, #
Seat post	KALLOY, SP-DC1, aluminium, 400 mm, Ø27.2 mm
Saddle clamp	QR, black
Crank set	FSA, CK-220, 170
Pedals	MARWI, #, #
Rear derailleur	...
Shifter	SHIMANO, #, Revoshift twist grip
Front derailleur	...
Cassette/cassette sprocket	GATES, CDX, 28T
Chain	...
Belt	GATES, CDX, belt
Front brake	SHIMANO, BR-MT200
Rear brake	SHIMANO, BR-MT200
Brake lever, front/rear	SHIMANO, BL-MT201, shifter
Disc, front	SHIMANO, SM-RT10, 180 mm
Disc, rear	SHIMANO, SM-RTC60, 160 mm
Wheel set	...
Rim, front/rear	#, DDM-1, 20"
Hub, front	#
Hub, rear	SHIMANO, Nexus SG-C7050-5C, gear hub, back-pedal brake, 5 speeds
Spokes	FW: Stainless steel, 2 mm RW: Stainless steel, 2.34 mm
Tyres	SCHWALBE, Big Apple, Performance Line, RaceGuard, 55-406
Tube	SCHWALBE, DV 7, #
Front light	Hercules, FH 40, LED, up to 40 lux
Rear lamp	BUSCH & MÜLLER, 2C, pannier rack rear LED light
Dynamo	...
Pannier rack	i-Rack, system carrier, with spring flap
Guards	SKS, B60, plastic
Chain guard	HERRMANS®, Sillyde, #
Lock	ABUS, #, battery lock, with Plus cylinder
Stand/stand mount	MASSLOAD, CL-KA47, two-leg stand
Motor	BOSCH, Performance Line, BDU363, 250 watt, 65 Nm
Battery manufacturer name	BOSCH, PowerPack 500, BBS275, 500 Wh
On-board computer	BOSCH, Intuvia, BUI255, with Intuvia control panel
Charger	BOSCH, Compact Charger, BCS230, 2 A

...not available

Not yet available when the instructions were produced

11.3.31 Rob Fold R8

22-Y-0009

Fork	Rigid fork aluminium, 1.5"
Damper	...
Steering headset	Integrated
Handlebars	Trekking, aluminium, 31.8 mm, 28 mm high, handle angle 37°
Handles	ERGO, with integrated clamping
Stem	Aluminium, height-adjustable, 90 mm, with "All Up" height adjustment, 150 mm
Saddle	BROOKS, LookIn Relaxed, #
Seat post	KALLOY, SP-DC1, aluminium, 400 mm, Ø27.2 mm
Saddle clamp	QR, black
Crank set	FSA, CK-220, 170
Pedals	MARWI, #, #
Rear derailleur	...
Shifter	SHIMANO, #, Revoshift twist grip
Front derailleur	...
Cassette/cassette sprocket	Shimano, #, 18T
Chain	KMC, Z1EHX, chain
Belt	...
Front brake	SHIMANO, BR-MT200
Rear brake	SHIMANO, BR-MT200
Brake lever, front/rear	SHIMANO, BL-MT201, shifter
Disc, front	SHIMANO, SM-RT10, 180 mm
Disc, rear	SHIMANO, SM-RTC60, 160 mm
Wheel set	...
Rim, front/rear	#, DDM-1, 20"
Hub, front	#
Hub, rear	SHIMANO, Nexus SG-C6001-8C, gear hub, back-pedal brake, 8 speeds
Spokes	Stainless steel, #, FW: 2 mm RW: 2.34 mm
Tyres	SCHWALBE, Big Apple, Performance Line, RaceGuard, 55-406
Tube	SCHWALBE, DV 7, #
Front light	Hercules, FH 40, LED, up to 40 lux
Rear lamp	BUSCH & MÜLLER, 2C, pannier rack rear LED light
Dynamo	...
Pannier rack	i-Rack, system carrier, with spring flap
Guards	SKS, B60, plastic
Chain guard	HERRMANS®, Sillyde, #
Lock	ABUS, #, battery lock, with Plus cylinder
Stand/stand mount	MASSLOAD, CL-KA47, two-leg stand
Motor	BOSCH, Active Line Plus, BDU350, 250 Watt, 50 Nm
Battery manufacturer name	BOSCH, PowerPack 400, BBS265, 400 Wh
On-board computer	BOSCH, Intuvia, BUI255, with Intuvia control panel
Charger	BOSCH, Compact Charger, BCS230, 2 A

...not available

Not yet available when the instructions were produced

11.3.32 Rob Fold 10

22-Y-0014

Fork	Rigid fork aluminium, 1.5"
Damper	...
Steering headset	Integrated
Handlebars	Trekking, aluminium, 31.8 mm, 28 mm high, handle angle 37°
Handles	ERGO, with integrated clamping
Stem	Aluminium, height-adjustable, 90 mm, with "All Up" height adjustment, 150 mm
Saddle	SELLE ROYAL, Nuvola, #
Seat post	KALLOY, SP-DC1, aluminium, 400 mm, Ø27.2 mm
Saddle clamp	QR, black
Crank set	FSA, CK-220, 170
Pedals	MARWI, #, #
Rear derailleur	SHIMANO, Deore M5120, 10 gears
Shifter	SHIMANO, #, Revoshift twist grip
Front derailleur	#
Cassette/cassette sprocket	SHIMANO, Deore CS-M4100, 11-42T
Chain	KMC, X10E, chain
Belt	...
Front brake	SHIMANO, BR-MT200
Rear brake	SHIMANO, BR-MT200
Brake lever, front/rear	SHIMANO, BL-MT201, shifter
Disc, front	SHIMANO, SM-RT10, 180 mm
Disc, rear	SHIMANO, SM-RT10, 160 mm
Wheel set	...
Rim, front/rear	#, DDM-1, 20"
Hub, front	#
Hub, rear	SHIMANO, FH-RM35, freewheel hub, with quick release, centre lock, 10 speeds
Spokes	Stainless steel, #, FW: 2 mm RW: 2.34 mm
Tyres	SCHWALBE, Big Apple, Performance Line, RaceGuard, 55-406
Tube	SCHWALBE, DV 7, #
Front light	Hercules, FH 40, LED, up to 40 lux
Rear lamp	BUSCH & MÜLLER, 2C, pannier rack rear LED light
Dynamo	...
Pannier rack	i-Rack, system carrier, with spring flap
Guards	SKS, B60, plastic
Chain guard	HERRMANS®, Sillyde, #
Lock	ABUS, #, battery lock, with Plus cylinder
Stand/stand mount	MASSLOAD, CL-KA88, two-leg stand
Motor	BOSCH, Performance Line, BDU363, 250 watt, 65 Nm
Battery manufacturer name	BOSCH, PowerPack 500, BBS275, 500 Wh
On-board computer	BOSCH, Intuvia, BUI255, with Intuvia control panel
Charger	BOSCH, Compact Charger, BCS230, 2 A

...not available

Not yet available when the instructions were produced

11.3.33 Robert/a deLuxe I-F8

22-Q-0081, 22-Q-0082

Fork	SR SUNTOUR, NEX-E25 HLO, 63 mm spring stiffness, adjustable, lockout
Damper	...
Steering headset	Semi-integrated
Handlebars	ERGO, City, aluminium, 31.8 mm, 640 mm, 35° handle angle
Handles	HERRMANS®, Clink, ergonomic with integrated clamping
Stem	Ahead stem, adjustable
Saddle	SELLE BASSANO, Superma, City
Seat post	LIMOTEC, S1-Z, suspension seat post, 10 mm drift, deflection 50 mm
Saddle clamp	QR, black
Crank set	SAMOX, EC38, 170
Pedals	MARWI, SP828, aluminium
Rear derailleur	...
Shifter	SHIMANO, Deore SL-M4100, shifter
Front derailleur	...
Cassette/cassette sprocket	Shimano, #, 19T
Chain	KMC, Z610, chain
Belt	...
Front brake	SHIMANO, BR-MT200
Rear brake	SHIMANO, BR-MT200
Brake lever, front/rear	SHIMANO, BL-MT201, shifter
Disc, front	SHIMANO, SM-RT10, 180 mm
Disc, rear	SHIMANO, SM-RTC60, 160 mm
Wheel set	...
Rim, front/rear	RODI, WEB 19, 28"
Hub, front	#
Hub, rear	SHIMANO, Nexus SG-C6061-8D, gear hub, 8 speeds
Spokes	Stainless steel, 2 mm
Tyres	SCHWALBE, Energizer Plus, Performance Line, GreenGuard, 50-622, wired tyre
Hose	SCHWALBE, AV 19, #
Front light	Hercules, FH 40, LED, up to 40 lux
Rear lamp	COMUS, ICR-11, integrated into the frame
Dynamo	...
Pannier rack	i-Rack, R8 system carrier, with spring flap
Guards	CURANA, Apollo 60, aluminium
Chain guard	HORN, Catena 18, #
Lock	ABUS, Pro Shield 5850, with simultaneous locking battery lock
Stand/stand mount	PLETSCHER, Comp Flex 40, #
Motor	BOSCH, Active Line Plus, BDU350, 250 Watt, 50 Nm
Battery manufacturer name	BOSCH, PowerTube 625, 625 Wh
On-board computer	BOSCH, Intuvia, BUI255, with Intuvia control panel
Charger	BOSCH, Compact Charger, BCS230, 2 A

...not available

Not yet available when the instructions were produced

11.3.34 Robert/a deLuxe I-R8

22-Q-0079, 22-Q-0080

Fork	SR SUNTOUR, NEX-E25 HLO, 63 mm spring stiffness, adjustable, lockout
Damper	...
Steering headset	Semi-integrated
Handlebars	prüfen, ist Ergotec gemeint? ERGO, City, aluminium, 31.8 mm, 640 mm, 15° handle angle
Handles	HERRMANS®, Clink, ergonomic with integrated clamping
Stem	Ahead stem, adjustable
Saddle	SELLE BASSANO, Superma, M
Seat post	LIMOTEC, S1-Z, suspension seat post, 10 mm drift, deflection 50 mm
Saddle clamp	QR, black
Crank set	SAMOX, EC38, 170
Pedals	MARWI, SP828, aluminium
Rear derailleur	...
Shifter	SHIMANO, #, Revoshift twist grip
Front derailleur	...
Cassette/cassette sprocket	Shimano, #, 19T
Chain	KMC, Z610, chain
Belt	...
Front brake	SHIMANO, BR-MT200
Rear brake	SHIMANO, BR-MT200
Brake lever, front/rear	SHIMANO, BL-MT201, shifter
Disc, front	SHIMANO, SM-RT10, 180 mm
Disc, rear	SHIMANO, SM-RTC60, 160 mm
Wheel set	...
Rim, front/rear	RODI, WEB 19, 28"
Hub, front	#
Hub, rear	SHIMANO, Nexus SG-C6001-8C, gear hub, back-pedal brake, 8 speeds
Spokes	Stainless steel, 2 mm
Tyres	SCHWALBE, Energizer Plus, Performance Line, GreenGuard, 50-622, wired tyre
Tube	SCHWALBE, AV 19, #
Front light	Hercules, FH 40, LED, up to 40 lux
Rear lamp	COMUS, ICR-11, integrated into the frame
Dynamo	...
Pannier rack	i-Rack, R8 system carrier, with spring flap
Guards	CURANA, Apollo 60, aluminium
Chain guard	HORN, Catena 18, #
Lock	ABUS, Pro Shield 5850, with simultaneous locking battery lock
Stand/stand mount	PLETSCHER, Comp Flex 40, #
Motor	BOSCH, Active Line Plus, BDU350, 250 Watt, 50 Nm
Battery manufacturer name	BOSCH, PowerTube 500, 500 Wh
On-board computer	BOSCH, Intuvia, BUI255, with Intuvia control panel
Charger	BOSCH, Compact Charger, BCS230, 2 A

...not available

Not yet available when the instructions were produced

11.3.35 Robert/a F7 Active Plus

22-Q-0003, 22-Q-0004

Fork	SR SUNTOUR, CR85 E25, steel suspension fork, 63 mm deflection
Damper	...
Steering headset	Semi-integrated
Handlebars	KALLOY, Tour, aluminium, 660 mm, 31.8 mm, 37° handle angle
Handles	ERGO, 2D, with integrated clamping
Stem	KALLOY, AL-822, adjustable
Saddle	DDK, City DDK-225A2, #
Seat post	KALLOY, SP-F102, # rigid
Saddle clamp	QR, black
Crank set	FSA, CK-220, 170
Pedals	WELLGO, C-157, non-slip
Rear derailleur	...
Shifter	SHIMANO, Deore SL-M4100, shifter
Front derailleur	...
Cassette/cassette sprocket	#
Chain	KMC, Z1EHX, chain
Belt	...
Front brake	MAGURA, HS-11, hydraulic rim brake
Rear brake	MAGURA, HS-11, hydraulic rim brake
Brake lever, front/rear	MAGURA, HS-11, shifter
Disc, front	SHIMANO, SM-RT10, 180 mm
Disc, rear	SHIMANO, SM-RTC60, 160 mm
Wheel set	...
Rim, front/rear	#, DBM-2, 26"
Hub, front	#
Hub, rear	SHIMANO, Nexus SG-C3001-7D, gear hub, 7 speeds
Spokes	FW: 2 mm RW: reinforced
Tyres	SUPERO, Optima safe, 50-622, puncture protection
Hose	CST, #, 40 mm
Front light	COMUS, F16, LED, up to 20 lux
Rear lamp	COMUS, R-232EB, pannier rack rear light
Dynamo	...
Pannier rack	i-Rack, system carrier with spring flap
Guards	Plastic with V-rod
Chain guard	HORN, Catena 18, #
Lock	AXA, #, battery lock
Stand/stand mount	Standwell, SW-RA031J, #, 40 mm
Motor	BOSCH, Active Line Plus, BDU350, 250 Watt, 50 Nm
Battery manufacturer name	BOSCH, PowerPack 400, BBR265, 400 Wh
On-board computer	BOSCH, Intuvia, BUI255, with Intuvia control panel
Charger	BOSCH, Compact Charger, BCS230, 2 A

...not available

Not yet available when the instructions were produced

11.3.36 Robert/a I-R8

22-Q-0085, 22-Q-0086, 22-Q-0087

Fork	SR SUNTOUR, NEX-DS, 63 mm deflection, adjustable
Damper	...
Steering headset	Semi-integrated
Handlebars	ERGO, City, aluminium, 31.8 mm, 640 mm, 35° handle angle
Handles	ERGO, with integrated clamping
Stem	Ahead stem, adjustable
Saddle	COMODORO, City, #
Seat post	KALLOY, SP-383, suspension seat post, 10 mm drift, deflection 45 mm
Saddle clamp	QR, black
Crank set	FSA, CK-220, 170
Pedals	WELLGO, C-157, non-slip
Rear derailleur	...
Shifter	SHIMANO, Acera SL-M315, Rapidfire Plus shifter
Front derailleur	...
Cassette/cassette sprocket	GATES, CDX, 24T
Chain	...
Belt	GATES, CDX, belt
Front brake	SHIMANO, BR-MT200
Rear brake	SHIMANO, BR-MT200
Brake lever, front/rear	SHIMANO, BL-MT201, #
Disc, front	SHIMANO, SM-RT10, 180 mm
Disc, rear	SHIMANO, SM-RTC60, 160 mm
Wheel set	...
Rim, front/rear	#, DDM-2, 26"
Hub, front	#
Hub, rear	SHIMANO, Nexus SG-C6001-8C, gear hub, back-pedal brake, 8 speeds
Spokes	FW: 2 mm RW: reinforced
Tyres	SUPERO, Optima safe, 50-622, puncture protection
Tube	CST, #, 40 mm
Front light	Hercules, FH 40, LED, up to 40 lux
Rear lamp	COMUS, R-232EB, pannier rack rear light
Dynamo	...
Pannier rack	i-Rack, system carrier with spring flap
Guards	SKS, #, plastic
Chain guard	HORN, Catena 18, #
Lock	ABUS, XPlus, battery lock
Stand/stand mount	PLETSCHER, Comp Flex 40, #
Motor	BOSCH, Active Line Plus, BDU350, 250 Watt, 50 Nm
Battery manufacturer name	BOSCH, PowerTube 500, 500 Wh
On-board computer	BOSCH, Intuvia, BUI255, with Intuvia control panel
Charger	BOSCH, Compact Charger, BCS230, 2 A

...not available

Not yet available when the instructions were produced

11.3.37 Robert/a I-R8 Belt

22-Q-0083, 22-Q-0084

Fork	SR SUNTOUR, NEX-DS, 63 mm deflection, adjustable
Damper	...
Steering headset	Semi-integrated
Handlebars	ERGO, City, aluminium, 31.8 mm, 640 mm, 35° handle angle
Handles	ERGO, with integrated clamping
Stem	Ahead stem, adjustable
Saddle	COMODORO, City, #
Seat post	KALLOY, SP-383, suspension seat post, 10 mm drift, deflection 45 mm
Saddle clamp	QR, black
Crank set	FSA, CK-220, 170
Pedals	WELLGO, C-157, non-slip
Rear derailleur	...
Shifter	SHIMANO, SL-M315 is non-series Acera SL-M315, Rapidfire Plus shifter
Front derailleur	...
Cassette/cassette sprocket	GATES, CDX, 24T
Chain	...
Belt	GATES, CDX, belt
Front brake	SHIMANO, BR-MT200
Rear brake	SHIMANO, BR-MT200
Brake lever, front/rear	SHIMANO, BL-MT201, #
Disc, front	SHIMANO, SM-RT10, 180 mm
Disc, rear	SHIMANO, SM-RTC60, 160 mm
Wheel set	...
Rim, front/rear	#, DDM-2, 26"
Hub, front	#
Hub, rear	SHIMANO, Nexus SG-C6001-8C, gear hub, back-pedal brake, 8 speeds
Spokes	FW: 2 mm RW: reinforced
Tyres	SUPERO, Optima safe, 50-622, puncture protection
Tube	CST, #, 40 mm
Front light	Hercules, FH 40, LED, up to 40 lux
Rear lamp	COMUS, R-232EB, pannier rack rear light
Dynamo	...
Pannier rack	i-Rack, system carrier with spring flap
Guards	SKS, #, plastic
Chain guard	HORN, Catena 18, #
Lock	ABUS, XPlus, battery lock
Stand/stand mount	PLETSCHER, Comp Flex 40, #
Motor	BOSCH, Active Line Plus, BDU350, 250 Watt, 50 Nm
Battery manufacturer name	BOSCH, PowerTube 500, 500 Wh
On-board computer	BOSCH, Intuvia, BUI255, with Intuvia control panel
Charger	BOSCH, Compact Charger, BCS230, 2 A

...not available

Not yet available when the instructions were produced

11.3.38 Robert/a Pro I-R5

22-Q-0074, 22-Q-0075

Fork	SR SUNTOUR NCX- D, air suspension fork, 63 mm deflection, lockout, 15 mm quick release axle
Damper	...
Steering headset	Semi-integrated
Handlebars	ZECURE, #, aluminium, 31.8 mm, 640 mm, 15° handle angle
Handles	ERGON, GP-1, #
Stem	ZECURE, UP2+, Ahead stem, adjustable, 110 mm
Saddle	SELLE BASSANO, Superma, M
Seat post	LIMOTEC, A3, suspension seat post, 100 mm hub, deflection 40 mm
Saddle clamp	QR, black
Crank set	SAMOX, EC38, 170
Pedals	MARWI, SP828, aluminium
Rear derailleur	...
Shifter	SHIMANO, SL-M315, Rapidfire Plus shifter
Front derailleur	...
Cassette/cassette sprocket	GATES, CDX, 28T
Chain	...
Belt	GATES, CDX, belt
Front brake	SHIMANO, BR-MT200
Rear brake	SHIMANO, BR-MT200
Brake lever, front/rear	SHIMANO, BL-MT201, shifter
Disc, front	SHIMANO, SM-RT10, 180 mm, centre lock
Disc, rear	SHIMANO, SM-RT60, 160 mm, 5-hole
Wheel set	...
Rim, front/rear	RODI, WEB 19, 28"
Hub, front	#
Hub, rear	SHIMANO, Nexus SG-C7050-5C, gear hub, back-pedal brake, 5 speeds
Spokes	Stainless steel, 2 mm
Tyres	SCHWALBE, Marathon E-Plus, Performance Line, SmartDualGuard, 50-622
Hose	SCHWALBE, AV 19, #
Front light	HERCULES, FH 100, LED, up to 100 lux
Rear lamp	COMUS, ICR-11, integrated into the frame
Dynamo	...
Pannier rack	i-Rack, R8 system carrier, with spring flap
Guards	CURANA, Apollo 60, aluminium
Chain guard	HORN, Catena 18, #
Lock	ABUS, Pro Shield 5850, with simultaneous locking battery lock
Stand/stand mount	PLETSCHER, Comp Flex 40, #
Motor	BOSCH, Performance Line, BDU363, 250 watt, 65 Nm
Battery manufacturer name	BOSCH, PowerTube 625, 625 Wh
On-board computer	BOSCH, Intuvia, BUI255, with Intuvia control panel
Charger	BOSCH, Compact Charger, BCS230, 2 A

...not available

Not yet available when the instructions were produced

11.3.39 Robert/a Pro I-R8

22-Q-0076, 22-Q-0077

Fork	SR SUNTOUR NCX- D, air suspension fork, 63 mm deflection, lockout, 15 mm quick release axle
Damper	...
Steering headset	Semi-integrated
Handlebars	ZECURE, #, aluminium, 31.8 mm, 640 mm, 15° handle angle
Handles	ERGON, GP-1, #
Stem	ZECURE, UP2+, Ahead stem, adjustable, 110 mm
Saddle	SELLE BASSANO, Superma, M
Seat post	LIMOTEC, A3, suspension seat post, 100 mm hub, deflection 40 mm
Saddle clamp	QR, black
Crank set	SAMOX, EC38, 170
Pedals	MARWI, SP828, aluminium
Rear derailleur	...
Shifter	SHIMANO, #, Revoshift twist grip
Front derailleur	...
Cassette/cassette sprocket	GATES, CDX, 22T
Chain	...
Belt	GATES, CDX, belt
Front brake	SHIMANO, BR-MT200
Rear brake	SHIMANO, BR-MT200
Brake lever, front/rear	SHIMANO, BL-MT201, shifter
Disc, front	SHIMANO, SM-RT10, 180 mm, centre lock
Disc, rear	SHIMANO, SM-RT60, 160 mm, 5-hole
Wheel set	...
Rim, front/rear	RODI, WEB 19, 28"
Hub, front	#
Hub, rear	SHIMANO, Nexus SG-C6001-8C, gear hub, back-pedal brake, 8 speeds
Spokes	Stainless steel, 2 mm
Tyres	SCHWALBE, Marathon E-Plus, Performance Line, SmartDualGuard, 50-622
Hose	SCHWALBE, AV 19, #
Front light	HERCULES, FH 100, LED, up to 100 lux
Rear lamp	COMUS, ICR-11, integrated into the frame
Dynamo	...
Pannier rack	i-Rack, R8 system carrier, with spring flap
Guards	CURANA, Apollo 60, aluminium
Chain guard	HORN, Catena 18, #
Lock	ABUS, Pro Shield 5850, with simultaneous locking battery lock
Stand/stand mount	PLETSCHER, Comp Flex 40, #
Motor	BOSCH, Active Line Plus, BDU350, 250 Watt, 50 Nm
Battery manufacturer name	BOSCH, PowerTube 625, 625 Wh
On-board computer	BOSCH, Intuvia, BUI255, with Intuvia control panel
Charger	BOSCH, Compact Charger, BCS230, 2 A

...not available


Not yet available when the instructions were produced

11.4 Charger operating instructions



Charger


BCS220 | BCS230 | BCS250

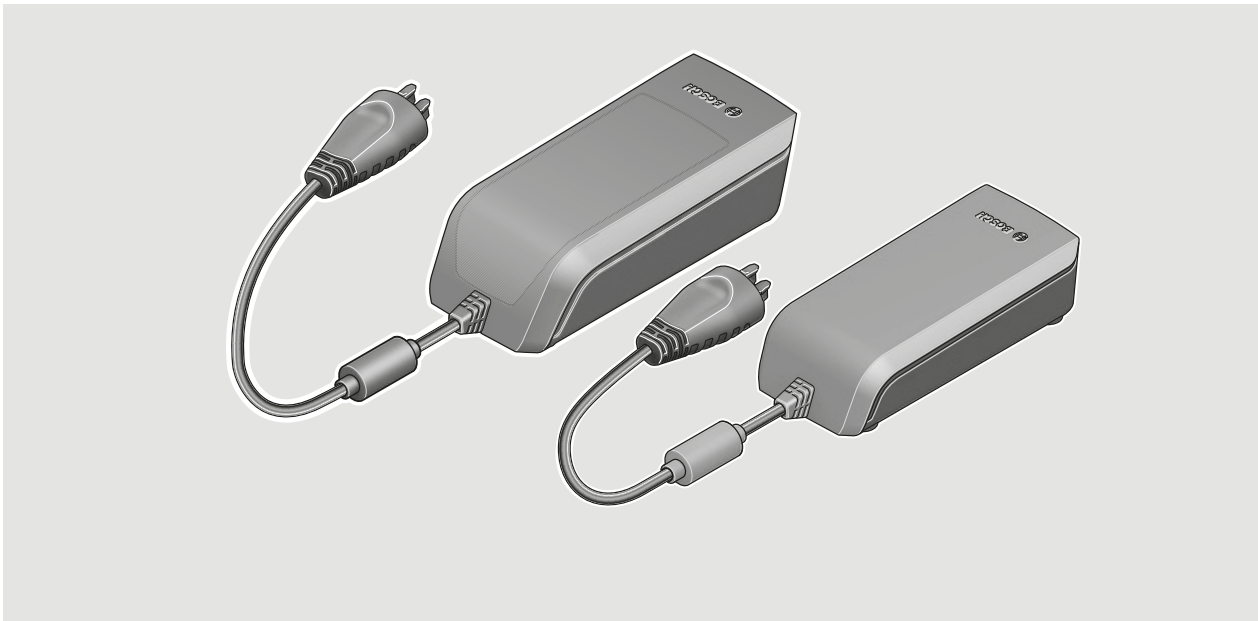

- de** Originalbetriebsanleitung
- en** Original operating instructions
- fr** Notice d'utilisation d'origine
- es** Instrucciones de servicio originales
- pt** Manual de instruções original
- it** Istruzioni d'uso originali
- nl** Oorspronkelijke gebruiksaanwijzing
- da** Original brugsanvisning
- sv** Originalbruksanvisning
- no** Original bruksanvisning
- fi** Alkuperäinen käyttöopas
- el** Πρωτότυπες οδηγίες λειτουργίας




2 |


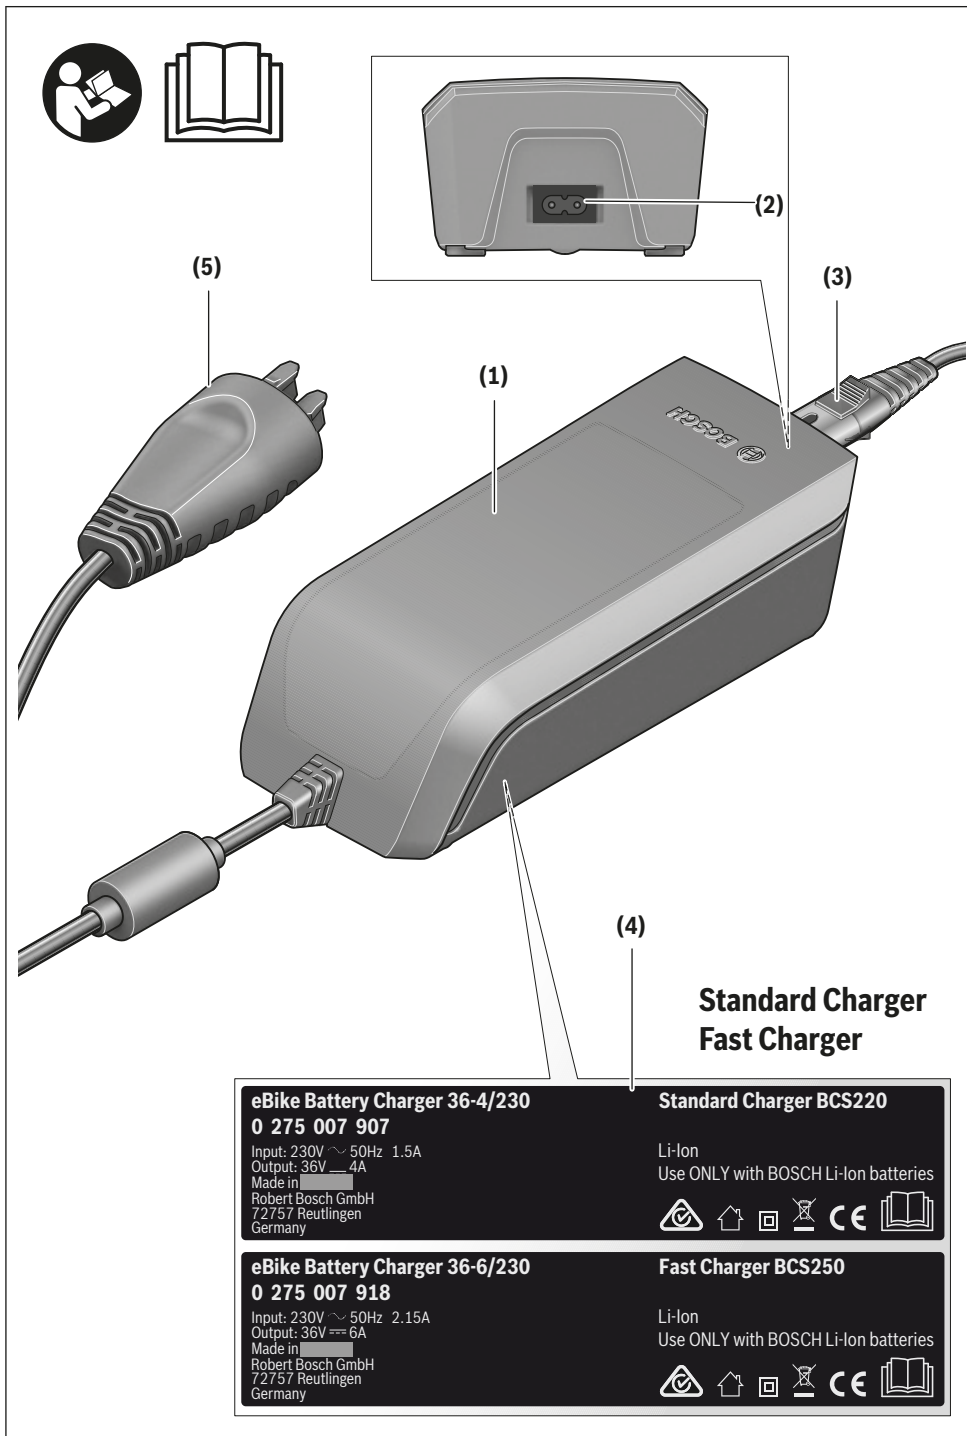


0 275 007 XCX | (13.03.2020)

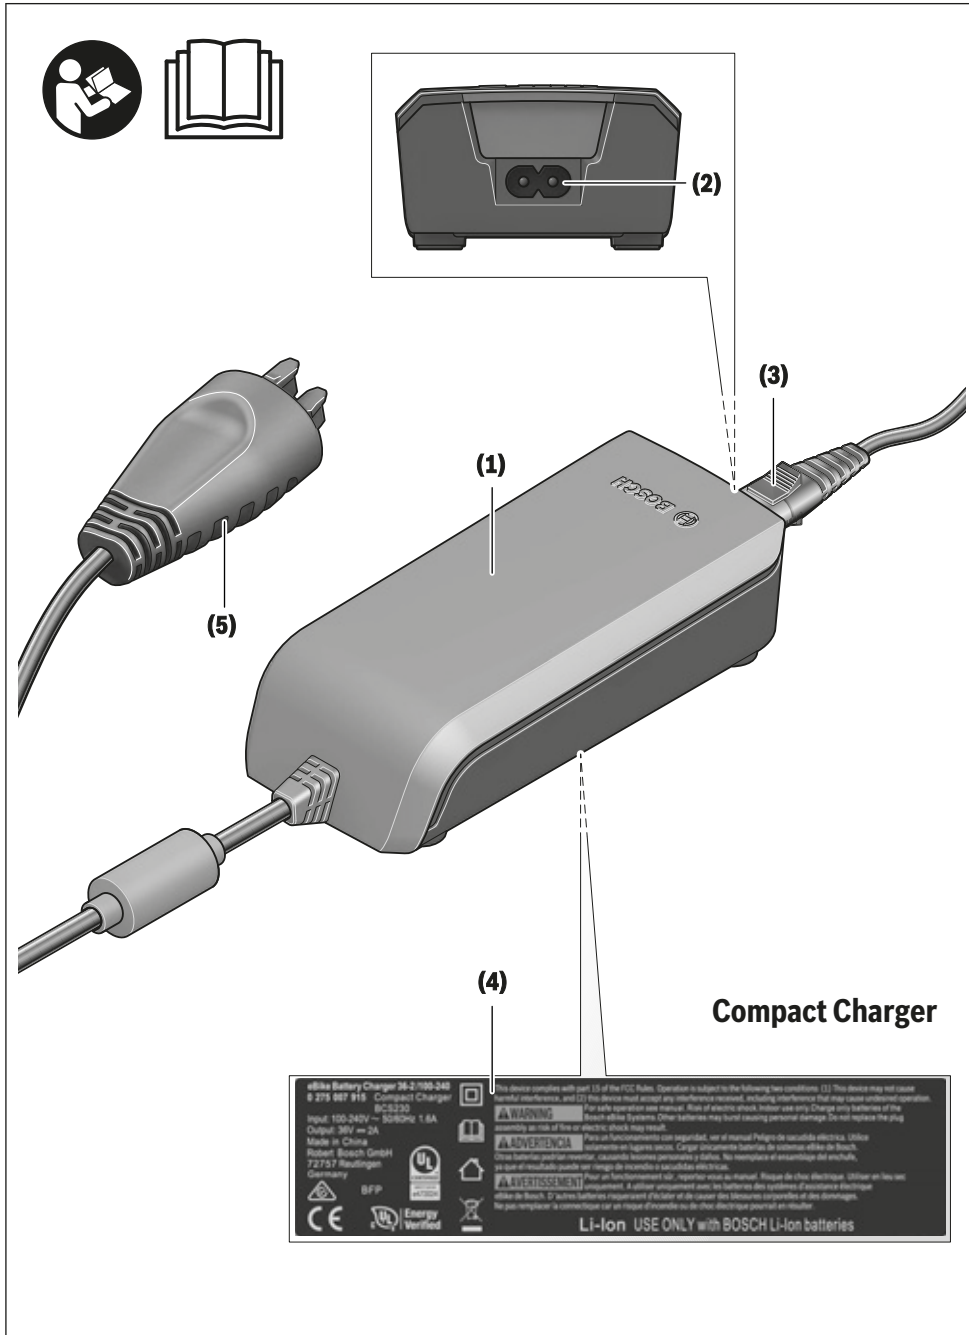Bosch eBike Systems




4 |

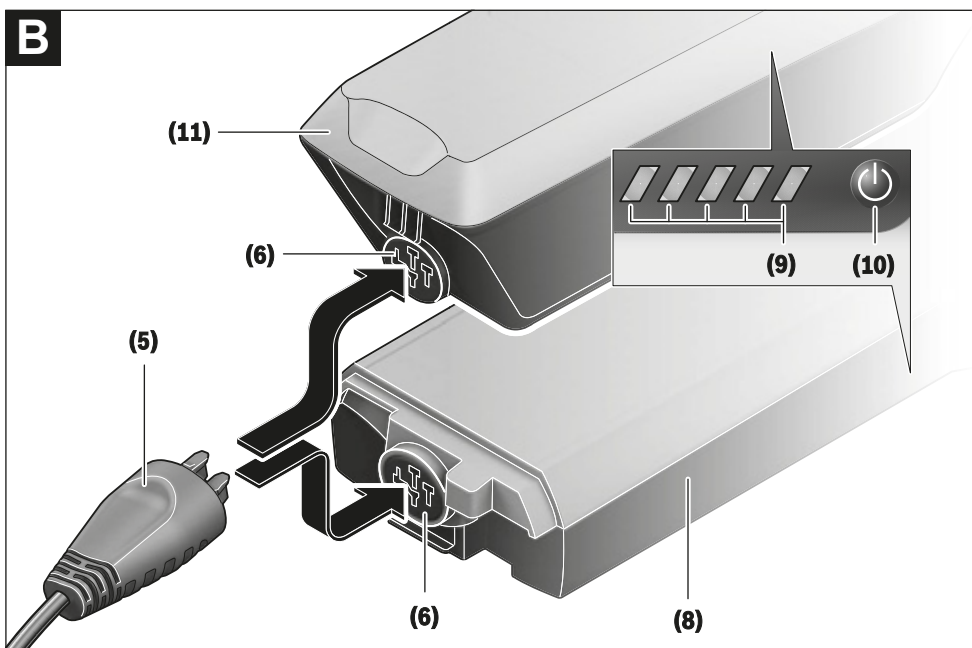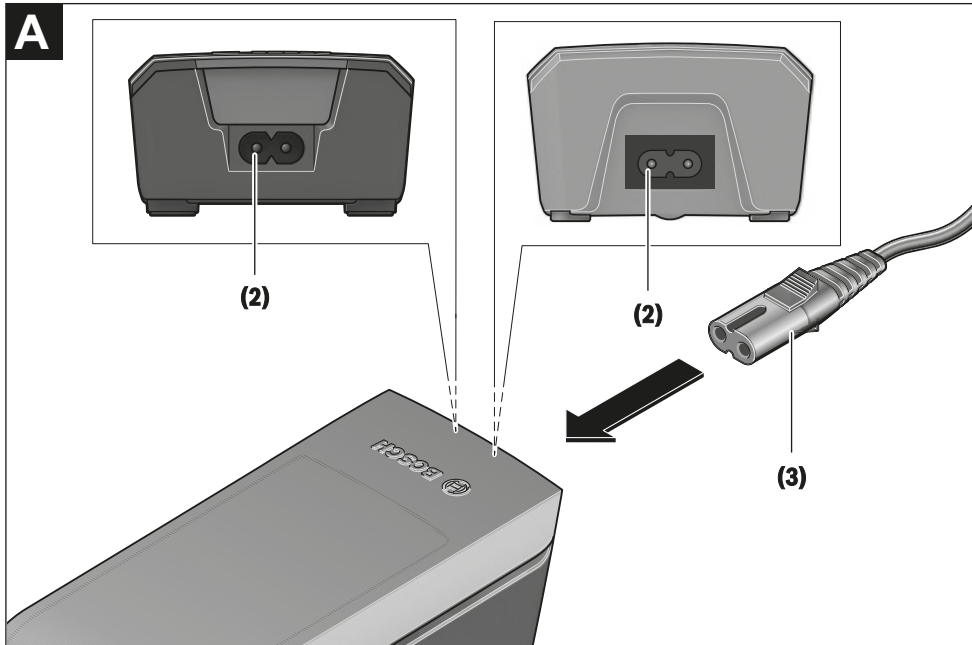


0 275 007 XCX | (13.03.2020)

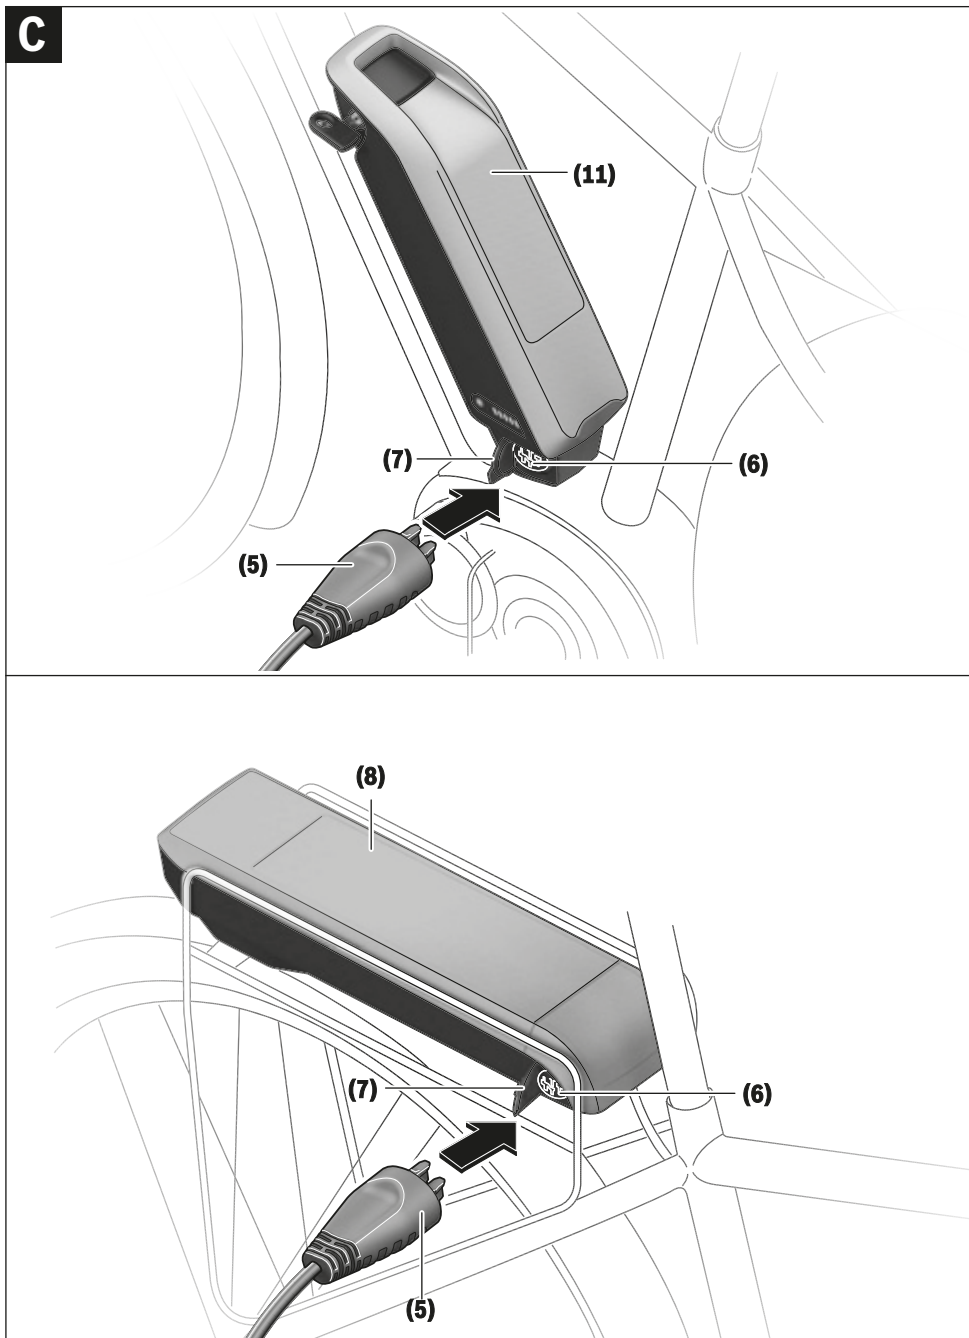Bosch eBike Systems



6 |

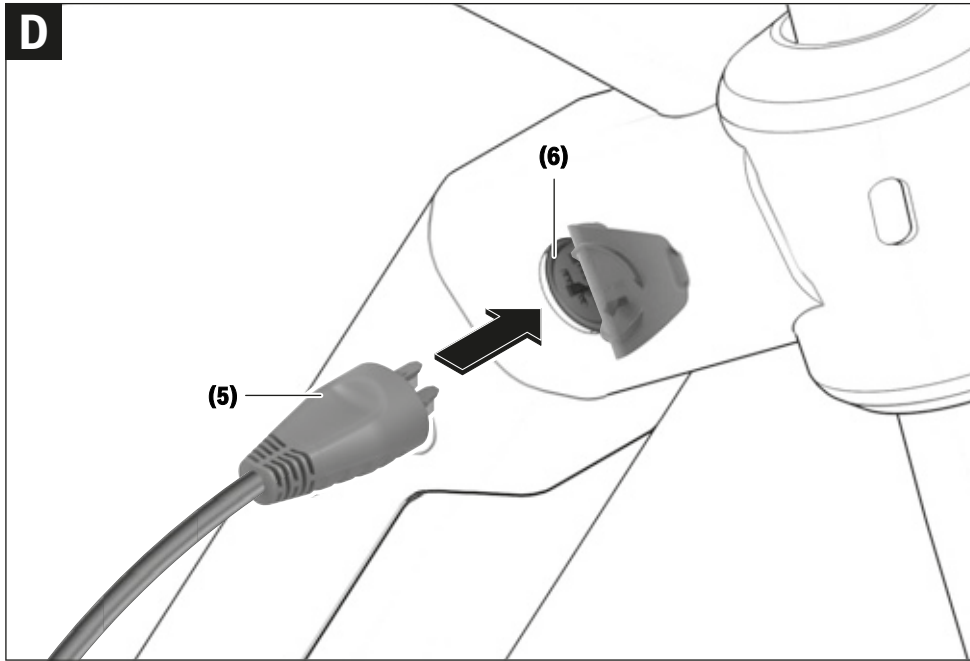

Safety instructions



Read all the safety and general instructions. Failure to observe the safety and general instructions may result in electric shock,

fire and/or serious injury.

Save all safety warnings and instructions for future reference.

The term **battery** is used in these instructions to mean all original Bosch eBike rechargeable battery packs.



Do not expose the charger to rain or wet conditions. If water enters a charger, there is a risk of electric shock.

- ▶ **Charge only Bosch lithium-ion batteries that are approved for use in eBikes. The battery voltage must match the battery charging voltage of the charger.** Otherwise there is a danger of fire and explosion.
- ▶ **Keep the charger clean.** Dirt poses a risk of electric shock.
- ▶ **Always check the charger, cable and plug before use. Stop using the charger if you discover any damage. Do not open the charger.** Damaged chargers, cables and plugs increase the risk of electric shock.
- ▶ **Do not operate the charger on an easily ignited surface (e.g. paper, textiles, etc.) or in a flammable environment.** There is a risk of fire due to the charger heating up during operation.
- ▶ **Take care if you touch the charger while it is charging. Wear protective gloves.** The charger can get very hot, especially when the ambient temperature is high.
- ▶ **The battery may give off fumes if it becomes damaged or is used incorrectly. Ensure the area is well ventilated and seek medical attention should you experience any adverse effects.** The fumes may irritate the respiratory system.
- ▶ **The eBike battery must not be left unattended while charging.**
- ▶ **Supervise children during use, cleaning and maintenance.** This will ensure that children do not play with the charger.
- ▶ **Children or persons who, owing to their physical, sensory or mental limitations or to their lack of experience or knowledge, are not capable of safely operating the charger may only use this charger under supervision or after having been instructed by a responsible person.** Otherwise, there is a danger of operating errors and injuries.
- ▶ **Read and observe the safety warnings and directions contained in all the eBike system operating instructions and in the operating instructions of your eBike.**
- ▶ A sticker in English is adhered to the bottom of the charger (marked **(4)** in the diagram on the graphics page). This says: Use ONLY with BOSCH lithium-ion batteries.

Product description and specifications

Intended Use

In addition to the functions shown here, changes to software relating to troubleshooting and functional modifications may be introduced at any time.

The Bosch eBike chargers are intended exclusively for charging Bosch eBike batteries and must not be used for any other purpose.

Product features

The numbering of the components shown refers to the illustrations on the graphics pages at the beginning of the manual.

Individual illustrations in these operating instructions may differ slightly from the actual conditions depending on the equipment of your eBike.

- (1) Charger
- (2) Device socket
- (3) Device connector
- (4) Charger safety instructions
- (5) Charging connector
- (6) Socket for charging connector
- (7) Charging socket cover
- (8) Rack-mounted battery
- (9) Operation/state of charge indicator
- (10) Battery on/off button
- (11) Standard battery

English – 2

Technical data

Charger		Standard charger (36-4/230)	Compact charger (36-2/100-230)	Fast charger (36-6/230)
Product code		BCS220	BCS230	BCS250
Rated voltage	V~	207 to 264	90 to 264	207 to 264
Frequency	Hz	47 to 63	47 to 63	47 to 63
Battery charging voltage	V=	36	36	36
Charging current (max.)	A	4	2	6 ^{A)}
Charging time				
- PowerPack 300, approx.	hrs	2.5	5	2
- PowerPack 400, approx.	hrs	3.5	6.5	2.5
- PowerPack 500, approx.	hrs	4.5	7.5	3
Operating temperature	°C	0 to +40	0 to +40	0 to +40
Storage temperature	°C	+10 to +40	+10 to +40	+10 to +40
Weight, approx.	kg	0.8	0.6	1.0
Protection rating		IP 40	IP 40	IP 40

A) The charging current is limited to 4 A for the PowerPack 300 and for Classic+ Line batteries.

The specifications apply to a rated voltage [U] of 230 V. These specifications may vary at different voltages and in country-specific models.

Operation

Start-up

Connecting the charger to the mains (see figure A)

► **Pay attention to the mains voltage.** The voltage of the power source must match the voltage specified on the rating plate of the charger. Chargers marked 230 V can also be operated at 220 V.

Plug the device connector **(3)** of the power cable into the device socket **(2)** on the charger.

Connect the power cable (country-specific) to the mains.

Charging the removed battery (see figure B)

Switch the battery off and remove it from its holder on the eBike. When doing so, read and observe the operating instructions of the battery.

► **Ensure the battery is placed on clean surfaces only.** Avoid getting dirt, e.g. sand or soil, in the charging socket and contacts in particular.

Plug the charging connector **(5)** of the charger into the socket **(6)** on the battery.

Charging the battery on the bike (see figures C and D)

Switch the battery off. Clean the cover of the charging socket **(7)**. Avoid getting dirt, e.g. sand or soil, in the charging socket and contacts in particular. Lift the cover of the charging socket **(7)** and plug the charging connector **(5)** into the charging socket **(6)**.

► **There is a risk of fire due to the charger heating up during charging. Ensure the battery on the bike is completely dry and placed on a fireproof surface before charging.** If this is not possible, remove the battery from the holder and charge it in a more suitable location.

When doing so, read and observe the operating instructions of the battery.

Charging process for two batteries

If two batteries are fitted to an eBike, both batteries can be charged using the uncovered connection. To begin with, both batteries are charged one after the other until they reach approx. 80–90 % capacity, then they are both fully charged at the same time (the LEDs flash on both batteries).

When the bike is in operation, power is drawn from both batteries on an alternating basis.

If you take the batteries out of the holders, you can charge each one individually.

Charging process

The charging process begins as soon as the charger is connected to the battery or charging socket on the bike and to the mains.

Note: The charging process is only possible when the temperature of the eBike battery is within the permitted charging temperature range.

Note: The drive unit is deactivated during the charging process.

The battery can be charged with and without the on-board computer. When charging without the on-board computer, the charging procedure can be observed on the battery charge indicator.

When the on-board computer is connected, a charging notification appears on the display.

The state of charge is displayed by the battery charge indicator **(9)** on the battery and by the bars on the on-board computer.

The LEDs on the battery charge indicator **(9)** flash during the charging process. Each solid illuminated LED represents ap-

proximately 20 % of the charging capacity. The flashing LED indicates the next 20 % currently charging.

Once the eBike battery is fully charged, the LEDs go out immediately and the on-board computer is switched off. The charging process is terminated. The state of charge can be displayed for three seconds by pressing the on/off button (10) on the eBike battery.




Disconnect the charger from the mains and the battery from the charger.

When the battery is disconnected from the charger, the battery is automatically switched off.

Note: If you have charged the battery on the bike, carefully close the charging socket (6) with the cover (7) after charging, so that no dirt or water can get in.

If the charger is not disconnected from the battery after charging, after a few hours the charger will switch itself back on, check the state of charge of the battery and begin the charging procedure again if necessary.

Errors – causes and corrective measures

Cause	Corrective measures
 <p>Battery defective</p>	<p>Two LEDs flash on the battery.</p> <p>Contact an authorised bike dealership.</p>
 <p>Battery too warm or too cold</p>	<p>Three LEDs flash on the battery.</p> <p>Disconnect the battery from the charger until the charging temperature range has been reached.</p> <p>Do not reconnect the battery to the charger until it has reached the correct charging temperature.</p>
 <p>The charger is not charging.</p>	<p>No LEDs flashing (one or more LEDs will remain permanently lit depending on the state of charge of the eBike battery).</p> <p>Contact an authorised bike dealership.</p>
Charging not possible (no indicator on battery)	
Connector not attached properly	Check all connections.
Battery contacts dirty	Carefully clean the battery contacts.
Plug socket, cable or charger defective	Check the mains voltage, have the charger checked over by a bike dealership.
Battery defective	Contact an authorised bike dealership.

Maintenance and servicing

Maintenance and cleaning

If the charger fails, please contact an authorised bike dealership.

After-sales service and advice on using products

If you have any questions about the charger, contact an authorised bike dealership.

For contact details of authorised bike dealerships, please visit www.bosch-ebike.com.

Disposal

Chargers, accessories and packaging should be recycled in an environmentally friendly manner.

Do not dispose of chargers along with household waste.

Only for EU countries:



According to the European Directive 2012/19/EU on Waste Electrical and Electronic Equipment and its implementation into national law, chargers that are no longer usable must be collected separately and disposed of in an environmentally friendly manner.

Subject to change without notice.

12 Glossary

Bicycle for young adults

Source: ISO 4210-2: pedelec designed for use on public roads by a young adult whose weight is less than 40 kg, with maximum saddle height of 635 mm or more and less than 750 mm (see ISO 4210).

Brake lever

Source: EN 15194:2017: lever used to apply the brake.

Braking distance

Source: EN 15194:2017: distance travelled by a pedelec between the commencement of braking and the point at which the pedelec comes to rest.

Cargo bike

Source: DIN 79010: pedelec mainly designed to carry goods.

CE marking

Source: Directive 2006/42/EC on Machinery: the manufacturer uses the CE marking to declare that the pedelec complies with the applicable requirements.

City and trekking bicycles

Source: EN-ISO 4210 - 2: pedelec designed for use on public roads primarily for means of transportation or leisure.

Consumables

Source: EN 82079-1: any part or material that is needed to continue using or maintain the product.

Decommissioning

Source: DIN 31051: intentional, unlimited interruption in an object's functional capability.

Disc brake

Source: EN 15194:2017: brake in which brake pads are used to grip the lateral faces of a thin disc attached to or incorporated into the wheel hub.

Drive belt

Source: EN 15194:2017: seamless ring belt which is used as a means of transmitting drive force.

Electrical control system

Source: EN 15194:2017: electronic and/or electrical component or an assembly of components provided for installation into a vehicle, together with all electrical connections and associated wiring for the motor electrical power assistance.

Electrically power assisted pedelec, pedelec

Source: EN 15194:2017: electrically power assisted cycle pedelec EPAC bicycles, equipped with pedals and an auxiliary electric motor, which cannot be propelled exclusively by means of the auxiliary electric motor, except in start-up assistance mode.

Emergency stop

Source: ISO 13850:2015: function or signal, designed: — to avert arising or reduce existing hazards to persons, damage to machinery or to work in progress; – to be initiated by a single human action.

Fault

Source: EN 13306:2018-02, 6.1: state of an item (4.2.1) characterized by inability to perform a required function (4.5.1), excluding the inability during preventive maintenance or other planned actions, or due to lack of external resources.

Folding bicycle

Source: ISO 4210-2: pedelec designed to fold into a compact form, making it easy to transport and store.

Fork steerer

Source: EN 15194:2017: part of a fork that rotates around the steering axis of a pedelec frame head tube. It is normally connected to the fork crown or directly to the fork legs, and is normally the point of connection between the fork and the handlebar stem.

Fracture

Source: EN 15194:2017: unintentional separation into two or more parts.

Maintenance

Source: DIN 31051: maintenance is generally performed at regular intervals and often carried out by trained technical staff. This ensures a maximum service life and low wear and tear for the maintained items. Proper maintenance is often also a pre-requisite for providing a warranty.

Manufacturer

Source: Directive 2006/42/EC on Machinery, 17.05.2006 Any natural or legal person who designs and/or manufactures machinery or partly completed machinery covered by this Directive and is responsible for the conformity of the machinery or the partly completed machinery with this Directive with a view to its being placed on the market, under his own name or trademark or for his own use.

Maximum continuous power

Source: ZEG: the maximum continuous power is the maximum power for the electric motor output shaft during 30 minutes.

Maximum permitted total weight

Source: EN 15194:2017: weight of the fully assembled pedelec plus the rider and baggage, as specified by the manufacturer.

Maximum saddle height

Source: EN 15194:2017: vertical distance from the ground to the point where the top of the seat surface is intersected by the seat-post axis, measured with the saddle in a horizontal position and with the seat-post set to the minimum insertion-depth mark.

Maximum tyre pressure

Source: EN 15194:2017: maximum tyre pressure recommended by the tyre or rim manufacturer for a safe and efficient performance. If the rim and tyre both indicate a maximum tyre pressure, the maximum inflation pressure is the lower of the two pressures indicated.

Minimum insertion depth

Source: EN 15194:2017: mark indicating the minimum insertion depth of handlebar stem into fork steerer (fork stem) or seat post into frame.

Model year

Source: ZEG: the model year refers to the first production year that the series-manufactured pedelec was manufactured in the version in question and is not always identical with the year of manufacture. The year of manufacture may be before the model year in some cases. If no technical modifications are introduced to the series, production may continue of pedelecs from a previous model year.

Mountain bike

Source: ISO 4210 - 2: pedelec designed for use off-road on rough terrain, on public roads, and on public pathways, equipped with a suitably strengthened frame and other components, and, typically, with wide-section tyres with coarse tread patterns and a wide range of transmission gears.

Negative deflection

Negative deflection or sag is fork compression caused by body weight and gear (e.g. a backpack), their sitting position and the frame geometry.

Off-road rough terrain

Source: EN 15194:2017: rough gravel tracks, forest trails and other generally off-road tracks where tree roots and rocks are likely to be encountered.

Operating instructions

Source: ISO/DIS 20607:2018: part of the user information that machine manufacturers provide to machine operators; it contains guidance, instructions and tips related to the use of the machine in all its life cycle phases.

Placing on the market

Source: Directive 2006/42/EC on Machinery, 17.05.2006, Making available for the first time in the Community machinery or partly completed machinery with a view to distribution or use, whether for reward or free of charge.

Pressure point

Source: ZEG, the pressure point on a brake is the point on the brake lever where the brake disc and brake pads respond and the braking process is initiated.

Quick-release device, quick release

Source: EN 15194:2017: lever actuated mechanism that connects, retains or secures a wheel or any other component.

Racing bicycle

Source: ISO 4210-2: pedelec designed for amateur rides at high speed and for use on public roads having a control and steering assembly with multiple grip positions to provide an aerodynamic posture, a multi-speed transmission system and a tyre width not greater than 28 mm with the fully assembled bicycle having a maximum mass of 12 kg.

Rebound

The rebound defines the speed at which the fork rebounds after being loaded.

Rechargeable battery

Source: DIN 40729:1985-05: a rechargeable battery is an energy storage device that can store supplied electrical energy as chemical energy (charging) and release it as electrical energy when required (discharging).

Seat post

Source: EN 15194:2017: component that clamps the saddle (with a bolt or assembly) and connects it to the frame.

Serial number

Source – ZEG: each pedelec has an eight-digit type number which is used to specify the design model year, the type and the version.

Shut-off speed

Source: EN 15194:2017: speed reached, by the pedelec, at the moment the current has dropped to zero or to the no load current value.

Slippage

Source: DIN 75204-1:1992-05: the difference in relation to vehicle speed between the vehicle speed and the speed of its wheels at their circumference.

Spare part

Source: EN 13306:2018-02, 3.5: item intended to replace a corresponding item in order to retain or maintain the original required function of the item.

Suspension fork

Source: EN 15194:2017: front wheel fork incorporating controlled, axial flexibility to reduce the transmission of road-shocks to the rider.

Suspension frame

Source: EN 15194:2017: frame incorporating controlled, vertical flexibility to reduce the transmission of road-shocks to the rider.

Total deflection

Source: Benny Wilbers, Werner Koch: Neue Fahrwerkstechnik im Detail (New chassis technology in detail): The distance that the wheel travels between an unloaded and a loaded position is called total deflection. When at rest, the vehicle's mass is applied to the springs and reduces the total deflection by the *negative deflection* to the positive deflection.

Wear

Source: DIN 31051: reduction in useful life (4.3.4), caused by chemical and/or physical processes.

Weight of ready-to-ride pedelec

Source: ZEG: the indicated weight for a ready-to-ride pedelec refers to the weight of a pedelec at the time of sale. The weight of each additional accessory must be added to this weight.

Wheel

Source: ISO 4210 - 2: unit or combination of hub, rim and spokes or disc, but excluding tyre assembly.

Work environment

Source: ISO 9000:2015: set of conditions under which work is performed.

Year of manufacture

Source: ZEG: the year of manufacture is the year in which the pedelec was manufactured. The production period is always from August to July of the following year.

12.1 Abbreviations

ABS = anti-blocking system

ECP = electronic cell protection

12.2 Simplified terms

The following terms are used for better legibility:

Term	Meaning
Operating instructions	Original operating instructions
Damper	Rear frame damper
Specialist dealer	Bicycle specialist dealers
Motor	Drive motor, sub-system
Belt drive	Toothed belt drive

Table 70: Simplified terms

13 Appendix

I. Translation of the original EC/EU Declaration of Conformity

Manufacturer

HERCULES GMBH
Longericher Strasse 2
50739 Köln, Germany

Authorised representative for documentation*

Janine Otto
c/o ZEG Zweirad-Einkaufs-Genossenschaft eG
Longericher Strasse 2
50739 Köln, Germany

The machine, pedelec types:

21-Y-0005	Futura Fold I-R8 Belt	Folding bicycle
21-Y-0006	Futura Fold I-F8 Belt	Folding bicycle
22-P-0001	Futura HD I-F360	City and trekking bicycle
22-P-0002	Futura HD I-F360	City and trekking bicycle
22-P-0003	Futura HD I-12	City and trekking bicycle
22-P-0004	Futura HD I-12	City and trekking bicycle
22-P-0005	Futura HD I-12	City and trekking bicycle
22-P-0006	E-Imperial I-R5	City and trekking bicycle
22-P-0007	E-Imperial I-R5	City and trekking bicycle
22-P-0008	E-Imperial I-F5	City and trekking bicycle
22-P-0009	E-Imperial I-F5	City and trekking bicycle
22-P-0010	E-Imperial I-10	City and trekking bicycle
22-P-0011	E-Imperial I-10	City and trekking bicycle
22-P-0012	E-Imperial 180 S R5	City and trekking bicycle
22-P-0013	E-Imperial 180 S R5	City and trekking bicycle
22-P-0014	E-Imperial 180 S F5	City and trekking bicycle
22-P-0015	E-Imperial 180 S F5	City and trekking bicycle
22-P-0016	E-Imperial 180 S 10	City and trekking bicycle
22-P-0017	E-Imperial 180 S 10	City and trekking bicycle
22-Q-0001	Robert/a R7 Active Plus	City and trekking bicycle
22-Q-0002	Robert/a R7 Active Plus	City and trekking bicycle
22-Q-0003	Robert/a F7 Active Plus	City and trekking bicycle
22-Q-0004	Robert/a F7 Active Plus	City and trekking bicycle
22-Q-0010	Futura Pro I-F14	City and trekking bicycle
22-Q-0011	Futura Pro I-F14	City and trekking bicycle
22-Q-0015	Futura Pro I-F360+	City and trekking bicycle
22-Q-0016	Futura Pro I-F360+	City and trekking bicycle
22-Q-0023	Futura Comp I-12	City and trekking bicycle
22-Q-0024	Futura Comp I-12	City and trekking bicycle
22-Q-0025	Futura Comp I-12	City and trekking bicycle
22-Q-0026	Futura Comp I-F5	City and trekking bicycle
22-Q-0027	Futura Comp I-F5	City and trekking bicycle
22-Q-0028	Futura Comp I-11	City and trekking bicycle
22-Q-0029	Futura Comp I-11	City and trekking bicycle
22-Q-0030	Futura Comp I-11	City and trekking bicycle
22-Q-0031	Futura Sport I-10	City and trekking bicycle
22-Q-0032	Futura Sport I-10	City and trekking bicycle

* Community member who is authorised to compile the technical documentation

22-Q-0033	Futura Sport I-10	City and trekking bicycle
22-Q-0074	Robert/a Pro I-R5	City and trekking bicycle
22-Q-0075	Robert/a Pro I-R5	City and trekking bicycle
22-Q-0076	Robert/a Pro I-R8	City and trekking bicycle
22-Q-0077	Robert/a Pro I-R8	City and trekking bicycle
22-Q-0078	Robert/a Pro I-F8	City and trekking bicycle
22-Q-0079	Robert/a deLuxe I-R8	City and trekking bicycle
22-Q-0080	Robert/a deLuxe I-R8	City and trekking bicycle
22-Q-0081	Robert/a deLuxe I-F8	City and trekking bicycle
22-Q-0082	Robert/a deLuxe I-F8	City and trekking bicycle
22-Q-0083	Robert/a I-R8 Belt	City and trekking bicycle
22-Q-0084	Robert/a I-R8 Belt	City and trekking bicycle
22-Q-0085	Robert/a I-R8	City and trekking bicycle
22-Q-0086	Robert/a I-R8	City and trekking bicycle
22-Q-0087	Montfoort I-F8	City and trekking bicycle
22-Q-0088	Montfoort F7 Belt	City and trekking bicycle
22-Q-0089	Montfoort F7	City and trekking bicycle
22-Q-0093	Futura Compact R5	City and trekking bicycle
22-Q-0094	Futura Compact F5	City and trekking bicycle
22-Q-0095	Futura Compact F8	City and trekking bicycle
22-Q-0096	Futura Compact 10	City and trekking bicycle
22-Q-0104	Futura Compact R5	City and trekking bicycle
22-Q-0105	Futura Compact F5	City and trekking bicycle
22-Q-0106	Futura Compact R8	City and trekking bicycle
22-Q-0107	Futura Compact R8	City and trekking bicycle
22-Q-0108	Futura Compact F8	City and trekking bicycle
22-Y-0002	Futura Fold I-10	Folding bicycle
22-Y-0003	Futura Fold I-R5 Belt	Folding bicycle
22-Y-0004	Futura Fold I-F5 Belt	Folding bicycle
22-Y-0005	Futura Fold I-R8	Folding bicycle
22-Y-0006	Futura Fold I-F8	Folding bicycle
22-Y-0007	Rob Fold R5	Folding bicycle
22-Y-0008	Rob Fold F5	Folding bicycle
22-Y-0009	Rob Fold R8	Folding bicycle
22-Y-0010	Rob Fold F8	Folding bicycle
22-Y-0014	Rob Fold 10	Folding bicycle

Year of manufacture 2021 and year of manufacture 2022, complies with the following applicable EU provisions:

- Machinery Directive 2006/42/EC
- RoHS Directive 2011/65/EU
- Electromagnetic Compatibility Directive 2014/30/EU.

The safety objectives in the Low Voltage Directive 2014/35/EU have been met in compliance with Appendix I, No. 1.5.1 of the Machinery Directive 2006/42/EC.

The following harmonised standards have been applied:

- ISO 20607:2018 Safety machinery – Instruction handbook – General drafting principles
- EN 15194:2017 Cycles – Electrically power assisted cycles – EPAC Bicycles

The following other technical standards have been applied:

- EN 11243:2016: Cycles – Pannier racks for bicycles – Requirements and test methods



Cologne, 15/06/2021

.....
Georg Honkomp, CEO HERCULES GmbH

II. Declaration of conformity for incomplete machine

eBike Systems



Assembly confirmation

Declaration of the manufacturer for the partly completed machinery

Manufacturer:

Robert Bosch GmbH
Gerhard-Kindler-Straße 3
72770 Reutlingen
GERMANY

Robert Bosch GmbH
Bosch eBike Systems
Postfach 1342
72703 Reutlingen
www.bosch-ebike.de

List of valid Drive Unit numbers:

0275 007 020	0275 007 030	0275 007 040	0275 007 049
0275 007 022	0275 007 032	0275 007 041	0275 007 060
0275 007 023	0275 007 033	0275 007 042	0275 007 063
0275 007 024	0275 007 034	0275 007 043	0275 007 062
0275 007 025	0275 007 035	0275 007 045	0275 007 065
0275 007 027	0275 007 037	0275 007 046	0275 007 071
0275 007 028	0275 007 038	0275 007 047	0275 007 072
0275 007 029	0275 007 039	0275 007 048	0275 007 074
			0275 007 075

List of the applied and observed basic requirements of the "Declaration of Incorporation to appendix I, Machinery Directive 2006/42/EC" (OJ L 157, 09.06.2006, p.24):

No.	Essential Requirements
1.1	GENERAL REMARKS
1.1.2	Principles of safety integration
1.1.3	Materials and products
1.1.5	Design of machinery to facilitate its handling
1.1.6	Ergonomics
1.2	CONTROL SYSTEMS
1.2.1	Safety and reliability of control systems
1.2.3	Starting
1.2.4	Stopping
1.2.4.1	Normal stop
1.2.4.2	Operational stop
1.2.5	Selection of control or operating modes
1.2.6	Failure of the power supply
1.3	PROTECTION AGAINST MECHANICAL HAZARDS
1.3.2	Risk of break-up during operation
1.3.4	Risks due to surfaces, edges or angles
1.3.7	Risks related to moving parts
1.3.9	Risks of uncontrolled movements

No.	Essential Requirements
1.5	RISKS DUE TO OTHER HAZARDS
1.5.1	Electricity supply
1.5.2	Static electricity
1.5.4	Errors of fitting
1.5.5	Extreme temperatures
1.5.6	Fire
1.5.8	Noise
1.5.9	Vibrations
1.5.10	Radiation
1.5.11	External radiation
1.6	MAINTENANCE
1.6.2	Access to operating positions and servicing points
1.6.3	Isolations of energy sources
1.6.4	Operator intervention
1.7	INFORMATION
1.7.1	Information and warnings on the machinery
1.7.1.1	Information and information devices
1.7.2	Warning of residual risks
1.7.3	Marking of machinery
1.7.4	Instructions
1.7.4.1	General principles for the drafting of instructions
1.7.4.2	Contents of the instructions
1.7.4.3	Sales literature

The technical documents are generated as required in appendix VII B.

We undertake to transmit relevant information of the partly completed machinery in response to a reasoned request by the appropriate national authorities.

The technical documents may be reviewed at the following contact:

Robert Bosch GmbH
EB/ECA
Gerhard-Kindler-Straße 3
72770 Reutlingen
GERMANY

The product conforms to the following regulations:

Regulation (EC) No 1907/2006, (OJ L 396, 30.12.2006, p.1)	REACH
Regulation (EC) No 850/2004, (OJ L 158, 30.04.2004, p.7)	POP
Directive 2011/65/EU, (OJ L 174, 01.07.2011, p.88)	RoHS II
Directive 2014/30/EU, (OJ L 96, 29.03.2014, p.79)	EMC

eBike Systems



Page 3 of 3

The machinery is incomplete and must not be put into service until the machinery into which it is to be incorporated has been declared in conformity with the provisions of the directive.

Bosch eBike Systems
Reutlingen, 26.03.2020

A handwritten signature in blue ink, appearing to read 'i.v. h.' followed by a stylized flourish.

Gunter Flinspach (EB/NE)
Vice President

A handwritten signature in blue ink, appearing to read 'Thomas Raica' followed by a long, sweeping flourish.

Thomas Raica (EB/ECA)
Director

14 Keyword index

A

- ABS,
 - Technical data 61
- Air valve, 32
- Articulated shaft,
 - caring for 161
- Axle, 32
- B**
- Back-pedal brake, 38
 - braking, 133
- Basic cleaning 154
- Battery housing, 42, 43
- Battery key, 42
- Battery level indicator (battery), 42, 43
- Battery level indicator (display screen), 46
- Battery level indicator, 58
- Battery lock, 42
- Battery, 41
 - charging, 126
 - checking, 68
 - cleaning, 154
 - disposing of, 215
 - inserting, 124
 - Position, 27
 - removing, 124, 125, 126
 - shipping 65
 - transporting, 65
 - waking, 127
 - Frame battery, 42
 - Integrated battery, 43
 - Pannier rack battery, 42
 - Technical data 60, 61
- Bell,
 - Position 45
- Belt guard 17
 - Position, 27
- Belt pulley, 40
- Belt tension,
 - check 172
- Belt, 40
 - cleaning, 157
 - Position, 27
- Bike headset, see steering headset
- Bowden cable 35
- Brake arm, 36
- Brake booster 36
- Brake cable, 35
- Brake calliper, 37
- Brake disc, 37
 - checking 168
 - cleaning, 157
- Brake lever
 - cleaning, 157
- Brake lever,
 - adjusting the pressure point, 110
 - caring for, 162
- Brake lining, 36, 37
- Brake, 35
 - checking brake cables 171
 - checking the brake disc 168
 - checking the pressure point 167
 - cleaning, 153

- securing during transport 65
- Cable clip, 35
- Cover cap, 35
- hydraulic 35
- Insert pin, 35
- Knob, 35
- mechanical 35
- Rim brake, 36
- Union nut 35
- Break in operation, 66
 - carrying out, 66
 - preparing, 66
- Button,
 - On-off (battery) 42, 43

C

- Carbon seat post
 - caring for, 160
- Cassette,
 - cleaning, 156
- Chain guard 17
 - cleaning, 157
- Chain tension,
 - checking 172
- Chain wheel, 40
- Chain wheels,
 - cleaning, 156
- Chain, 40
 - caring for, 161
 - cleaning, 157
 - maintaining, 164, 173
 - Position, 27
- Charger, 43
 - disposing of, 215
- Charging port cover, 42
- Charging port, 42
- Chassis, 28
- Child seat, 119
- Clamping force,
 - Adjusting the quick releases, 75
 - Checking the quick releases, 75
- Compression adjustment, 31
- Compression damper, 32
- Control panel, 44
 - cleaning, 154
 - Position 45
- Crown, 32
- D**
- Dimensions, 62
- Direction of travel, 40
- Disc brake, 37
- Display 46
- Display battery, 44
- Display,
 - attaching, 129
 - charging the battery, 129
 - removing, 129
 - Technical data 59
- Drive system, 40
 - switching off, 128
 - switching on, 128
- Electric, 41
- mechanical 40
- Dust seal, 32

E

- Electrical cable,
 - checking 171
- Emergency stop system 18

F

- Fork end, 28, 32
- Fork leg 28
- Fork lock,
 - Position 45
- Fork steerer, 28, 32
- Fork, 28
 - caring for, 158
 - cleaning, 155
 - Position, 27
 - Rigid fork 29
 - servicing, 153
 - SR Suntour structure, 32
 - Suspension fork, 29
- Frame battery,
 - inserting, 124
- Frame number,
 - Position, 27
- Frame, 28
 - caring for, 158
 - cleaning, 155
 - Position, 27
 - servicing, 153
- Front derailleur, 40
 - cleaning, 156
- Front light, 41
 - Position, 27
 - Position 45
- Front wheel brake, 36, 37, 38
 - braking, 133
- Front wheel, see Wheel
- Function display, 46

G

- Gear recommendation, 46, 47
- Gear shift twist grip, 46
- Gear shift,
 - switching, 55, 136, 139, 143, 146

H

- Hand brake,
 - Position 45
- Handle,
 - caring for, 159
- Handlebars, 28, 45
 - caring for, 159
 - cleaning, 155
 - Position, 27
- Handles,
 - cleaning, 155
 - Position 45
- Headset, see steering headset
- Hub, 33
 - caring for, 160
 - cleaning, 156

I

- Info button (control panel), 52
- Info button (display), 46
- Initial commissioning, 68

- J**
 Jockey wheel,
 - caring for 161
 Journey information, 48
 - resetting, 132
 - switching, 132
 Avg. speed, 48
 Clock, 48
 Max. speed, 48
 Odometer, 48
 Range, 48
 Trip distance, 48
 Trip Time, 48
- K**
 Kickstand,
 - caring for, 159
 - cleaning, 155
 - Position, 27
- L**
 Leather handle,
 - caring for, 160
 Leather handles,
 - cleaning, 155
 Leather saddle,
 - caring for, 160
 - cleaning, 156
 Level of assistance, 46, 58
 - selecting, 132
 ECO, 46
 eMTB, 46
 OFF, 46
 SPORT, 46
 TOUR, 46
 TURBO, 46
 Lockout,
 Position 45
- M**
 Minimum insertion depth marking, 93
 Minus button, 52
 Motor cover 17
 - Position, 27
 Motor power used, 46
 Motor, 41
 - cleaning, 154
 - Position, 27
 Technical data 60
 Mudguard 17
 - caring for, 159
 - cleaning, 155
 - Position, 27
- N**
 Nameplate,
 - Position, 27
- O**
 On-board computer, 44
 - cleaning, 154
 Position 45
 On-off button (battery), 42
 On-off button (display), 46
 On-screen indicator, 46, 120
 Operating status indicator, 58
- P**
 Pannier rack battery,
 - removing, 124, 125, 126
 Pannier rack,
 - caring for, 159
 - changing, 122
 - cleaning, 155
 - Position, 27
 - using, 122
 Patent seat post, 39
 Pedal, 38, 40
 - caring for, 161
 - cleaning, 153
 - Position, 27
 Pedelec,
 - shipping 65
 - transporting, 65
 Plus button, 52
 Protective cap 46
 Push assist button, 52
 Push assist,
 - using, 131
- Q**
 Q-Loc, 32
- R**
 Range,
 - resetting, 142
 Rear derailleur, 40
 - caring for, 161
 Rear light, 41
 - Position, 27
 Rear wheel brake, 37, 38
 Rebound adjuster, 32
 Rebound damping 31
 RESET button, 46
 Retainer guard, 43
 Riding light button, 46
 Riding light, 46
 Rim brake locking lever 35, 36
 Rim, 33
 - caring for, 160
 Roller brake,
 -braking, 133
- S**
 Saddle, 122
 - changing the saddle tilt, 92
 - changing the seat length, 94
 - cleaning, 155
 - determining the saddle height, 92, 94
 - Position, 27
 - using, 122
 Sag,
 Position of setting wheel 45
 Setting wheel, 32
 Seat post remote control
 Position 45
 Seat post, 39
 - caring for, 160
 - cleaning, 155
 - Position, 27
 Securing hook, 43
 Shift indicator,
 Position 45
 Shifter,
 - caring for, 161
 - cleaning, 156
 Position 45
 Spoke nipples, 34
 - caring for, 160
 Spoke, 33
 Stanchion, 32
 Steering headset 28
 Steering system, 28
 Stem, 28
 - caring for, 159
 - checking 172
 - cleaning, 155
 - Position, 27
 Suspension fork,
 - cleaning, 153
 - servicing, 153
 Suspension seat post, 39
 - caring for, 160
 - cleaning, 153
 Switching elements,
 - cleaning, 156
 System message, 51, 84
 System setting, 49
 changeable, 48, 49, 50, 51, 132
- T**
 Tachometer, 46
 Total journey duration, 49
 Trailer, 120
 Transporting, 62
 Transporting, see Transportation
 Tyre pressure, 33
 Tyre size, 33
 Tyres, 33
 - checking 165
 - cleaning, 156
- U**
 USB port, 44, 46
 - using, 131
- V**
 Valve, 33
 Dunlop valve, 34
 Presta valve, 34
 Schrader valve, 34
 Vehicle,
 Technical data 59
- W**
 Weight,
 - Shipping weight, 62
 - Weight, 62
 Wheel, 33
 - installing, 74, 77
 - Position, 27
 Winter break, see Break in operation